

John Deere Agriculture

**6200, 6200L, 6300, 6300L, 6400, 6400L, 6500,
6500L Tractors Repair**

REPAIR MANUAL

**6200, 6200L, 6300, 6300L, 6400, 6400L,
6500L, 6500**



tm4523, September 2002



Table of contents

FOREWORD

Section 05 - SAFETY

Group 05 - Safety Measures

Section 10 - GENERAL INFORMATION

Group 05 - Specifications

Group 10 - Tune-Up

Group 15 - Predelivery Inspection

Section 20 - ENGINE

Group 00 - Removal and Installation

Section 30 - FUEL, AIR INTAKE, COOLING AND EXHAUST SYSTEMS

Group 05 - Speed Control Linkage

Group 10 - Fuel System

Group 15 - Air Intake System

Group 20 - Cooling System

Group 25 - Cold Weather Starting Aids

Group 30 - Exhaust System

Section 40 - ELECTRICAL SYSTEM

Group 05 - Connectors

Group 10 - Wiring Harness Routing

Group 15 - Charging Circuit

Group 20 - Starting Circuit

Group 25 - Switches, Relays and Solenoids

Group 30 - Monitoring System

Group 40 - Auxiliary Lighting and Electrical Components

Group 45 - Convenience and Accessory Components

Section 50 - SYNCROPLUS SYNCROPLUS IS A TRADEMARK OF DEERE & COMPANY.

TRANSMISSION

Group 00 - Removal and Installation of Transmission Components

Group 01 - Summary of Important Specifications

Group 05 - Transmission Shift Controls

Group 10 - PERMA-CLUTCH 2 PERMA-CLUTCH 2 is a trademark of Deere & Company.,
Transmission Oil Pump and Valves

Group 15 - Gear Transmission

Group 20 - Creeper Transmission

Group 25 - Range Transmission

Section 55 - POWRQUADPOWRQUAD IS A TRADEMARK OF DEERE & COMPANY.

TRANSMISSION

Group 00 - Removal and Installation of PowrQuadPowrQuad is a trademark of Deere &
Company. Module

Group 05 - Transmission Shift Controls

Group 10 - PowrQuadPowrQuad is a trademark of Deere & Company. Module

Section 56 - DRIVE SYSTEMS

Group 00 - Component Removal and Installation

Group 05 - U-Jointed Shafts and Torsion Damper

Group 10A - Front Wheel Drive Clutch Up to Transmission Serial No. 114447

Group 10B - Front Wheel Drive Clutch, Transm. Serial No. 114448 to 161066

Group 10C - Front Wheel Drive Clutch From Transmission Serial No. 161067

Group 15 - Differential

- Group 20 - Hydraulic Pump Drive
- Group 25 - Final Drives
- Group 30 - Rear PTO Options
- Group 35 - Front Implement Drive

Section 60 - STEERING AND BRAKES

- Group 05 - Hydrostatic Steering
- Group 10 - Steering Cylinders
- Group 15 - Brake Valve
- Group 20 - Rear Brakes

Section 70 - HYDRAULIC SYSTEM

- Group 05 - Controls
- Group 10 - Hydraulic Pump and Charge Pump
- Group 15 - Valves
- Group 20 - Rockshaft and Rockshaft Cylinder
- Group 25 - Three-Point Hitch
- Group 30 - Selective Control Valves and Couplers
- Group 35 - Independent Control Valve

Section 80 - MISCELLANEOUS

- Group 00 - Component Removal and Installation
- Group 05 - Main Frame
- Group 10 - Front Axle
- Group 15 - Front and Rear Wheels
- Group 20 - Center Link Bracket
- Group 25 - Swinging Drawbar

Section 90 - OPERATOR STATION

- Group 00 - Tilting, Removing and Installing the Operator's Cab
- Group 05 - Controls
- Group 10 - Air Conditioning System
- Group 15 - Heating System
- Group 20 - Seat
- Group 25 - ROPS and ComfortGard
ComfortGard is a trademark of Deere & Company. Cab
- Group 26 - Low Clearance Cab
- Group 30 - Electronic Hitch Control Components


Section 99 - SPECIAL TOOLS (DEALER-FABRICATED)

- Group 05 - Special Tools (Dealer-Fabricated)

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.