



NEW HOLLAND

**1411
1412**

**REPAIR
MANUAL**

PDF



DOWNLOAD



NEW HOLLAND

SERVICE

1411, 1412 REPAIR MANUAL CONTENTS

- SECTION 00 - GENERAL INFORMATION
- SECTION 31 - IMPLEMENT POWER TAKE-OFF (PTO)
- SECTION 35 - HYDRAULIC SYSTEMS
- SECTION 39 - FRAMES
- SECTION 55 - ELECTRICAL SYSTEM
- SECTION 58 - ATTACHMENTS/HEADERS
- SECTION 88 - ACCESSORIES
- SECTION 90 - SAFETY DECALS

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books.

The sections listed above are the sections utilized for the 1411, 1412 Disc Mower-Conditioners.

SECTION 00 - GENERAL INFORMATION**Chapter 1 - General Information****CONTENTS**

Section	Description	Page
	Foreword	00-2
	Precautionary Statements	00-3
	Safety	00-4
	Serial Number	00-6
	Manual Holder	00-6
	Hardware Torque Values	00-7
	Installation of Adjustable Fittings	00-10
	Standard Torque Data For Hydraulic Tubes and Fittings	00-10
	Pipe Thread Fitting Torque	00-11
	Installation of ORFS (O Ring Flat Faced) Fittings	00-11
	Ecology and the Environment	00-12
	International Symbols	00-13
	Tractor Requirements	00-14
	Tractor Drawbar Dimensions	00-15
	Attaching the Mower-conditioner to the Tractor	00-16
	Jack Assembly	00-16
	Hydraulic Hoses	00-17
	Hydraulic Cylinders	00-18
	Connecting Hydraulic Hoses to the Tractor	00-18
	Bleeding Air from the Lift Cylinders	00-19
	Transporting the Mower-conditioner	00-20
	Slow-moving Vehicle Emblem	00-20
	Transporting On Highways	00-20
	Safety Chain	00-20
	Trailing Lights	00-20
	Towing with a Tractor	00-21
	Towing with a Truck	00-22
	Parking the Machine	00-23
	Storing the Mower-conditioner	00-23
	Specifications	00-24



Thank you very much
for your reading.
Please click here
to get more information.