

SERVICE MANUAL

T4.55 / T4.65 / T4.75 PowerStar™
Tractor



Part number 84419869A
English
October 2011



INTRODUCTORY NOTES

- *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.*
- *The different sections can easily be found by consulting the table of contents on the following pages.*
- *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- *The pages of future updates will be identified by the same print number followed by an additional digit: standard manual first edition 84419869A – 1st update 84419869A1 – 2nd update 84419869A2 – etc. The pages of the update can replace or supplement the pages of the standard manual; the necessary information for the procedure to add or replace the pages is given on the title page of the update. The publication will be completed with an appropriate index. If it is necessary to issue a new updated manual (2nd edition) it will have document number 84419869B, this indicates that the manual is composed of the standard version 84419869A completed with all the updates: 1st update 84419869A1 – 2nd update 84419869A2 – etc.*
- *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries. In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

IMPORTANT WARNINGS

- *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer. In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

No part of the text or illustrations may be copied



PRINTED IN FRANCE

© CNH GLOBAL N.V.

Print no. **84419869A** – 06 – 2011

CONTENTS

	Page	Date		Page	Date
00 - GENERAL GUIDELINES			21 - GEAR TRANSMISSION		
General instructions	1-2	06-11	Chapter 1 - Mechanical transmission		
Safety regulations	3-4-5	06-11	Main Data	1-2	06-11
Tractor refuelling	6	06-11	Torque Specifications	2-3	06-11
10 - ENGINE			Tools	4	06-11
CHAPTER 1			Sections	5-6-7	06-11
Summary	1	06-11	Description and operation	8	06-11
General specifications	2-3	06-11	Troubleshooting	8-9	06-11
Engine removal-installation	4-5-6-7-8-9-10	06-11	Removal-Installation - rear transmission - gearbox casing	10-11-12-13	06-11
Removal-Installation fuel tank	11-12	06-11	Disassembly-Assembly - transmission-gearbox casing	17-18	06-11
Coolant radiator removal-installation	13-14-15	06-11	Disassembly-Assembly - clutch casing	19-20-21	06-11
Accelerator control cable adjustment	16	06-11	Sealing compound application diagram	22	06-11
18 - CLUTCH			Transmission oil cooler removal-installation	23	06-11
Main Data	1	06-11	CHAPTER 3 - Power Shuttle transmission		
Torque Specifications	2	06-11	Main Data	1-2	06-11
Tools	2	06-11	Torque Specifications	3	06-11
Sections	3	06-11	Tools	4	06-11
Troubleshooting	4	06-11	Sections	5-6-7	06-11
Removal-Installation - clutch	5	06-11	Description and operation	8	06-11
Clutch Overhaul	6-7-8-9	06-11	Troubleshooting	8	06-11
Checks and measurements - clutch	10-11	06-11	Disassembly-Assembly - clutch casing	9-10-11	06-11
Adjustments - clutch disengagement levers	11	06-11	Main clutch adjustments	12	06-11
Adjustments - clutch pedal	12	06-11	23 - DRIVE LINES		
Sectional view of PTO clutch servo control	13	06-11	Main Data	1	06-11
Description and operation of PTO servo control	14-15	06-11	Torque Specifications	2	06-11
PTO servo control adjustment	16	06-11	Sections	3-4	06-11
PTO engaged switch adjustment	17	06-11	Description and operation	5	06-11
			Troubleshooting	6	06-11
			Drive shafts and guard. Disassembly - Assembly	7	06-11

	Page	Date
Removal-Installation – drive gear casing	8	06-11

25 - FRONT AXLE MECHANICAL TRANSMISSION

CHAPTER 1 - Front mechanical transmission

Main Data	1-2	06-11
Torque Specifications	3-4	06-11
Tools	5	06-11
Sections	6	06-11
Removal-Installation – front axle	8-9-10	06-11
Front axle. Disassembly – Assembly	11-12-13-14-15-16-17-18	06-11
Replacing steering knuckle pins and bearings	19	06-11
Adjustments – steering knuckle bearings	20-21	06-11
Adjustments – bevel drive	22-23-24-25-26-27-28	06-11
Overhaul – front differential	29	06-11
LIM-SLIP self-locking differential	30-31	06-11
Checking leading wheel alignment	32	06-11
Disassembly-Assembly – front epicyclic final drive ..	33-34	06-11

27 - REAR MECHANICAL TRANSMISSION

Main Data	1-2	06-11
Torque Specifications	3-4	06-11
Tools	5	06-11
Sections	6-7	06-11
Description and operation .	8	06-11
Troubleshooting	8	06-11
Disassembly-Assembly – transmission-gearbox casing	9-10-11-12	06-11
Adjustments – differential lock engagement sleeve position	13	06-11

	Page	Date
Adjustments – bevel drive	14-15-16	06-11
Removal – Installation side gear casing	17-18-19-20	06-11
Disassembly-Assembly – drive wheel shaft	21-22	06-11

31 - POWER TAKE-OFF

CHAPTER 1 - Mechanical power take-off

Main Data	1-2	06-11
Torque Specifications	3-4	06-11
Sections	5-6	06-11
Description and operation .	7-8	06-11
Troubleshooting	8	06-11

33 - BRAKES

Main Data	1-2	06-11
Torque Specifications	2	06-11
Sections	3	06-11
Description and operation .	4	06-11
Troubleshooting	5-6	06-11
Removal-Installation – service brake	7	06-11
Removal-Installation – service brake pump	8-9	06-11
Adjustments – service brake pedals travel	10	06-11
Service brake circuit air bleeding	11-12	06-11

35 - HYDRAULIC SYSTEMS

CHAPTER 1 - Rear mechanical hydraulic lift

Main Data	2	06-11
Torque Specifications	2-3	06-11
Tools	3	06-11
Sections	4	06-11
Troubleshooting	5	06-11
Description and operation .	6-7-8-9-10-11	06-11
Lift internal controls. Disassembly – Assembly	12-13-14-15	06-11

	Page	Date
Draft reading unit Disassembly - Assembly	16-17	06-11
Lift arms shaft. Disassembly - Assembly	18-19	06-11
Removal-Installation - lift control valve	20	06-11
Adjusting the lift	21-22-23	06-11

CHAPTER 2 - Open centre system auxiliary control valves

Main Data	2	06-11
Tools	2	06-11
Torque Specifications	2	06-11
Sections	3-4	06-11
Description and operation .	5-6-7-8	06-11
Auxiliary control valves. Disassembly - Assembly ...	9-10-11	06-11

CHAPTER 3 - Trailer brakes auxiliary control valves

Sections	1	06-11
Description and operation .	1-2-3-4-5-6-7	06-11
Troubleshooting	8-9-10	06-11

CHAPTER 8 - Front Loader

Main Data	1	06-11
Sections	2	06-11
Torque Specifications	3	06-11
Troubleshooting	4-5	06-11
Parking the front loader ...	6	06-11
Front loader arm connection bracket Removal-Installation	7	06-11
Replacement of control struts (mod. MSL)	8	06-11
Replacement of triangular articulation levers (mod. MSL)	9	06-11
Bucket support device removal-installation	10	06-11
Position indicator disassembly-assembly	11	06-11
Bushing replacement	12-13	06-11
Loader cylinder removal-installation	14	06-11

	Page	Date
Bucket control cylinder removal-installation	15	06-11
Replacement of pins	16	06-11

41 - STEERING

CHAPTER 1 - Steering

Main Data	2	06-11
Torque Specifications	2	06-11
Tools	3	06-11
Description and operation .	4-5-6	06-11
View of hydrostatic steering control valve components .	7	06-11
Troubleshooting	8-9	06-11
Replacement - hydrostatic steering wheel	10	06-11
Removal-Installation - hydrostatic steering control valve	11-12	06-11
Disassembly-Assembly - hydrostatic control valve ..	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28	06-11
Hydrostatic steering control valve bench testing	29-30	06-11
Pressure relief valve testing	31	06-11
Steering control cylinder. Removal - Installation	32-33	06-11
Steering control cylinder. Disassembly-Assembly ..	34-35	06-11

50 - CAB HVAC SYSTEM

Safety regulations	2	06-11
Main Data	3	06-11
Tools	4	06-11
Operating principles	5	06-11
Conditioning system components	6-7-8-9-10	06-11
Cab controls	11-12-13	06-11
Testing operation and cooling	14-15	06-11



Thank you very much
for your reading.
Please click here
to get more information.