



580ST

CASE

D.C. MOTOR

IED
RS

PDF



DOWNLOAD



Backhoe Loader
580SR-590SR-695SM-695SR

Service Manual

Cre 9-91452

CONTENTS

SECTION 00 - HEALTH, SAFETY, MAINTENANCE

CHAPTER 1 - General

Description	Page
General Specifications	1

SECTION 10 - ENGINE

CHAPTER 1 - Injection pump

Description	Page
Special tools	1
Removal	2
Installation	7

SECTION 17 - TORQUE CONVERTOR

CHAPTER 1 - With Powershuttle Transmission

Description	Page
General Specifications	1
Overhaul	4

CHAPTER 2 - With Powershift Transmission

Description	Page
General Specifications	1
Overhaul	4

SECTION 21 - TRANSMISSIONS

CHAPTER 1 - 4x4 Compact Shuttle

Description	Page
General Specifications	1
Description and Operation	5
Overhaul	28

CHAPTER 2 - Powershift Introduction

Description	Page
General Specifications	1
Description and Operation	2
Removal	35

CHAPTER 3 - Powershift Operating Lever

Description	Page
General Specifications	1
Fault Finding	14


STEP 7

Remove the starter from the engine and install 380000988 engine turning tool.

STEP 8

BD04A014

Remove the front rocker arm cover and injector line retaining bracket mounting bolt. Using engine turning tool turn engine in direction of running rotation until push rods can be turned freely.

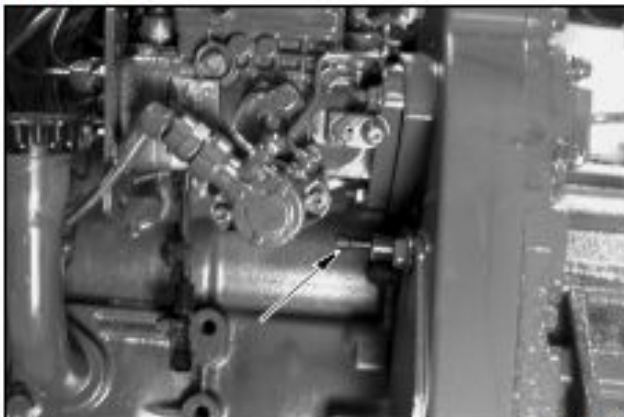STEP 9

BD04A015

Have an assistant continue to turn the engine with turning tool while pressing in on lock pin located just below injector pump.

STEP 10

Once the lock pin has engaged continue to turn with light pressure on turning tool until engine has completely stopped rotating.


STEP 11

BD04A016

Loosen injector pump locking bolt and remove the slotted plate, tighten the locking bolt to 20 to 24 lb-ft (27 to 33 Nm).

STEP 12

BD04A017

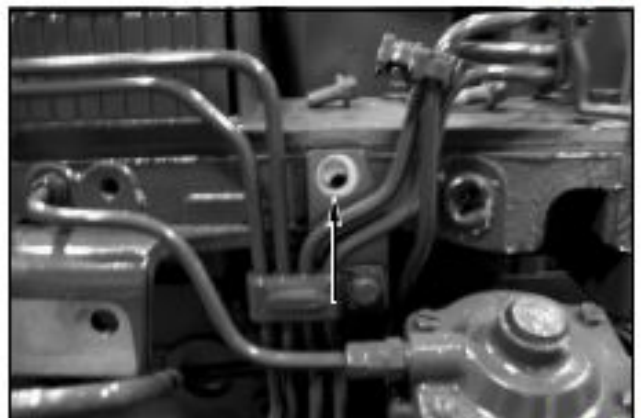

BD04A018

Remove the injector line retaining bracket mounting bolts.



Thank you very much
for your reading.
Please click here
to get more information.