












Case CX160 Crawler Excavators Service Repair Workshop Manual

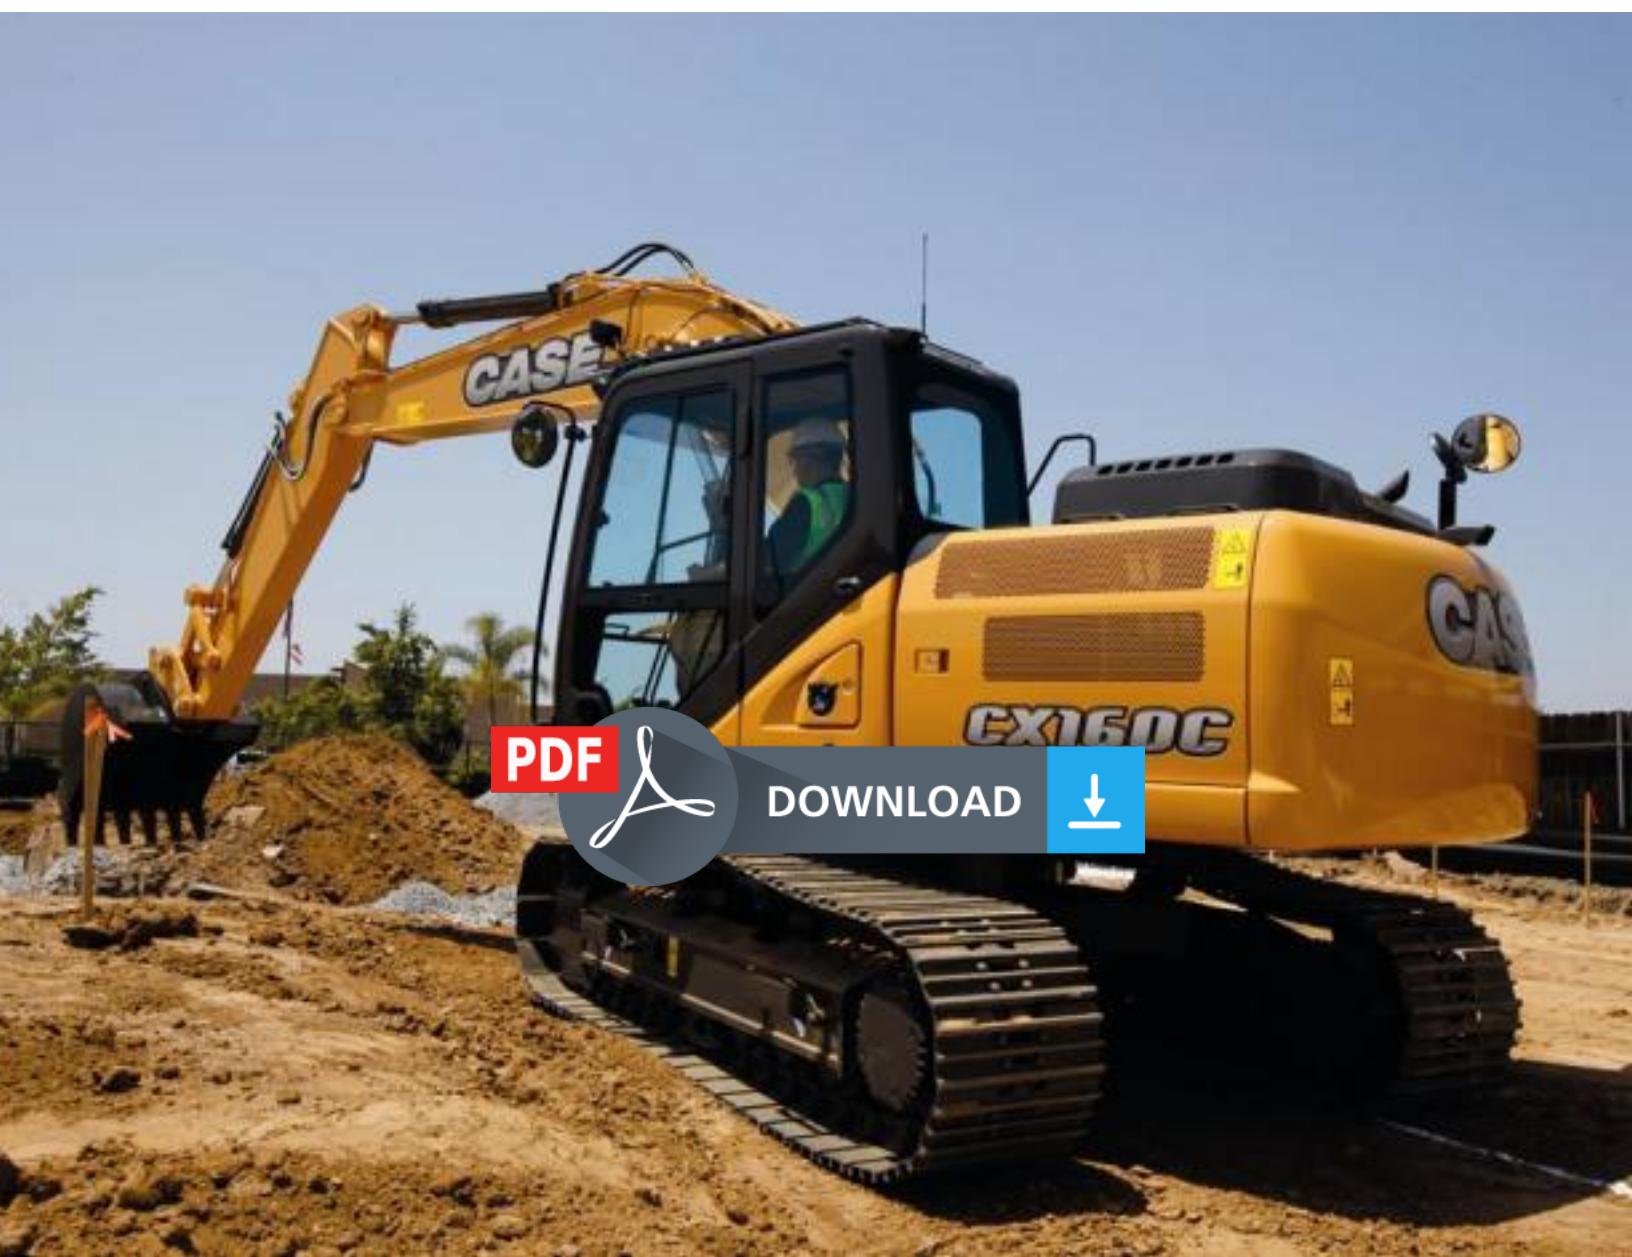


CX160 Crawler Excavators


Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27690GB
General specifications and special torque setting.....	1002	7-27712GB
2 ENGINE		
Removal and installation of the engine	2000	7-28220GB
Radiator and oil-cooler	2001	7-28040GB
Engine specifications	*	
Disassembly and assembly of the engine	*	
3 FUEL SYSTEM		
Fuel tank	3001	7-27970GB
Fuel engine system	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting	4001	7-27721GB
Inspection and maintenance of batteries and connecting a booster battery	4002	7-27921GB
Main and engine electronic control boxes	4003	7-27931GB
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	7-27750GB
Rollers	5003	7-27770GB
Sprocket	5004	7-27781GB
Idler wheel and tension shock absorber	5005	7-27801GB
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	7-27841GB
Drive motor and final drive transmission disassembly and assembly	6002	7-29860GB
Swing reduction gear, removal and installation	6003	7-29900GB
Swing reduction gear, disassembly and assembly	6004	7-28370GB
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	7-27951GB
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	7-27701GB
Hydraulic reservoir removal and installation	8002	7-27990GB
Main and pilot pumps, removal and installation	8003	7-27870GB
Main hydraulic control valve, removal and installation	8004	7-27880GB
Attachment cylinders, removal and installation	8005	7-27791GB
Hydraulic swivel, removal and installation	8006	7-27811GB
Pilot blocs, removal and installation	8007	7-28100GB
Swing motor, removal and installation	8008	7-29890GB
Main hydraulic pump, disassembly and assembly	8010	7-29770FR
Main hydraulic control valve, disassembly and assembly	8011	7-28200FR
Attachment cylinders, disassembly and assembly	8012	7-27900GB
Hand control levers, disassembly and assembly	8013	7-28110GB
Foot control levers, disassembly and assembly	8014	7-28300FR
Six-solenoid valves, disassembly and assembly	8015	7-27910GB
Caution valve, disassembly and assembly	8016	7-27940GB
Safety wave	8017	7-29630GB
Hydraulic swivel, disassembly and assembly	8018	7-28080GB
Swing motor, disassembly and assembly	8019	7-28010GB
Hydraulic functions	8020	7-28480GB

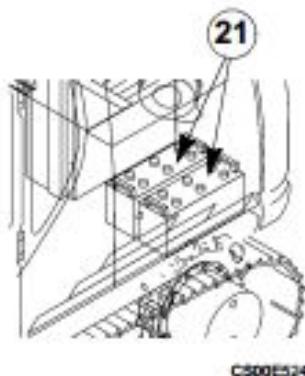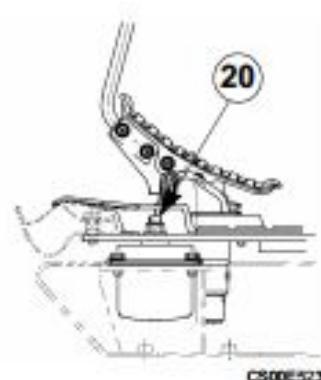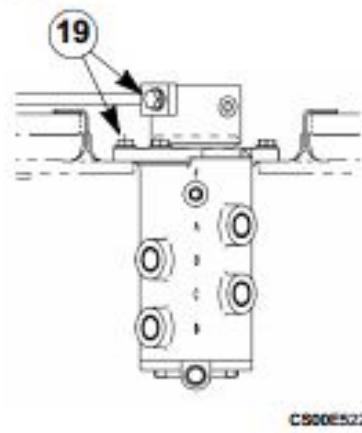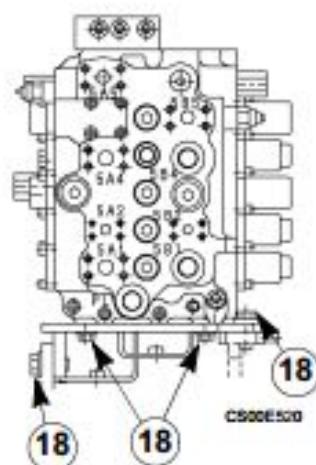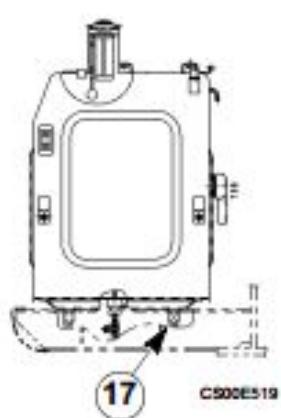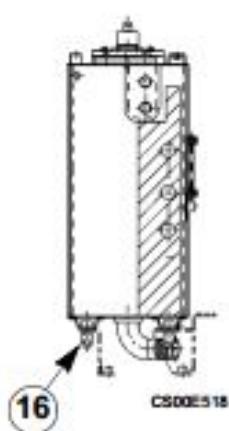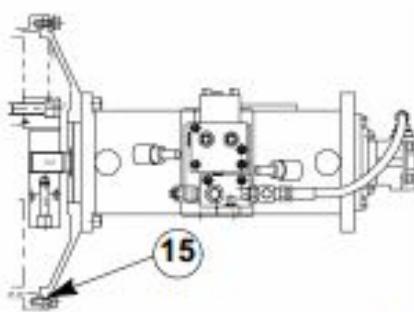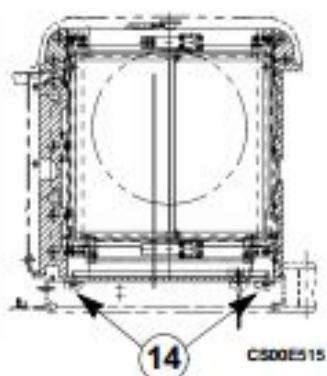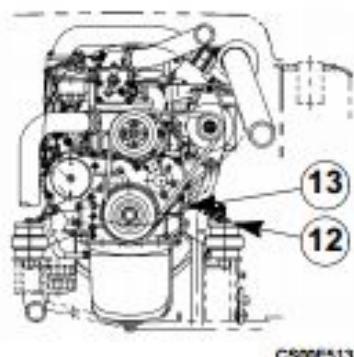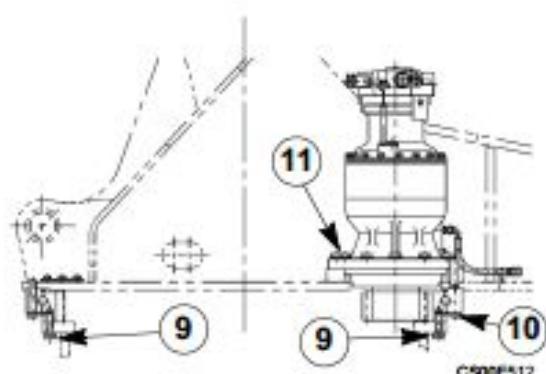


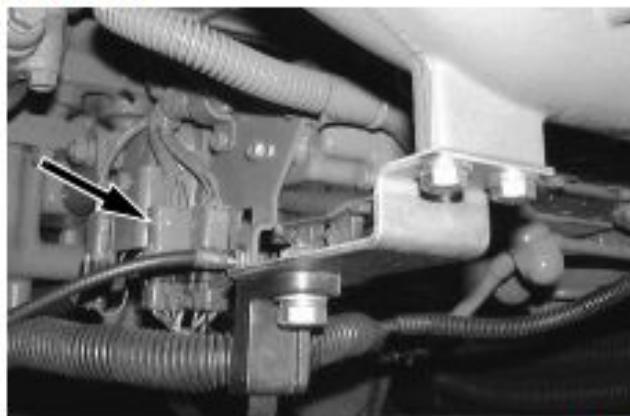STEP 14

CO00032
Label and disconnect the connectors for the electronic regulator and disconnect the fuel flow regulating resistance.

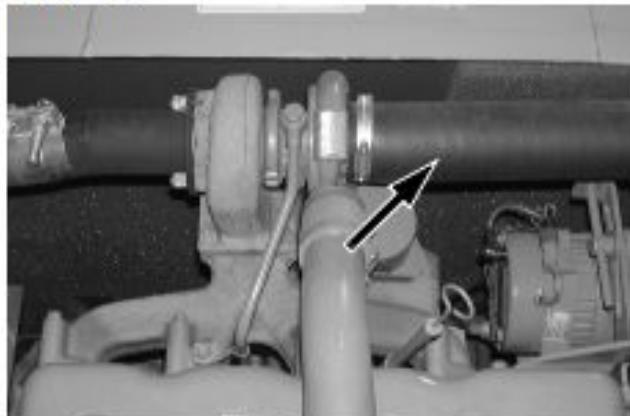STEP 15

CO00033
Remove the hose which connects the turbo-charger to the air filter.

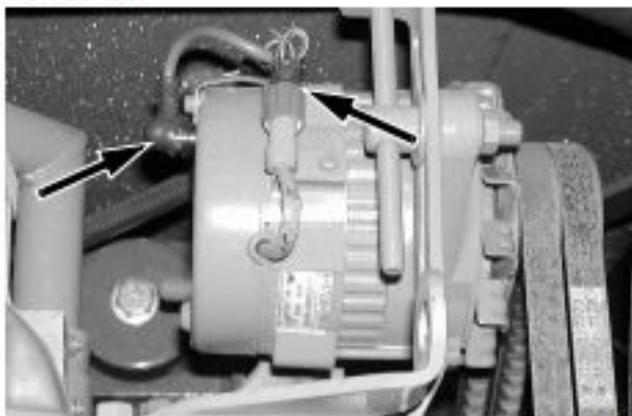
STEP 16

CO00035
Label and disconnect the alternator electrical connections.

NOTE: If the machine is equipped with air conditioning, remove the compressor retaining hardware and move the compressor away from the engine.

STEP 17

Remove all the clips, etc. which attach the electrical harnesses to the engine and move them out of the way.

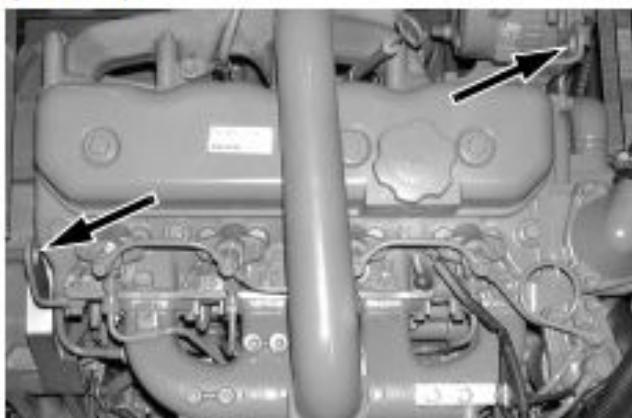STEP 18

CO00036
Install a suitable lifting device on the engine lifting rings (for the weight of the engine, see Section 1002).



Thank you very much
for your reading.
Please click here
to get more information.