
TC29D, TC33D REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCHES	7
SECTION 21 - GEAR TRANSMISSION	8
SECTION 25 - FWD AXLE	9
SECTION 27 - DIFFERENTIAL, REAR AXLE	11
SECTION 29 - HYDROSTATIC TRANSMISSION	11
SECTION 31 - POWER TAKE-OFF SYSTEMS	14
SECTION 33 - BRAKES	14
SECTION 35 - HYDRAULIC SYSTEM	15
SECTION 41 - STEERING SYSTEMS	16
SECTION 44 - WHEELS AND TIRES	17
SECTION 55 - ELECTRICAL SYSTEM	18
SECTION 90 - PLATFORM	20

The following pages are the collation of the contents pages from each section and chapter of the TC29D and TC33D Repair manual. Complete Repair part # 87036756

The sections used throughout the repair manual may not be used for each product. Each section may be found in one or several books. Each book will be labeled with the sections are in the overall Repair manual and which sections are in each book.



The sections listed above are the sections utilized for the TC29D and TC33D Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87036757

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Personal Safety	2
	Machine Safety	2
	Safety	3
	Precautionary Statements	3
	Servicing the Tractor	3
	Operating the Tractor	4
	Driving the Tractor	4
	Operating the PTO	5
	Diesel Fuel	5
	Safety Frame (ROPS)	5
	Safety Decals	6
	Instruction Decals	7
	Ecology and the Environment	11
	Specifications	13
00 400	Lubrication and Maintenance	24
	Lubrication	24
	Recommended Lubricants and Coolants	24
	Liquid Ballast (Optional)	25
	Tire Pressure	25

SECTION 10 - ENGINE

BOOK 1 - 87036757

Chapter 1 - Engine Systems

CONTENTS

Section	Description	Page
	General Information	3
	Description and Operation	3
	Cylinder Head and Valve Train Components	4
	Cylinder Block Assembly	4
	Engine Overhaul	6
	Engine Disassembly	6
	Fuel Injector and Glow Plug Removal	7
	Oil Pressure Switch	8
	Temperature Sending Switch and Alternator Removal	8
	Fan, Water Pump, and External Oil Tube Removal	8
	Air Inlet Manifold Removal	9
	Valve Cover Removal	9
	Rocker Arm Shaft and Support Bracket Removal	9
10 101	Cylinder Head Removal	10
	Valve Tappet Removal	10
	Fuel Shutoff Solenoid Removal	10
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	11
	Disassembly, Inspection, Fits, Clearances, and Assembly of Component Assemblies	16
10 101	Cylinder Head Disassembly	16
	Cylinder Head Inspection and Repair	16
	Valve Seats	17
	Valves	18
	Valve Guides	19
	Valve Springs	20
	Rocker Arms	20
	Push Rods	21
	Cylinder Head Assembly	22
	Cylinder Block	22
10 105	Pistons, Piston Rings, and Connecting Rods Disassembly and Inspection	23
	Pistons, Rings, and Connecting Rod Assembly	28
10 103	Crankshaft	29
	Crankshaft Bearing (Bushing) Inspection	30
	Crankshaft Bearing (Bushing) Replacement	31
	Crankshaft Main Bearing Assembly	31
	Port Block Removal	32
	Port Block Installation	32
10 106	Timing Gear	32
	Camshaft Disassembly	33
	Camshaft Inspection	33
	Camshaft Assembly	33
10 103	Flywheel	34
10 102	Timing Gear Housing	34

SECTION 10 - ENGINE

BOOK 1 - 87036757

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Engine Reassembly	35
10 103	Crankshaft and Bearing Holder Reassembly	35
	Rear Oil Seal and Backplate Assembly	35
	Flywheel	36
10 105	Pistons and Connecting Rods	36
	Oil Suction Pipe and Suction Strainer	37
	Oil Sump	37
10 106	Timing Gear Cover, Timing Gears, and Camshaft Assembly	38
10 106	Idler Gear, Oil Pump, and Injection Timing	38
	Timing Gear Cover	38
	Crankshaft Pulley	39
	Fuel Injection Pump Assembly	39
	Power Steering Pump	39
10 101	Head Gasket Selection	40
	Head Gasket Selection Chart	40
	Cylinder Head Assembly	40
10 106	Valve Clearance Adjustment	41
	Valve Cover	42
	Water Pump and Cooling Fan Assembly	42
	Air Intake Manifold Assembly	42
	External Oil Tube	43
	Glow Plug and Connector	43
	Fuel Injector	43
10 218	Fuel Piping	44
	Alternator and Temperature Sender Switch	44
	Exhaust Manifold	44
	Engine Lubrication System	45
10 304	Description	45
10 206	Oil Filter	48
10 304	Oil Pump	48
	Engine Oil Pressure Check	50
	Oil Pressure Relief Valve	51
	Oil Consumption	51
	Cooling System	52
10 400	Description and Operation	52
	Maintenance	54
	Coolant	54
	Radiator Cap	54
10 402	Thermostat	55
10 402	Water Pump	55
10 414	Cooling Fan	55

SECTION 10 - ENGINE

BOOK 1 - 87036757

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Cooling System Overhaul	56
10 406	Radiator	56
10 402	Water Pump	60
10 402	Thermostat	62
	Troubleshooting	64
	Specifications	68
	Metric Bolt Torque Specifications	76
	Special Tools	77



Thank you very much
for your reading.
Please click here
to get more information.