

318D, 319D, 320D and 323D Skid Steer Loader (EH Controls) Repair



REPAIR TECHNICAL MANUAL

Electrohydraulic Controls - EH models 318D, 319D, 320D, 323D

TM11407 01 DEC 15 (ENGLISH)

For complete service information also see:

319D and 323D Skid Steer Loader(EH Controls) Diagnostic	TM11422
318D and 320D Skid Steer Loader (EH Controls) Diagnostic	TM11406
Super Caddy Oil Cleanup Procedure	CTM310
120 Series Hydraulic Cylinders	CTM120519
120 Series Hydraulic Cylinders	CTM114319
PowerTech E 2.4L & 3.0L Diesel Engine COOLANT HEATER SERVICE MANUAL	



Table of contents

FOREWORD

Section 00 - GENERAL INFORMATION

Group 0001 - Safety

Group 0003 - Torque Values

Section 01 - WHEELS OR TRACKS

Group 0110 - Powered Wheels and Fastenings

Group 0130 - Track System

Section 02 - AXLES AND SUSPENSION SYSTEMS

Group 0201 - Drive Axle Housing and Support

Group 0250 - Axle Shaft, Bearings, and Reduction Gears

Section 03 - TRANSMISSION

Group 0315 - Controls Linkage

Group 0325 - Flywheel Coupler

Group 0360 - Hydraulic System

Section 04 - ENGINE

Group 0400 - Removal and Installation

Section 05 - ENGINE AUXILIARY SYSTEM

Group 0510 - Cooling Systems

Group 0520 - Intake System

Group 0530 - External Exhaust Systems

Group 0560 - External Fuel Supply Systems

Section 17 - FRAME OR SUPPORTING STRUCTURE

Group 1740 - Frame Installation

Section 18 - OPERATOR'S STATION

Group 1800 - Removal and Installation

Group 1810 - Operator Enclosure

Group 1821 - Seat and Seat Belt

Group 1830 - Heating and Air Conditioning

Section 19 - SHEET METAL AND STYLING

Group 1910 - Hood or Engine Enclosure

Section 20 - SAFETY AND CONVENIENCE

Group 2001 - Radio

Section 21 - MAIN HYDRAULIC SYSTEM

Group 2160 - Hydraulic System

Section 31 - LOADER

Group 3104 - Attachment Coupler

Group 3140 - Frame

Group 3160 - Hydraulic System

Section 99 - DEALER FABRICATED TOOLS

Group 9900 - Dealer Fabricated Tools

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

**CAUTION:**

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Section 00 - GENERAL INFORMATION

Table of contents

Group 0001 - Safety	1
Recognize Safety Information	1
Follow Safety Instructions	1
Operate Only If Qualified	2
Wear Protective Clothing	3
Avoid Unauthorized Machine Modifications	3
Inspect Machine	3
Stay Clear of Moving Parts	4
Avoid High-Pressure Fluids	4
Avoid High-Pressure Oils	5
Work In Ventilated Area	5
Prevent Fires	6
Prevent Battery Explosions	7
Handle Chemical Products Safely	7
Decommissioning: Proper Recycling and Disposal of Fluids and Components	7
Prepare for Emergencies	8
Clean Debris from Machine	9
Use Steps and Handholds Correctly	9
Start Only From Operator’s Seat	9
Use and Maintain Seat Belt	10
Prevent Unintended Machine Movement	10
Avoid Work Site Hazards	10
Keep Riders Off Machine	11
Avoid Backover Accidents	12
Avoid Machine Tip Over	12
Operating On Slopes	13
Operating Or Traveling On Public Roads	13
Inspect and Maintain ROPS	14
Add and Operate Attachments Safely	14
Park and Prepare for Service Safely	14
Service Cooling System Safely	15
Remove Paint Before Welding or Heating	15
Make Welding Repairs Safely	16
Drive Metal Pins Safely	16
Service Tires Safely	18
Handle Cab Door Safely	18
Group 0003 - Torque Values	20
Unified Inch Bolt and Screw Torque Values	20
Metric Bolt and Screw Torque Values	21
Additional Metric Cap Screw Torque Values	22
Check Oil Lines And Fittings	23
Service Recommendations for O-Ring Boss Fittings	24
Service Recommendations for 37° Flare and 30° Cone Seat Connectors	26
Service Recommendations For Flared Connections—Straight or Tapered Threads	27
Inch Series Four Bolt Flange Fitting For High Pressure Service Recommendations	29
Service Recommendations For Inch Series Four Bolt Flange Fittings	30
O-Ring Face Seal Fittings With SAE Inch Hex Nut And Stud End For High Pressure Service Recommendations	31
O-Ring Face Seal Fittings With Metric Hex Nut And Stud End For Standard Pressure Service Recommendations	33



Thank you very much
for your reading.
Please click here
to get more information.