



File has expired.

Use updated files from Bobcat  
Publications.

Dealer Copy -- Not for Resale



EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)



File has expired.

Use updated files from Bobcat  
Publications.

# MAINTENANCE SAFETY



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807

afety is

RRECT

B-15591

ance are

VRONG

B-15599

r with lift  
is are held  
m support  
aged.  
nt or add  
roved by

VRONG

B-6589

produce  
e gases.  
ames and  
ay from

id which  
n contact.  
ng. If acid  
well with  
flush well

and get immediate medical attention.

the skin or eyes.

Never fill fuel tank with engine running, while smoking or when near open flame.

type of welding.

Keep rear door closed except for service. Close and latch door before operating the loader.



Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW08-0409

File has expired.

Use updated files from Bobcat  
Publications.

## CONTENTS

SAFETY & MAINTENANCE .....	10-01
HYDRAULIC SYSTEM .....	20-01
HYI	-01
DR	-01
MA	-01
ELI	-01
ENI	-01
HEI	-01
SPI	-01
ALF	-01

**File has expired.**

**Use updated files from Bobcat  
Publications.**

Dealer Copy -- Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.