



MASSEY FERGUSON

MF 4600

Series Tractors

Models: 4608 / 4609 / 4610



SERVICE MANUAL

FROM MASSEY FERGUSON

4608 / 4609 / 4610 Service Manual

1 Introduction	1-1
1.1 Introduction	1-3
1.1.1 The service manual	1-3
1.1.2 Replacement parts	1-3
1.1.3 Units of measurement	1-3
1.1.4 Machine identification	1-3
1.1.5 Serial number plate	1-4
1.1.6 Engine identification	1-4
1.1.7 Chassis number	1-5
1.2 Specifications	1-6
1.2.1 Engine specifications	1-6
1.2.2 Electrical specifications	1-6
1.2.3 Transmission specifications	1-7
1.2.4 Power takeoff specifications	1-7
1.2.5 Front axle specifications	1-7
1.2.6 Rear axle specifications	1-8
1.2.7 Brake specifications	1-8
1.2.8 Hydraulic specifications	1-8
1.2.9 Fuel specifications	1-8
1.2.10 Operating slope angle	1-9
1.2.11 Lubrication specifications	1-9
1.2.12 Capacities	1-10
1.2.13 Maximum load capacity	1-10
1.2.14 Wheel bolt torque chart	1-11
1.2.15 Tire inflation pressures	1-12
1.3 General dimensions	1-14
1.3.1 Platform tractor dimensions	1-14
1.3.2 Cab tractor dimensions	1-15
1.4 Lubrication / fill points	1-17
1.4.1 Lubrication and maintenance chart	1-17
1.4.2 Initial lubrication and maintenance chart	1-18
1.4.3 Lubrication fill and drain locations	1-19
1.5 General precautions for disassembly and installation	1-20
1.5.1 Precautions for disassembling and installing	1-20
1.5.2 Precautions when installing according to standards parts	1-20
1.6 Tightening torque chart	1-23
1.7 Conversion table	1-25
2 Safety	2-1
2.1 Introduction	2-3
2.1.1 Safety alert symbol	2-3
2.1.2 Informational messages	2-3
2.1.3 Safety messages	2-3
2.1.4 Safety signs	2-4
2.2 Operation	2-11
2.2.1 Prepare for operation	2-11
2.2.2 Roll over protective structure	2-11
2.2.3 General information	2-11
2.2.4 Personal protective equipment	2-15
2.2.5 Seat instruction	2-15
2.2.6 Shield and guards	2-15



Thank you very much
for your reading.
Please click here
to get more information.