

CASE 580E SUPER LOADER BACKHOE SERVICE MANUAL



580 SUPER E LOADER BACKHOE

TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, and Service Manual Introduction and Torque Specifications	1001	8-41700
Maintenance and Lubrication	1002	8-41700
General Engine Specifications	1010	8-24621
Detailed Engine Specifications	1024	8-24161
2 ENGINES		
Engine Stall Tests	2000	8-41700
Engine Removal and Installation	2001	8-41701
Engine Accessories (Air Cleaner, Muffler, Exhaust Pipe, Radiator, Cold Start System)	2002	8-41701
Cylinder Head and Valve Train	2415	8-24171
Cylinder Block, Pistons, Rods, Camshaft, Main Bearings, Oil Seals, and Flywheel	2425	8-24181
Lubrication System	2445	8-24191
Cooling System	2455	8-24201
Turbocharger	2465	8-25550
Turbocharger Failure Analysis	2565	9-78235
3 FUEL SYSTEM		
Engine Controls, Fuel Lines, and Fuel Tank	3001	8-41700
Fuel System and Filters	3410	8-24211
Fuel Injection Pump and Drive Gear	3412	8-27080
Fuel Injectors	3413	8-24231
4 ELECTRICAL		
Electrical Specifications and Troubleshooting	4002	8-41701
Wiring Diagrams	4003	8-41701
Battery	4005	8-41700
Starter and Starter Solenoid	4006	8-42910
Alternator	4007	8-41700
Instrument Cluster and Gauges	4009	8-41700
5 STEERING		
Steering System Troubleshooting	5002	8-41700
Steering Control Valve and Steering Column	5007	8-41702
Steering Cylinders	5010	8-41700
Front Axle - Two-Wheel Drive Machines	5021	8-41701
Front Axle - Four-Wheel Drive Machines	5022	8-41701
Steering Relief Valve	See Section 8008	
6 POWER TRAIN		
Power Shuttle Maintenance, Operation, and Troubleshooting	6202	8-41701
Power Shuttle and Torque Converter	6210	8-41700
Power Shuttle Controls	6211	9-69271
Transaxle Removal and Installation	6212	8-41700
Transaxle and Differential Lock	6215	8-22911
Transfer Gear Box	6216	8-23451
Driveshaft	6222	8-41700
Wheels and Tires	6229	8-41700

DIVISION/SECTION	SECTION NO.	FORM NO.
7 BRAKES		
Brake Pedals and Linkage, Master Cylinder, and Parking Brake	7106	8-41700
Self-Adjusting Differential Brakes	7123	8-22921
8 HYDRAULICS		
Hydraulic Specifications, Maintenance, Troubleshooting, Flowmeter Tests, and Pressure Checks	8002	8-41702
Cleaning the Hydraulic System	8003	9-69271
Hydraulic Pump	8005	9-69270
Loader Control Valve Made by J.I. Case	8006	8-41700
Loader Control Valve Made by Parker Hannifin	8007	8-69272
Steering Relief Valve and Quick Disconnect Couplings	8008	8-41700
Three Point Hitch Control Valves	8009	8-41700
Cylinders	8090	8-41700
Backhoe Control Valve	8107	8-41700
Stabilizer Control Valve	8109	9-69271
9 MOUNTED EQUIPMENT/CHASSIS		
Air Conditioning Troubleshooting	9002	9-69270
Air Conditioning System	9003	9-69270
Loader	9010	8-41700
Three Point Hitch	9033	8-41700
ROPS Cab and ROPS Canopy	9061	8-41700
Seats, Seat Belts, and Seat Supports	9064	8-41700
Backhoe	9100	8-41701
Decals and Painting	9201	8-41700



Thank you very much
for your reading.
Please click here
to get more information.