 


310J Backhoe Loader Repair



REPAIR TECHNICAL MANUAL

Backhoe Loader models 310J (S.N. from 159760)

TM10847 22 DEC 15 (ENGLISH)

For complete service information also see:

JLink (MTG) Technical Manual	TM114519
310J Backhoe Loader Diagnostic	TM10846
Alternators and Starting Motors	CTM77
PowerTech E 4.5 and 6.8L Diesel Engines Level 16 Electronic Fuel System With Denso HPCR	CTM502
PowerTech 4.5L & 6.8L Diesel Engines Level 12 Electronic Fuel System With Stanadyne DE10 Pump	CTM331
Super Caddy Oil Cleanup Procedure	CTM103519
120 Series Hydraulic Cylinders	CTM109319
125 Series Hydraulic Cylinders	CTM109319
PowerTech 4.5L & 6.8L Diesel Engines Tier 1/Stage I, Tier 2/Stage II, Tier 3/Stage IIIA, Tier 3/Stage IIA Tier 3/Stage III, (Base Engine)	CTM104
100 Series Hydraulic Cylinders	CTM103519
JDLINK/ZXLINK Machine Monitoring System	CTM10006



DOWNLOAD



Table of contents

FOREWORD

TECHNICAL INFORMATION FEEDBACK FORM

Section 00 - GENERAL INFORMATION

Group 0001 - Safety Information

Group 0003 - Torque Values

Section 01 - WHEELS

Group 0110 - Powered or Non-Powered Wheels and Fastenings

Section 02 - AXLES AND SUSPENSION SYSTEMS

Group 0225 - Input Drive Shafts and U-Joints

Group 0230 - Non-Powered Wheel Axles

Group 0240 - Powered Wheel Axle (MFWD)

Group 0250 - Axle Shaft, Bearings, and Reduction Gears

Section 03 - TRANSMISSION

Group 0300 - Removal and Installation

Group 0315 - Controls Linkage

Group 0350 - Gears, Shafts, and Power Shift Clutches

Group 0360 - Hydraulic System

Section 04 - ENGINE

Group 0400 - Removal and Installation

Section 05 - ENGINE AUXILIARY SYSTEMS

Group 0505 - Cold Weather Starting Aid

Group 0510 - Cooling System

Group 0515 - Speed Controls

Group 0520 - Intake System

Group 0530 - Exhaust System

Group 0560 - External Fuel Supply System

Section 06 - TORQUE CONVERTER

Group 0651 - Turbine, Gears, and Shaft

Section 09 - STEERING SYSTEM

Group 0960 - Hydraulic System

Section 10 - SERVICE BRAKES

Group 1011 - Active Elements

Group 1060 - Hydraulic System

Section 11 - PARK BRAKE

Group 1111 - Active Elements

Section 17 - FRAMES CHASSIS OR SUPPORTING STRUCTURE

Group 1740 - Frame Installation

Group 1749 - Chassis Weights

Section 18 - OPERATOR'S STATION

Group 1800 - Removal and Installation

Group 1810 - Operator Enclosure

Group 1821 - Seat and Seat Belt

Group 1830 - Heating and Air Conditioning

Section 19 - SHEET METAL AND STYLING

Group 1910 - Hood and Engine Enclosure

Group 1913 - Miscellaneous Shields

Group 1921 - Grille and Grille Housing

Group 1927 - Fenders

Section 20 - SAFETY CONVENIENCE AND MISCELLANEOUS

Group 2001 - Radio

Group 2004 - Horn and Warning Devices

Section 21 - MAIN HYDRAULIC SYSTEM

Group 2160 - Hydraulic System

Section 31 - LOADER

Group 3100 - Loader

Group 3102 - Bucket

Group 3104 - Attachment Coupler

Group 3115 - Control Linkages

Group 3160 - Hydraulic System

Section 33 - BACKHOE

Group 3302 - Bucket

Group 3315 - Control Linkage

Group 3340 - Frames

Group 3360 - Hydraulic System

Section 38 - GRAPPLE

Group 3800 - Backhoe Hydraulic Thumb

Group 3860 - Backhoe Hydraulic Thumb Cylinder

Section 99 - DEALER FABRICATED TOOLS

Group 9900 - Dealer Fabricated Tools



Thank you very much
for your reading.
Please click here
to get more information.