John Deere 1050K (SN. F318802-) Crawler Dozer Service Repair Technical Manual (TM14348X19)

1050K Crawler Dozer Repair

(PIN: 1T01050K_ _F318802—)



JOHN HARE



REPAIR TECHNICAL MANUAL

1050K Crawler Dozer (PIN: 1T01050K___F318802—)

TM14348X19 01DEC18 (ENGLISH)

For complette service information also see:



Worldwide Construction and Foresty Division

Covers: 1050K,1T01050K_,_F318802�����)

Type: Service Manual **Language:** English

Pages: 448 **Format:** PDF

Features: Bookmarked, searchable, printable **Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of

the John Deere 1050K (SN. F318802-) Crawler Dozer Service Repair Technical Manual (TM14348X19)

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:


- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- · Engine Tests and Adjustments
- · Engine Repair
- · Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- · Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- · Ignition and Charging
- Steering
- Brakes
- · Wheels
- Operator's Platform
- Body Panels
- · Disassembly and Assembly
- · Diagnostics, Tests and Adjustments
- Troubleshooting
- · and much more...

Please note this manual is in downloadable PDF format only. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.	



Prevent possible injury from crushing. Heavy component, use appropriate lifting device.

Measurement Specification 36.5 kg 80 lb. Front Track Guide Weight

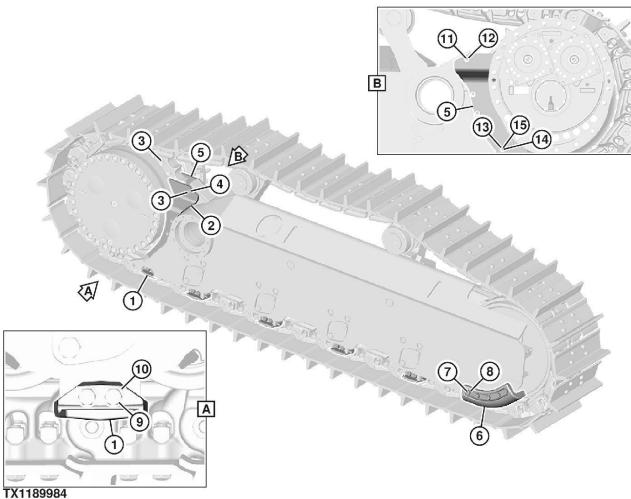

TX1189984-UN: Track Guides (right track shown)

LEGEND:

1-Bogie Guide (20 used) 2-Outer Sprocket Guard (2 used)

3-Cap Screw (6 used)

4-Washer (6 used) 5-Inner Sprocket Guard (2 used)

6-Front Track Guide (4 used)

7-Cap Screw (20 used) 8-Washer (20 used)

Using appropriate lifting device, remove front track guides (6).

4. Remove bogie guides (1).

5. Remove outer sprocket guards (2).

6. Remove inner sprocket guards (5).

7. Repair or replace as necessary.

9-Cap Screw (40 used) 10-Washer (40 used)

11-Cap Screw (6 used) 12-Washer (6 used) 13-Washer (2 used)

14-Cap Screw (2 used) 15-Nut (2 used)

01-0130-3 TM14348X19 (01.12.2018) 1050K Crawler Dozer



Thank you very much for your reading.

Please click here to get more information.