

John Deere C120 Combines (Asian Edition) Technical Service Manual (TM703019)

**C120 Combines
(Asian Edition)**



JOHN HARE



COLLECTION

**TECHNICAL MANUAL
C120 Combines (Asian Edition)**

TM703019 01DEC18 (ENGLISH)



John Deere

Covers: C120

Type: Service Manual

Language: English

Pages: 432

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere C120 Combines (Asian Edition) Technical Service Manual (TM703019)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.


Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Remove and Install Tailings Elevator

Remove

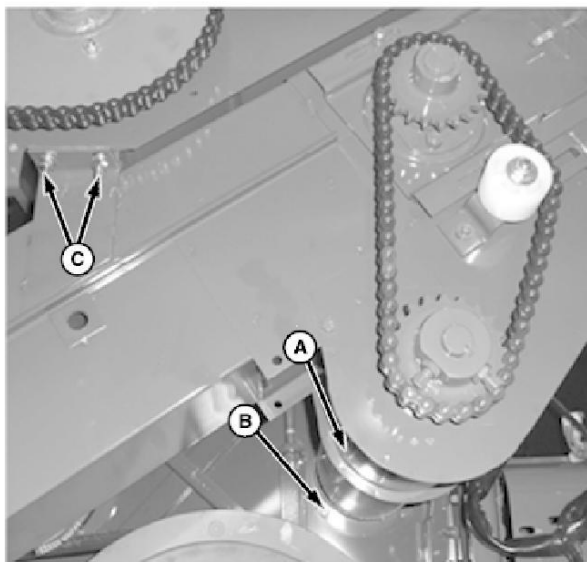

1. YC0679-UN: Tailings Elevator




YC0680-UN: Attaching Lifting Strap

LEGEND:

- A-Auger Cover**
- B-Cap Screw**
- C-Cap Screws (2 used)**
- D-Lifting Strap**

Remove cap screws (B) from auger cover (A).

2. Remove cap screws (C).
3. Attach lifting strap (D) to elevator and raise lifting device to load.

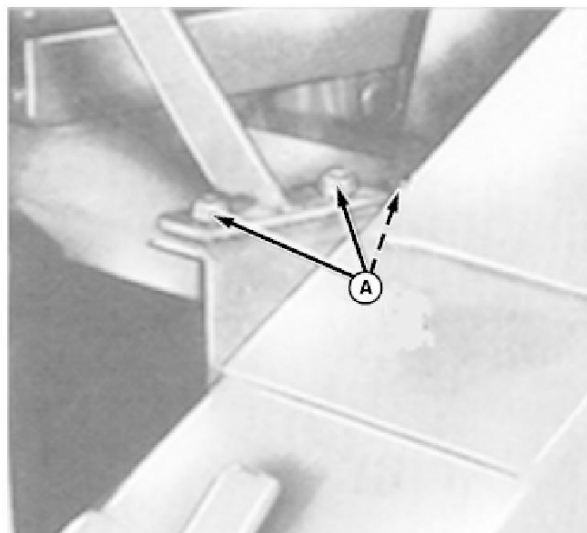


4. YC0681-UN: Elevator Mounting Bracket

LEGEND:

- A-Cap Screws**

Remove cap screws (A).

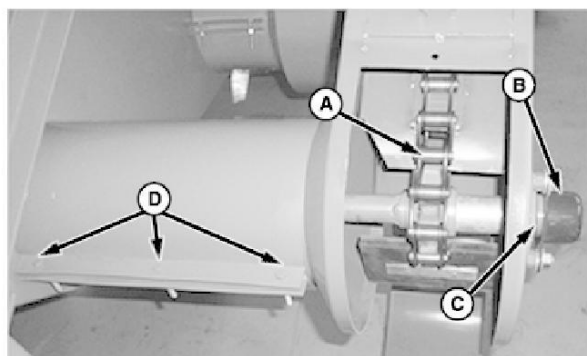

5. YC0682-UN: Tailings Chain

LEGEND:

- A-Chain**
- B-Cover**
- C-Flangette (2 used)**
- D-Cap Screws (3 used)**

Loosen chain (A) and remove master link.

6. Remove cover (B).
7. Loosen set screw and remove lock collar.
8. Remove cap screws from flangettes (C).
9. Remove bearing and flangettes together.
10. Remove screws (D) from auger cover.

11.  **CAUTION:**
Elevator is heavy and awkward to handle. Always use appropriate lifting device when handling.

Lift upper end of elevator and move bottom end outward until elevator housing clears the auger and lower to ground.

Install

Install in reverse order of removal.



Thank you very much
for your reading.
Please click here
to get more information.