

John Deere C240 (4LZ-13) Full-Feeding Combine Diagnostic and Repair Technical Manual (TM136619)

C240 Full-Feeding Combine Diagnostic and Repair

TECHNICAL MANUAL

Combines models C240 (4LZ-13)

TM136619 28 MAY 15 (ENGLISH)

For complete service information also see:

| | |
|--|--------|
| Alternators and Starting Motors | CTM77 |
| PowerTech E 4.5 and 6.8L Diesel Engines Level 16 Electronic Fuel System With Denso HPCR | CTM502 |
| PowerTech 4.5L & 6.8L Diesel Engines Tier 1/Stage I, Tier 2/Stage II, Tier 3/Stage IIIA, Tier 3/Stage IIA Tier 3/Stage III, (Base Engine) | CTM104 |



John Deere Agriculture

Type: Service Manual

Language: English

Pages: 867

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere C240 (4LZ-13) Full-Feeding Combine Diagnostic and Repair Technical Manual (TM136619)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Group 15 - Operators Station

Instruments and Controls Identification



Cab Instruments and Controls

LEGEND:

| | |
|---|--|
| A | Marker Light Switch |
| B | Head Light Switch |
| C | Throttle Switch |
| D | Murphy Gauge |
| E | Warning Display |
| F | Speedometer |
| G | Alarm Light and Unloading Auger Light Switch |
| H | Turn Signal Light Switch |
| I | Ignition Switch |
| J | Reel Speed Switch |
| K | Field Light Switch |
| L | Fuel Gauge |
| M | Horn Switch |
| N | Cylinder Speed Tachometer Gauge |
| O | Not Used |

Remove and Install Marker Light Switch

[1] -

IMPORTANT:

Avoid machine damage by always disconnecting ground (-) cable from battery before working on electrical system.



Thank you very much
for your reading.
Please click here
to get more information.