

**Z335E, Z335M, Z345M,
Z345R, Z355E, Z355R,
Z375R ZTrak Mower
(S.N. 010001-)**

**TECHNICAL MANUAL
Z335E, Z335M, Z345M, Z345R
Z355E, Z355R, Z375R
ZTrak™ Mower**

TM140319 15NOV18 (ENGLISH)




Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1

Contents

Section 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuel and Lubricants
- Group 20—Machine Specifications

Section 299—Service Tools and Kits

- Group 10—Service Tools

Section 20—Engine Repair

- Group 10—Engine Twin Cylinder

Section 30—Electrical Repair

- Group 10—Component Location
- Group 20—Wiring Harnesses

Section 40—Power Train Repair

- Group 10—Component Location
- Group 20—Repair

Section 50—Attachments Repair

- Group 10—Component Location
- Group 20—Repair

Section 60—Miscellaneous Repair

- Group 10—Component Location
- Group 20—Repair

Section 220—Engine Diagnosis, Tests, and Adjustments

- Group 10—Diagnosis
- Group 20—Tests and Adjustments

Section 230—Electrical Diagnosis, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 20—Diagnosis
- Group 30—Tests and Adjustments
- Group 40—Wiring Schematics
- Group 50—Connectors

Section 240—Power Train Diagnosis, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 20—Diagnosis
- Group 30—Tests and Adjustments

Section 250—Attachments Diagnosis, Tests, and Adjustments

- Group 10—Diagnosis
- Group 20—Tests and Adjustments

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2018
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2015, 2016, 2017

Section 10 General Information

Contents

	Page		Page
Group 05—Safety			
Recognize Safety Information	10-05-1		
Understand Signal Words.....	10-05-1		
Follow Safety Instructions.....	10-05-1		
Practice Safe Maintenance.....	10-05-2		
Use Proper Tools	10-05-2		
Handle Fluids Safely—Avoid Fires.....	10-05-3		
Drain Gasoline When Storing Machine	10-05-3		
Handling Batteries Safely	10-05-4		
Prepare for Emergencies.....	10-05-4		
Park Machine Safely.....	10-05-5		
Support Machine Properly	10-05-5		
Wear Protective Clothing.....	10-05-5		
Work in Clean Area	10-05-6		
Service Machines Safely	10-05-6		
Work In Ventilated Area.....	10-05-6		
Illuminate Work Area Safely	10-05-7		
Replace Safety Signs	10-05-7		
Use Proper Lifting Equipment.....	10-05-7		
Follow Tire Recommendations	10-05-8		
Decommissioning — Proper Recycling and Disposal of Fluids and Components	10-05-8		
Protect Against High Pressure Spray	10-05-9		
Live With Safety.....	10-05-9		
Group 10—General Specifications			
Metric Cap Screw Torque Values—Grade 7	10-10-1		
Metric Bolt and Screw Torque Values.....	10-10-2		
Unified Inch Bolt and Screw Torque Values.....	10-10-3		
Group 15—Fuel and Lubricants			
Summary of References.....	10-15-1		
Gasoline Engine Oil.....	10-15-1		
Oil Filters	10-15-1		
Gasoline Fuel for 4-Cycle Engines.....	10-15-2		
Transaxle Oil	10-15-2		
Grease.....	10-15-2		
Mower Spindle Grease	10-15-3		
Mixing of Lubricants.....	10-15-3		
Alternative and Synthetic Lubricants	10-15-3		
Lubricant Storage	10-15-3		
Gasoline and Engine Storage.....	10-15-4		
Carburetor Cleaning	10-15-5		
Carburetor Cleaning Methods	10-15-6		
		Group 20—Machine Specifications	
		Machine Specifications.....	10-20-1
		Product Identification Number Location	10-20-2



Thank you very much
for your reading.
Please click here
to get more information.