

# 2000, 2100, 2200, 2300 and 2400 Tractors Technical Manual



JOHN DEERE

## TECHNICAL MANUAL 2000, 2100, 2200, 2300 and 2400 Tractors Technical Manual

TM1563 (11MAY94) English



**JDI GmbH-ISB**  
**TM1563 (11MAY94)**

LITHO IN U.S.A.  
ENGLISH



# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all

applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

# Contents

## SECTION 05—Safety

Group 05—Safety

## SECTION 10—General Information

Group 05—Specifications

Group 10—Fuels, Lubricants and Coolants

## SECTION 15—Component Removal/Installation

Group 00—Special Tools and Specifications

Group 05—Separating Engine From Transmission

Group 10—Transmission

Group 15—Final Drives

Group 20—Differential Housing

Group 25—Engine

## SECTION 20—Engine Repair

Group 05—Special Tools and Specifications

Group 10—Clutch

Group 15—Engine Mounting

Group 20—Cylinder Head and Valves

Group 25—Crankshaft, Pistons, Rods and Liners

Group 30—Camshaft and Timing Gear Train

Group 35—Cooling System

Group 40—Air Intake and Exhaust System

Group 45—Fuel System

Group 50—Lubrication System

Group 55—Air Compressor

## SECTION 40—Electrical System—Repair

Group 05—General Information

Group 10—System Diagrams and Schematics

Group 15—Battery

Group 20—Harness Repair

Group 25—Alternator

Group 30—Starting Motor

Group 35—Lights

Group 40—Instruments and Switches

Group 45—Sensors

## SECTION 50—Mechanical Shift Transmission

Group 05—Special Tools and Specifications

Group 10—Clutch Housing

Group 15—Transmission Cover

Group 20—Gears and Shafts

## SECTION 55—Power Train Components

Group 05—Driveshaft (MFWD)

Group 10—Pinion Housing (MFWD)

Group 15—MFWD Automatic Differential Assembly (Limited-Slip)

Group 20—Wheel Reduction—Gear Assembly (MFWD)

Group 25—Front Wheel Drive Axles (MFWD)

Group 30—MFWD Drop Box

Group 35—Rear Differential Housing

Group 40—Final Drive

Group 45—PTO Shaft

## SECTION 60—Brakes and Steering

Group 00—Special Tools

Group 05—Bleed Brakes

Group 10—Brake Adjustment

Group 15—Disc Brakes

Group 20—Master Cylinder

Group 25—Proportional Valve

Group 30—Slave Cylinder

Group 35—Troubleshooting Brake System

Group 40—Hydrostatic Steering Unit Upper Steering Shaft

Group 45—Power Steering Reservoir

Group 50—Steering Pump

## SECTION 70—Main Hydraulic System

Group 00—Special Tools and Specifications

Group 05—Main Hydraulic Pump

Group 10—Internal Hydraulics Cover

Group 15—Rockshaft Cylinder

Group 20—Hydraulics Distributor

Group 25—Hydraulic Control Levers

Group 30—Rockshaft

Group 35—Draft Link Torsion Bar

## SECTION 80—Miscellaneous

Group 05—Wheels and Tires

Group 10—Ballast

## SECTION 90—Operator's Station

Group 10—Seat

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1563- 9-11MAY94

COPYRIGHT® 1994  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual

*Contents*

05

Group 15—Open Station Floor  
Group 20—Open Station Frame  
Group 25—Cab

10

**Index**

15

20

40

50

55

60

70

80



Thank you very much  
for your reading.  
Please click here  
to get more information.