

CRAWLER CRANE

SHOP
MANUAL

model

CK2500-II

CKE2500-II



KOBELCO

BOOK CODE : S5JD00002ZE03

Applicable Model	Applicable Machine	Date of issue	Remarks
CK2500-II	From JD04-02002	2006.05	S5JD00002ZE01
CKE2500-II	From JD04-02001	2006.08	S5JD00002ZE02
		2006.09	S5JD00002ZE03

SAFETY

1. SPECIFICATION

1.1 CK2500-II SPECIFICATION.....	1-3
1.1.1 PERFORMANCE.....	1-3
1.1.2 PERFORMANCE OF LUFFING JIB.....	1-3
1.1.3 OUTSIDE DIMENSIONS.....	1-4
1.1.4 DIMENSIONS AND WEIGHT OF EACH PARTS.....	1-6
1.1.4.1 BASE MACHINE.....	1-6
1.1.4.2 COUNTERWEIGHT.....	1-7
1.1.4.3 ATTACHMENT.....	1-9
1.1.5 CK2500-II STABILITY IN SWINGING AND TRAVELING.....	1-14
1.2 CKE2500-II SPECIFICATION.....	1-15
1.2.1 PERFORMANCE.....	1-15
1.2.2 PERFORMANCE OF LUFFING JIB.....	1-15
1.2.3 OUTSIDE DIMENSIONS.....	1-16
1.2.4 DIMENSIONS AND WEIGHT OF EACH PARTS.....	1-18
1.2.4.1 BASE MACHINE.....	1-18
1.2.4.2 COUNTERWEIGHT.....	1-19
1.2.4.3 ATTACHMENT.....	1-21
1.2.5 CKE2500-II STABILITY IN SWINGING AND TRAVELING.....	1-28

2. MAINTENANCE STANDARDS TEST PROCEDURES

2.1 MAINTENANCE STANDARD.....	2-3
2.1.1 PIN, BUSHING, SPRING, LINING AND SHEAVE.....	2-3
2.1.2 PROPEL DEVICE.....	2-10
2.2 PERFORMANCE STANDARD AND TEST PROCEDURE.....	2-16
2.2.1 OPERATING SPEED.....	2-16
2.2.2 POINT AND METHOD OF MEASURING PRESSURE.....	2-17
2.2.3 SLEWING RING.....	2-23

3. GENERAL WORK STANDARD

3.1 TIGHTENING TORQUE OF CAPSCREWS AND NUTS.....	3-3
3.1.1 METRIC COARSE THREADS.....	3-3
3.1.2 METRIC FINE THREADS.....	3-3
3.1.3 COARSE THREDS UNC.....	3-4
3.1.4 FINE THREADS UNF.....	3-4
3.1.5 TIGHTENING TORQUE OF HYDRAULIC FITTINGS.....	3-5
3.2 STANDARD PARTS.....	3-7
3.2.1 BOLT.....	3-7
3.2.2 O-RING.....	3-8

TABLE OF CONTENTS

3.2.3	BACK-UP RING.....	3-9
3.2.4	BITE FITTING.....	3-10
3.3	CONVERSION TABLE.....	3-12
3.3.1	UNIT CONVERSION.....	3-12
3.3.2	MILLIMETER : INCH CONVERSION TABLE.....	3-13
3.3.3	METER-FOOT CONVERSION TABLE.....	3-15
3.3.4	GRADIENT CONVERSION TABLE.....	3-16
3.4	TABLE OF UNIT WEIGHT.....	3-17

4. POWER TRAIN

4.1	INTRODUCTION.....	4-3
4.2	ENGINE.....	4-5
4.2.1	INTRODUCTION.....	4-5
4.2.2	REMOVAL.....	4-5
4.2.3	REPAIR AND MAINTENANCE.....	4-6
4.2.4	RE-INSTALLATION.....	4-7
4.3	PUMP DRIVE ASSEMBLY.....	4-10
4.3.1	INTRODUCTION.....	4-10
4.3.2	REMOVAL.....	4-10
4.3.3	DISASSEMBLING THE POWER DIVIDER.....	4-12
4.3.4	CHECK AND REPAIR OF THE POWER DIVIDER.....	4-13
4.3.5	ASSEMBLING THE POWER DIVIDER.....	4-14
4.3.6	RE-INSTALLATION.....	4-15

5. HYDRAULIC SYSTEM

5.1	LOCATION OF MAIN HYDRAULIC COMPONENTS.....	5-3
5.2	HYDRAULIC CIRCUITS AND COMPONENTS.....	5-4
5.2.1	HYDRAULIC CIRCUIT.....	5-4
5.2.2	COMPONENT SPECIFICATIONS.....	5-8
5.2.3	LOCATION OF HYDRAULIC COMPONENTS.....	5-12
5.3	HYDRAULIC SYSTEM.....	5-19
5.3.1	PREFACE.....	5-19
5.3.2	OUTLINE.....	5-19
5.3.3	OIL FLOW FROM No.1 and No. 2 PUMPS.....	5-21
5.3.4	OIL FLOW FROM No.3 AND No.4 PUMPS.....	5-23
5.3.5	OIL FLOW FROM No.5 PUMP (Control Pump).....	5-25
5.3.6	OIL FLOW FROM No.6 PUMP (For Auxiliary Actuator Circuit).....	5-29
5.4	VALVES.....	5-32

TABLE OF CONTENTS

6. HOIST SYSTEM

6.1	APPARATUS AND LOCATION OF COMPONENTS	6-3
6.2	CONSTRUCTION AND FUNCTION	6-4
6.2.1	HYDRAULIC SCHEMATIC	6-4
6.2.2	LIFTING A LOAD	6-6
6.2.3	HOLDING A RAISED LOAD	6-8
6.2.4	LOWERING A LOAD (POWERED LOWERING)	6-10
6.2.5	FREE FALL OPERATION	6-13
6.2.6	FREE FALL ACCELERATION.....	6-16
6.3	DRUM LOCK.....	6-18
6.3.1	ASEMBLY DRAWING	6-18
6.3.2	ADJUSTMENT OF DRUM LOCK	6-19
6.4	WINCH ASSEMBLY	6-20
6.4.1	WINCH INSTAL	6-20
6.4.2	WINCH ASSEMBLY / REDUCTION UNIT WITHOUT FREE FALL (STD.).....	6-21
6.4.3	WINCH ASSEMBLY WITH FREE FALL (OPT.).....	6-23
6.5	BRAKE PEDAL.....	6-24
6.5.1	ASSEMBLY DRAWING	6-24
6.5.2	ADJUSTING THE BRAKE PEDAL	6-26
6.6	BLEEDING AIR FROM BRAKE CIRCUIT	6-27

7. BOOM HOIST SYSTEM

7.1	APPARATUS AND LOCATION OF COMPONENTS	7-3
7.2	CONSTRUCTION AND FUNCTION	7-5
7.2.1	HYDRAULIC SCHEMATIC	7-5
7.2.2	RAISING THE BOOM.....	7-6
7.2.3	NEUTRAL (MAINTAINING THE BOOM POSITION).....	7-8
7.2.4	LOWERING THE BOOM	7-10
7.3	BOOM DRUM LOCK.....	7-12
7.3.1	ASSEMBLY DRAWING	7-12
7.3.2	ADJUSTING THE BOOM DRUM LOCK.....	7-13
7.4	DRUM AND REDUCTION UNIT	7-14
7.4.1	BOOM WINCH ASSEMBLY	7-14
7.4.2	BOOM DRUM AND REDUCTION UNIT ASSEMBLY	7-15

8. SWING SYSTEM

8.1	APPARATUS AND LOCATION OF COMPONENTS	8-3
8.2	CONSTRUCTION AND FUNCTION	8-5
8.2.1	HYDRAULIC SCHEMATIC.....	8-5



Thank you very much
for your reading.
Please click here
to get more information.