

# SHOP MANUAL

# CASE/INTERNATIONAL

MODELS 5120, 5130 & 5140

## IDENTIFICATION

Tractor model number and identification serial number are located on a plate on lower left side of instrument panel cover on tractors equipped with a cab or lower left front side of operator's platform on tractors equipped with a ROPS frame. Engine serial number is located on a plate on left side of timing gear housing. Transmission serial number is located on a plate on right side of transmission housing. On models equipped with mechanical front-wheel-drive axle, the axle serial number is located on a plate on right rear side of front axle housing.

## INDEX (By Starting Paragraph)

	5120	Models 5130	5140
AFTERCOOLER .....	75	....	....
AIR CLEANER .....	76	76	76
<b>AXLE, FRONT (TWO-WHEEL DRIVE)</b>			
Axle Main Member .....	4	4	4
Steering Knuckles .....	2	2	2
Tie Rod & Toe-In .....	3	3	3
Wheel Bearings .....	1	1	1
<b>AXLE, FRONT (FOUR-WHEEL DRIVE)</b>			
Axle Assembly, R&R. ....	5	5	5
Differential & Bevel Gears. ....	8	8	8
Drive Shaft .....	9	9	9
Front Drive Clutch .....	11	11	11
Pivot Housing & Axle Shaft .....	7	7	7
Tie Rods & Toe-In .....	10	10	10
Wheel Hub & Planetary .....	6	6	6
<b>BRAKE (PARKING)</b> .....	133	133	133
<b>BRAKES (WHEEL)</b>			
Adjustment .....	126	126	126
Bleed Brakes .....	130	130	130
Brake Assemblies .....	131	131	131
Master Cylinders .....	132	132	132
<b>CAB AND SEAT</b> .....	170	170	170
<b>COOLING SYSTEM</b>			
Belt Tensioner .....	81	81	81

PDF



DOWNLOAD



# INDEX (CONT.)

	5120	Models 5130	5140
<b>COOLING SYSTEM (Cont.)</b>			
Fan .....	80	80	80
Radiator .....	77	77	77
Thermostat. ....	78	78	78
Water Pump .....	79	79	79
<b>CREEPER TRANSMISSION</b>			
R&R and Overhaul. ....	121	121	121
<b>DIESEL FUEL SYSTEM</b>			
Fuel Filters & Lift Pump. ....	55	55	55
Injection Pump. ....	59	59	59
Injector Nozzles .....	65	65	65
<b>DIFFERENTIAL AND MAIN DRIVE</b>			
<b>BEVEL GEARS</b>			
Differential & Bevel Gears .....	122	122	122
Differential Lock .....	123	123	123
<b>DRIVE SHAFT (W/O Creeper).....</b>	<b>120</b>	<b>120</b>	<b>120</b>
<b>ELECTRICAL SYSTEM</b>			
Alternator.....	88	88	88
Batteries.....	82	82	82
Charging System Testing.....	84	84	84
Instrument Cluster .....	98	98	98
Lights .....	97	97	97
Programming Digital Instrument Cluster.....	102	102	102
Protective Circuits.....	95	95	95
Starting Motor .....	91	91	91
Wiring.....	94	94	94
<b>ENGINE</b>			
Assembly, R&R. ....	24	24	24
Balancer .....	48	....	....
Cam Followers .....	30	30	30
Camshaft & Bearings .....	36	36	36
Connecting Rods & Bearings .....	42	42	42
Connecting Rod & Piston Units .....	38	38	38
Crankshaft & Main Bearings .....	43	43	43
Crankshaft Seals .....	45	45	45
Cylinder Block & Sleeves .....	40	40	40
Cylinder Head .....	25	25	25
Flywheel .....	47	47	47
Oil Cooler .....	54	54	54
Oil Pan .....	51	51	51
Oil Pressure Regulator .....	53	53	53
Oil Pump .....	52	52	52
Oil Spray Nozzles.....	44	44	44
Piston Pins & Bushings.....	41	41	41
Pistons & Rings .....	39	39	39



Thank you very much  
for your reading.  
Please click here  
to get more information.