

4400 and 4420 Combines



TECHNICAL MANUAL

4400 and 4420 Combines

TM1237 (01Jun84) English



John Deere Harvester Works TM1237 (01Jun84)

> LITHO IN U.S.A. ENGLISH



4400 AND 4420 COMBINES

TECHNICAL MANUAL TM-1237 (Jun-84)

CONTENTS

SECTION 10 - GENERAL	SECTION 50 - POWER TRAIN REPAIR
SECTION 20 - 219 AND 329 DIESEL ENGINE REPAIR Group 00 - Specifications and Special Tools Group 05 - Cylinder Head, Valves and Camshaft Group 10 - Block Liners, Pistons, and Rods Group 15 - Crankshaft, Main Bearings, and Flywheel	Group 00 - Specifications and Special Tools Group 05 - Clutch Group 10 - Transmission Group 15 - Differential Group 20 - Final Drive Group 25 - Final Drive
Group 20 - Lubrication System Group 25 - Cooling System	SECTION 60 - STEERING/BRAKES REPAIR Group 00 - Specifications Group 05 - Power Steering
SECTION 22 - 359 DIESEL ENGINE REPAIR Group 00 - Contents	Group 10 - Brakes
Group 05 - Cylinder Head, Valve, Timing Gear Train and Camshaft Group 10 - Cylinder Block, Liners, Pistons and	SECTION 70 - HYDRAULIC REPAIR Group 00 - Specifications and Special Tools Group 05 - Reservoir
Rods Group 15 - Crankshaft, Main Bearing and Flywheel Group 20 - Lubrication System Group 25 - Cooling System	Group 10 - Hydraulic Pumps Group 15 - Hydraulic Valves Group 20 - Hydraulic Cylinders Group 25 - Hydraulic Motors
SECTION 25 - GASOLINE ENGINE REPAIR Group 00 - Specifications and Special Tools Group 05 - Cylinder Head, Valves and Camshaft Group 10 - Block Liners, Pistons, and Rods Group 15 - Crankshaft, Main Bearings, and Flywheel	Group 30 - Accumulator SECTION 80 - SEPARATOR SHELL REPAIR Group 00 - Specifications Group 05 - Rear Hood Group 10 - Cylinder Rear Cover Group 15 - Separator Uprights
Group 20 - Lubrication System Group 25 - Cooling System Group 30 - Governor and Speed Control Linkage	SECTION 90 - OPERATOR STATION REPAIR Group 00 - Specifications and Special Tools Group 05 - Air Conditioning System
SECTION 30 - FUEL AND AIR REPAIR Group 00 - Specifications and Special Tools Group 05 - Air Intake System Group 10 - 219 and 329 Diesel Fuel System	Group 10 - Pressurizer System Group 15 - Heating System Group 20 - Personal Posture Seat Group 25 - Cab Roof
Group 12 - 359 Diesel Fuel System Group 15 - Control Linkage	SECTION 100 - HEADER REPAIR Group 00 - Specifications and Special Tools
SECTION 40 - ELECTRICAL REPAIR Group 00 - Specifications and Special Tools Group 05 - Harness Replacement Group 10 - Charging Circuit Repair Group 15 - Storting Circuit Repair	Group 05 - 200 Series Cutting Platforms Group 10 - Quik-Tatch Cutting Platforms Group 15 - 40 Series Corn Heads Group 20 - Row-Crop Heads
Group 15 - Starting Circuit Repair Group 20 - Ignition System Repair Group 25 - Lights and Accessory Circuits	Copyright 1984 DEERE AND COMPANY Moline, Illinois All rights reserved

Copyright 1984 DEERE AND COMPANY Moline, Illinois All rights reserved Previous Editions
Copyright @ 1980 Deere and Company Copyright @ 1981 Deere and Company

SECTION 110 - FEEDER HOUSE REPAIR SECTION 240 - ELECTRICAL OPERATION AND Group 00 - Specifications **TESTS** Group 00 - Specifications and Special Tools Group 05 - Feeder Conveyor Chain Group 10 - Feeder Conveyor Drum Group 05 - General Information and Diagrams Group 15 - Variable Speed Feeder House Drives Group 10 - Charging Circuit Diagnosis Group 20 - Feeder House Lower Shaft Group 15 - Starting Circuit Diagnosis Group 20 - Lights, Instruments, and Accessory Group 25 - Feeder House Upper Shaft Circuits Diagnosis SECTION 120 - SEPARATOR REPAIR SECTION 250 - POWER TRAIN OPERATION Group 00 - Specifications and Special Tools Group 05 - Cylinder, Concave, and Beater AND TESTS Group 10 - Cylinder Drives Group 00 - Specifications and Special Tools Group 15 - Straw Walkers and Crankshafts Group 05 - Clutch Diagnosis Group 20 - Straw Chopper and Straw Spreader Group 10 - Transmission Diagnosis Group 25 - Shoe Supply Augers, Cleaning Fan, and Group 15 - Final Drive Diagnosis Shoe Frame SECTION 260 - STEERING/BRAKES OPERATION Group 30 - Tailings Elevator and Augers AND TESTS Group 35 - Lower Auger, Clean Grain Elevator, and Group 00 - Specifications Grain Tank Loading Auger Group 05 - Power Steering SECTION 130 - GRAIN TANK UNLOADING Group 10 - Brakes SYSTEM REPAIR SECTION 270 - HYDRAULIC OPERATION Group 00 - Specifications AND TESTS Group 05 - Grain Tank Auxiliary Unloading Augers Group 00 - Specifications and Special Tools and Drive Group 01 - Hydraulic System Operation Group 10 - Grain Tank Inner and Outer Unloading Group 05 - Hydraulic System Tests Augers Group 10 - Reservoir SECTION 140 - MAJOR DRIVES REPAIR Group 15 - Hydraulic Pumps Group 20 - Hydraulic Valves Group 00 - Specifications Group 25 - Hydraulic Cylinders Group 05 - Engine Powershaft Group 30 - Hydraulic Motors Group 10 - Primary Countershaft Group 35 - Accumulator Group 15 - Secondary Countershaft SECTION 160 - AUTOMATIC HEADER HEIGHT SECTION 290 - OPERATOR STATION **OPERATION AND TESTS CONTROL REPAIR** Group 00 - Specifications and Special Tools Group 00 - Specifications and Special Tools Group 05 - Air Conditioning Operation and Tests Group 05 - Repair of Components Group 10 - Pressurizer System SECTION 220 - ENGINE OPERATION AND Group 15 - Heating System **TESTS** Group 00 - Specifications and Special Tools Group 05 - System Operation

Group 05 - Air Intake System Group 10 - Diesel Fuel System Group 15 - Control Linkage

Group 10 - System Tests and Diagnosis
SECTION 230 - FUEL/AIR OPERATION AND
TESTS
Group 00 - Specifications and Special Tools

SECTION 360 - AUTOMATIC HEADER HEIGHT CONTROL OPERATION AND **TESTS**

Group 00 - Specifications and Special Tools

Group 05 - General Information, Diagnosis, and Tests

Group 10 - Mechanhical System

Group 15 - Electrical System

Group 20 - Hydraulic System Group 25 - General Information, Diagnosis, and Tests - DIAL-A-MATIC™

Group 30 - Mechanical System - DIAL-A-MATIC

Group 35 - Electrical System - DIAL-A-MATIC

Group 40 - Hydraulic System - DIAL-A-MATIC

Throughout this manual dimensions are shown as follows: (1.75 mm) .069". The measurement in parentheses was converted from the design dimension.

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

The specifications given in this manual are intended for service only. They do not include normal factory manufacturing tolerances.



Thank you very much for your reading.

Please click here to get more information.