

SERVICE MANUAL

L234

Tier 4B (final)

200 Series Skid Steer Loader

PIN NGM418237 and above

C238

Tier 4B (final)

200 Series Compact Track Loader

PIN NGM418237 and above



Part number 47916233

1st edition English
October 2016





SERVICE MANUAL

C238 TIER 4B (FINAL) [NGM418237 -]
L234 TIER 4B (FINAL) [NGM418237 -]

Link Product / Engine

| Product | Market Product | Engine |
|--|-----------------------|----------------|
| C238 TIER 4B (FINAL) [NGM418237 -] | North America | F5BFL413A*B007 |
| L234 TIER 4B (FINAL) [NGM418237 -] | North America | F5BFL413A*B007 |

Contents

INTRODUCTION

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.216] Fuel tanks | 10.2 |
| [10.206] Fuel filters | 10.3 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.4 |
| [10.400] Engine cooling system | 10.5 |
| [10.414] Fan and drive | 10.6 |
| [10.304] Engine lubrication system..... | 10.7 |
| Power coupling | 19 |
| [19.121] Pump-drive assembly | 19.1 |
| Front axle system | 25 |
| [25.450] Chain drive system..... | 25.1 |
| Rear axle system | 27 |
| [27.650] Chain drive system..... | 27.1 |
| Hydrostatic drive | 29 |
| [29.200] Mechanical control | 29.1 |
| [29.218] Pump and motor components..... | 29.2 |
| [29.202] Hydrostatic transmission | 29.3 |
| Brakes and controls | 33 |
| [33.110] Parking brake or parking lock | 33.1 |
| Hydraulic systems | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.300] Reservoir, cooler, and filters..... | 35.2 |
| [35.104] Fixed displacement pump..... | 35.3 |
| [35.359] Main control valve | 35.4 |

| | |
|--|-----------|
| [35.525] Auxiliary hydraulic valves and lines | 35.5 |
| [35.600] High flow hydraulics | 35.6 |
| [35.724] Front loader hydraulic system control | 35.7 |
| [35.701] Front loader arm hydraulic system | 35.8 |
| [35.734] Tool quick coupler hydraulic system | 35.9 |
| Frames and ballasting | 39 |
| [39.140] Ballasts and supports | 39.1 |
| Wheels | 44 |
| [44.511] Front wheels | 44.1 |
| [44.520] Rear wheels | 44.2 |
| Tracks and track suspension | 48 |
| [48.130] Track frame and driving wheels | 48.1 |
| [48.100] Tracks | 48.2 |
| [48.134] Track tension units | 48.3 |
| [48.138] Track rollers | 48.4 |
| Cab climate control | 50 |
| [50.100] Heating | 50.1 |
| [50.200] Air conditioning | 50.2 |
| Electrical systems | 55 |
| [55.000] Electrical system | 55.1 |
| [55.100] Harnesses and connectors | 55.2 |
| [55.201] Engine starting system | 55.3 |
| [55.302] Battery | 55.4 |
| [55.011] Fuel tank system | 55.5 |
| [55.988] Selective Catalytic Reduction (SCR) electrical system | 55.6 |
| [55.012] Engine cooling system | 55.7 |
| [55.640] Electronic modules | 55.8 |
| [55.019] Hydrostatic drive control system | 55.9 |

| | |
|--|-----------|
| [55.512] Cab controls | 55.10 |
| [55.036] Hydraulic system control | 55.11 |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.12 |
| [55.518] Wiper and washer system..... | 55.13 |
| [55.408] Warning indicators, alarms, and instruments | 55.14 |
| [55.991] Telematics | 55.15 |
| [55.DTC] FAULT CODES..... | 55.16 |
| Front loader and bucket..... | 82 |
| [82.100] Arm..... | 82.1 |
| [82.300] Bucket..... | 82.2 |
| Platform, cab, bodywork, and decals | 90 |
| [90.120] Mechanically-adjusted operator seat..... | 90.1 |
| [90.124] Pneumatically-adjusted operator seat..... | 90.2 |
| [90.150] Cab..... | 90.3 |
| [90.154] Cab doors and hatches | 90.4 |



INTRODUCTION

Contents

INTRODUCTION

| | |
|---|----|
| Foreword - Important notice regarding equipment servicing (*) | 3 |
| Safety rules (*) | 4 |
| Safety rules - Personal safety (*) | 5 |
| Safety rules - Ecology and the environment (*) | 6 |
| Torque - Minimum tightening torques for normal assembly (*) | 7 |
| Torque - Standard torque data for hydraulics (*) | 12 |
| Basic instructions - Shop and assembly (*) | 14 |
| Basic instructions - Video links | 16 |
| Hydraulic contamination (*) | 17 |
| Fluids and lubricants | 18 |
| General specification - Recommended engine oil for operating temperature ranges (*) | 19 |
| Product identification (*) | 20 |
| Product identification - Machine orientation (*) | 22 |

(*) See content for specific models

Foreword - Important notice regarding equipment servicing

| | |
|------|----|
| C238 | NA |
| L234 | NA |

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The manufacturer reserves the right to make improvements in design and changes in specifications at any time without notice and without incurring any obligation to install them on units previously sold. Specifications, descriptions, and illustrative material herein are as accurate as known at time of publication but are subject to change without notice.

In case of questions, refer to your NEW HOLLAND CONSTRUCTION Sales and Service Networks.



Thank you very much
for your reading.
Please click here
to get more information.