


Hydraulic Breaker

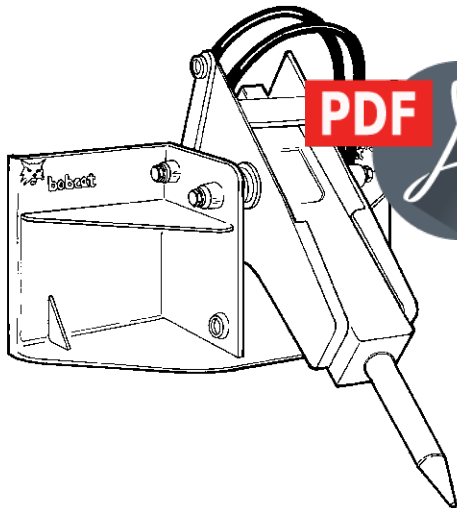

Bobcat® Service Manual

1250 (S/N 157000101 AND ABOVE)
1250X (S/N 157800101 AND ABOVE)
1560 (S/N 702000101 AND ABOVE)
2500 (S/N 229800101 AND ABOVE,
S/N 693200101 AND ABOVE
S/N 705200101 AND ABOVE,
S/N 780900101 AND ABOVE,
S/N 896708001 AND ABOVE)
2560 (S/N 617900101 AND ABOVE)
2570 (S/N 573306139 AND ABOVE)
3500 (S/N 006500101 AND ABOVE,
S/N 705400101 AND ABOVE,
S/N 897200101 AND ABOVE)
3560 (S/N 615800101 AND ABOVE)
3570 (S/N 573500878 AND ABOVE)
5060 (S/N 754400101 AND ABOVE)
5500 (S/N 100300101 AND ABOVE)
5500 (S/N 100300101 AND ABOVE,
S/N 472900101 AND ABOVE)



PDF



DOWNLOAD



MAINTENANCE SAFETY




WARNING







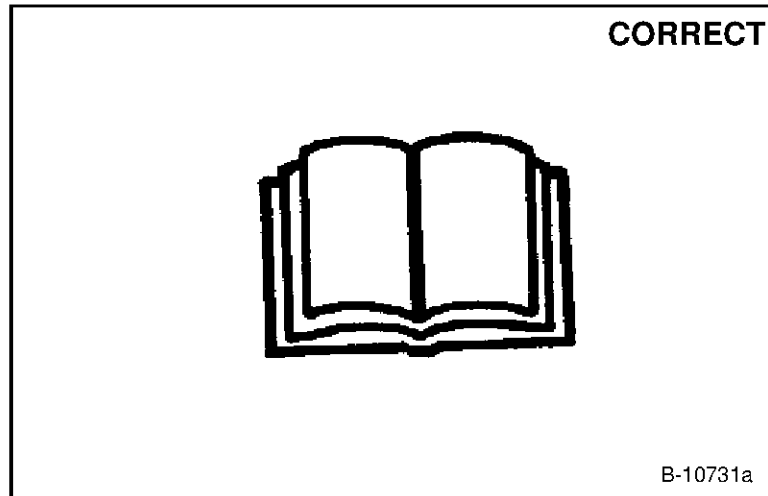

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



-  Never service attachments without instructions. See Operation & Maintenance Manual and Attachment Service Manual.
-  Cleaning and maintenance are required daily.
-  Never service or adjust attachment with the engine running unless instructed to do so in manual.
-  Always lower the attachment to the ground before lubricating or servicing.
-  Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
-  Stop, cool and clean engine of flammable materials before checking fluids.
-  Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
-  Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.



Bobcat®



Thank you very much
for your reading.
Please click here
to get more information.