

3030 and 3130 Tractors



JOHN DEERE

TECHNICAL MANUAL 3030 and 3130 Tractors

TM4277 (01JUN79) English



John Deere Werke Mannheim
TM4277 (01JUN79)

LITHO IN U.S.A.
ENGLISH



CONTENTS

SECTION 10 — GENERAL

- Group 5 - Specifications
- Group 10 - Pre-delivery, delivery and after-sales inspections
- Group 15 - Lubrication and periodic service
- Group 20 - Engine and tractor tune-up
- Group 25 - Tractor separation

SECTION 20 — ENGINE

- Group 5 - General information, diagnosing malfunctions
- Group 10 - Cylinder head and camshaft
- Group 15 - Cylinder block, liners, pistons and connecting rods
- Group 20 - Crankshaft, main bearings and flywheel
- Group 25 - Timing gear train
- Group 30 - Oil pump, oil pressure regulating valve and oil filter
- Group 35 - Engine cooling system
- Group 40 - Speed control linkage

SECTION 30 — FUEL SYSTEM

- Group 5 - Diagnosing malfunctions
- Group 10 - Fuel tank, water trap, transfer pump and fuel filter
- Group 15 - Roto Diesel fuel injection pump
- Group 20 - Fuel injection nozzles
- Group 25 - Cold weather starting aids
- Group 30 - Air intake system

SECTION 40 — ELECTRICAL SYSTEM

- Group 5 - Diagnosing malfunctions
- Group 10 - "Bilux" lighting system (on earlier tractor models)
- Group 11 - "Bilux" lighting system (on later tractor models)
- Group 12 - "Bilux" lighting system (tractors with operator's cab)
- Group 15 - Sealed-beam lighting system (on earlier tractor models)
- Group 16 - Sealed-beam lighting system (on later tractor models)
- Group 20 - Starting motor
- Group 25 - Alternator and regulator

SECTION 50 — POWER TRAIN

- Group 5 - Engine clutch and clutch linkage
- Group 10 - High-Low shift unit
- Group 15 - Collar-shift transmission
- Group 20 - Differential
- Group 25 - Final drives
- Group 30 - PTO and PTO clutch

SECTION 60 — FRONT AXLE, STEERING SYSTEM AND BRAKES

- Group 5 - Front axle
- Group 10 - Steering system
- Group 15 - Hydraulic brakes

SECTION 70 — HYDRAULIC SYSTEM


- Group 5 - General information, diagnosing malfunctions and pressure tests
- Group 10 - Oil reservoir, filter, valves and oil cooler
- Group 15 - Hydraulic pump and transmission oil pump
- Group 20 - Rockshaft
- Group 25 - Selective control valve (spool type)
- Group 30 - Selective control valve (poppet valve type) and breakaway coupler
- Group 35 - Remote cylinder

SECTION 80 — MISCELLANEOUS

- Group 5 - Belt pulley
- Group 10 - De Luxe seat
- Group 15 - Front and rear wheels
- Group 20 - Roll guard
- Group 25 - Operator's cab ventilation and heating
- Group 30 - Operator's cab

Copyright © by
DEERE & COMPANY
European Office
D 68 Mannheim
All rights reserved

Introduction

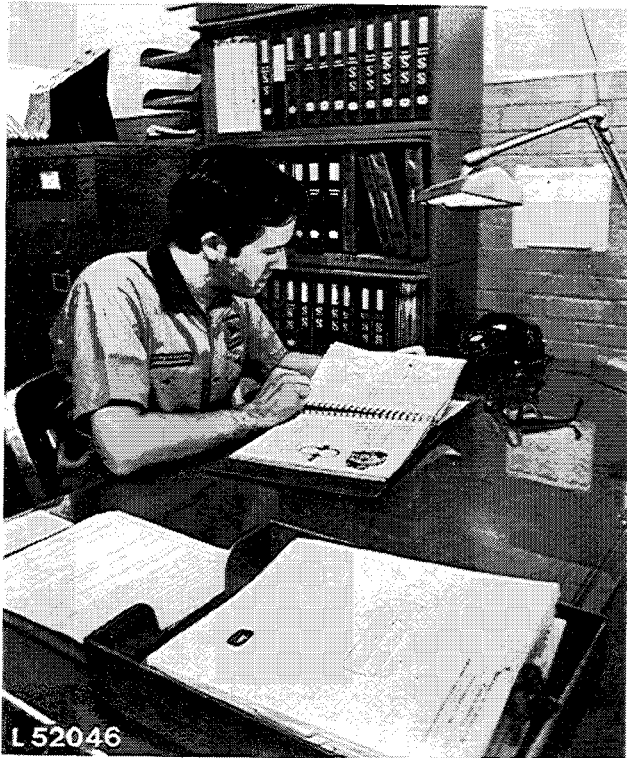

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:


- **FOS Manuals — for reference**
- **Technical Manuals — for actual service**

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover *basic* theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are *concise* service guides for a *specific* machine. Technical Manuals are on-the-job guides containing only the vital information needed by an experienced technician.

IMPORTANT! Your technical manual contains the international standardized SI metric measurement system.

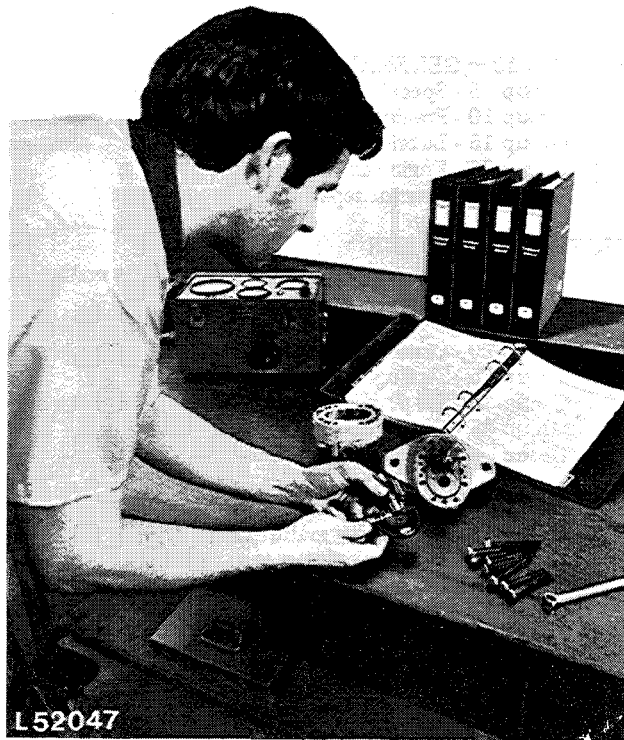

Use Technical Manuals for Actual Service



When a technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

Some features of this technical manual:

- *Table of contents on page 1*
- *Contents at front of each Section*
- *Specifications at end of each Group*
- *Torques for hardware at end of each Group*
- *Special tools at end of each Group*

This technical manual was planned and written for you — an experienced technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Section 10

General

CONTENTS OF THIS SECTION

GROUP 5 — SPECIFICATIONS

	Page
Serial numbers	5-2
Model numbers	5-2
Engine	5-2
Engine clutch	5-2
Electrical system	5-2
Transmission	5-2
High-Low shift unit	5-3
Differential and final drives	5-3
Differential lock	5-3
Power take-off	5-3
Hydraulic system	5-3
Power steering	5-3
Hydraulic brakes	5-3
Handbrake	5-3
Capacities	5-3
Travel speeds	5-3
Front and rear wheels	5-3
Dimensions and weights	5-3

GROUP 10 — PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS

Predelivery inspection	10-1
Delivery inspection	10-4
After-sales inspection	10-4

GROUP 15 — LUBRICATION AND PERIODIC SERVICE

	Page
Lubrication and periodic service	15-1

GROUP 20 — ENGINE AND TRACTOR TUNE-UP

General information	20-1
Preliminary engine testing	20-1
Engine tune-up	20-2
Performance test	20-3
Tractor adjustments	20-3
Standard torques	20-5
Special tools	20-5

GROUP 25 — TRACTOR SEPARATION

Separating between engine and tractor front end	25-1
Removing and installing engine	25-3
Removing and installing clutch housing	25-6
Removing and installing final drives	25-8
Removing and installing rockshaft	25-9
Tilting, removing and installing operator's cab	25-12
Torques for hardware	25-16
Special tools	25-17



Thank you very much
for your reading.
Please click here
to get more information.