

SERVICE MANUAL
SKID STEERS
85XT
90XT
95XT

7-52254

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4


SERVICE MANUAL
SKID STEERS
85XT
90XT
95XT


7-52254

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL
SKID STEERS
85XT
90XT
95XT



DOWNLOAD 

7-52254

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL
SKID STEERS
85XT
90XT
95XT

7-52254

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

85XT/90XT/95XT Skid Steers

Service Manual

7-52254

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		7-52922
Standard Torque Specifications	1001	7-52930
Fluids and Lubricants	1002	7-52943
Metric Conversion Chart	1003	7-52950
Loctite Product Chart		8-98902
Engines		
	Tab 2	
Section Index - Engines		7-52982
Engine and Radiator Removal and Installation	2000	7-53000
Aftercooler	2411	7-43512
Cylinder Head and Valve Train	2415	8-24175
Cylinder Block	2425	8-24185
Lubrication System	2445	8-24195
Cooling System	2455	8-24205
Turbocharger	2465	8-25552
Turbocharger Failure Analysis	2565	9-78235
Fuel System		
	Tab 3	
Section Index - Fuel System		7-53020
Fuel System and Filters	3410	8-24213
Fuel Injectors	3413	8-24235
Bosch Model VE Fuel Injection Pump	3415	7-37143
Electrical		
	Tab 4	
Section Index - Electrical		7-53032
Electrical "How It Works"	4000	7-53043
Electrical "How It Works" (85XT Machines With P.I.N. JAF0352234 And After) (90XT Machines With P.I.N. JAF0320050 And After) (95XT Machines With P.I.N. JAF0311357 And After)	4000	6-75150
Removal and Installation of Electrical Components	4001	7-53050
Electrical Specifications and Troubleshooting	4002	7-53562
Electrical Specifications, Troubleshooting, and Schematics	4002	6-75160

Reprinted

85XT/90XT/95XT Skid Steers Service Manual 7-52254 Table of Contents

Description	Section No.	Form No.
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53090
Alternator	4007	7-53100
Power Train		Tab 6
Section Index - Power Train		7-53113
Hydrostatic How It Works	6000	7-53123
Removal and Installation of Power Train Components	6001	7-53131
Removal and Installation of Power Train Components (85XT Machines With P.I.N. JAF0352234 And After) (90XT Machines With P.I.N. JAF0320050 And After) (95XT Machines With P.I.N. JAF0311357 And After)	6001	6-75230
Hydrostatic Troubleshooting	6002	7-53582
Drive Coupling	6003	7-53141
Piston Pumps - Tandem Pump (M51)	6004	7-53151
Drive Motors - 90XT and 95XT	6005	7-53160
Drive Motors - 85XT	6005	7-53171
Gear Box	6006	7-52890
Sprockets, Chains, and Axle Assemblies	6007	7-52732
Solenoid Valve for Two Speed Drive Motor	6008	7-52900
Accumulator for Charge Circuit	6009	7-53331
Accumulator for Charge Circuit (90XT Machines With P.I.N. JAF0298607 And After) (95XT Machines With P.I.N. JAF0299000 And After)	6009	6-75220
Wheels and Tires	6011	7-53181
Brakes		Tab 7
Section Index - Brakes		7-53192
How It Works	7000	7-54861
Brake - 85XT (Machines Before PIN JAF0273132)	7003	7-54771
Brake - 85XT (Machines With PIN JAF0273132 And After)	7003	6-41380
Brake - 90XT and 95XT	7003	7-52882
Brake Pump	7004	7-54710
Hydraulics		Tab 8
Section Index - Hydraulics		7-53213
"How It Works"	8000	7-53222

85XT/90XT/95XT Skid Steers

Service Manual

7-52254

Table of Contents

Description	Section No.	Form No.
Hydraulic System "How It Works" (85XT Machines With P.I.N. JAF0352234 And After) (90XT Machines With P.I.N. JAF0320050 And After) (95XT Machines With P.I.N. JAF0311357 And After)	8000	6-74410
Hydraulic System Troubleshooting	8001	7-53230
Hydraulic System Troubleshooting (85XT Machines With P.I.N. JAF0352234 And After) (90XT Machines With P.I.N. JAF0320050 And After) (95XT Machines With P.I.N. JAF0311357 And After)	8001	6-75180
Cleaning the Hydraulic System and Hydrostatic System	8002	7-53240
Removal and Installation of Hydraulic Components	8003	7-53250
Removal and Installation of Hydraulic Components (85XT Machines With P.I.N. JAF0352234 And After) (90XT Machines With P.I.N. JAF0320050 And After) (95XT Machines With P.I.N. JAF0311357 And After)	8003	6-75200
Gear (Equipment) Pump	8004	7-53261
Loader Control Valve	8005	7-53280
Loader Control Valve (2 Spool Valve) (85XT Machines With P.I.N. JAF0352234 And After) (90XT Machines With P.I.N. JAF0320050 And After) (95XT Machines With P.I.N. JAF0311357 And After)	8005	6-74400
Loader Control Valve (Bi-Directional Self Leveling Valve) (85XT Machines With P.I.N. JAF0352234 And After) (95XT Machines With P.I.N. JAF0311357 And After)		
Cylinders	8006	7-53291
Optional High Pressure High Flow Pump (Piston Pump)	8007	7-53300
Optional Low Pressure High Flow Pump (Gear Pump)	8008	7-53310
Control Valve for Low Pressure High Flow System	8009	7-53320
Self-Leveling Valve	8010	7-53780
Hydraulics, Cont.	Tab 8	
Solenoid Valve for Hydraulic Coupler System	8011	7-54700
D125 Backhoe Control Valve - North American Only	8012	7-54690
Accumulator for Ride Control	8013	7-53060
Flat Faced Couplers	8014	7-54740
Solenoid Valve for High Pressure High Flow System (Piston Pump)	8020	7-53790
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		7-53343
Pedals and Levers	9001	7-53611
Loader	9002	7-53360
Attachment Coupler	9003	7-53370



Thank you very much
for your reading.
Please click here
to get more information.