


Hydraulic Breaker

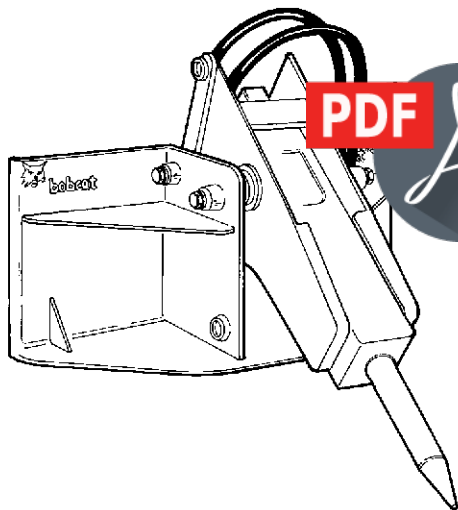

Bobcat® Service Manual

1250 (S/N 157000101 AND ABOVE)
1250X (S/N 157800101 AND ABOVE)
1560 (S/N 702000101 AND ABOVE)
2500 (S/N 229800101 AND ABOVE,
S/N 693200101 AND ABOVE
S/N 705200101 AND ABOVE,
S/N 780900101 AND ABOVE,
S/N 896708001 AND ABOVE)
2560 (S/N 617900101 AND ABOVE)
2570 S/N 573306139 AND ABOVE)
3500 (S/N 006500101 AND ABOVE,
S/N 705400101 AND ABOVE,
S/N 897200101 AND ABOVE)
3560 (S/N 615800101 AND ABOVE)
3570 (S/N 573500878 AND ABOVE)
5060 (S/N 754400101 AND ABOVE)
5500 (S/N 100300101 AND ABOVE)
5500 (S/N 100300101 AND ABOVE,
S/N 472900101 AND ABOVE)



PDF



DOWNLOAD



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



MAINTENANCE SAFETY




WARNING







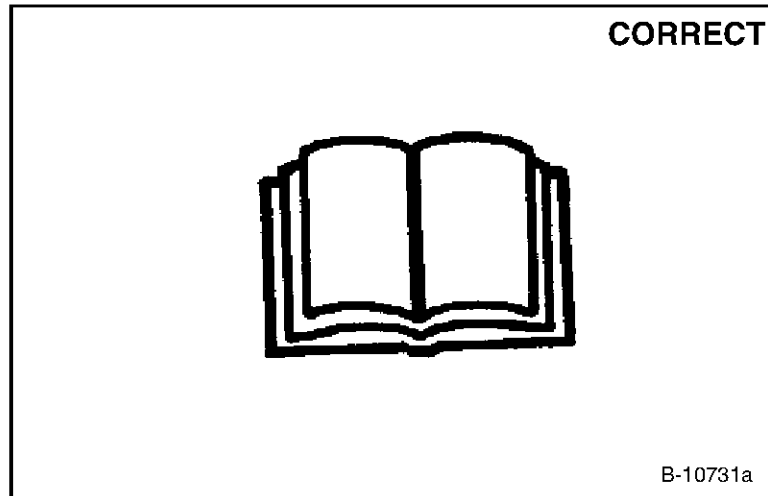

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



-  Never service attachments without instructions. See Operation & Maintenance Manual and Attachment Service Manual.
-  Cleaning and maintenance are required daily.
-  Never service or adjust attachment with the engine running unless instructed to do so in manual.
-  Always lower the attachment to the ground before lubricating or servicing.
-  Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
-  Stop, cool and clean engine of flammable materials before checking fluids.
-  Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
-  Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.



Bobcat®

ALPHABETICAL INDEX

1250, 1250X HYDRAULIC BREAKER SERVICE	
ACCUMULATOR	10-01
ASSEMBLY	10-01
DISASSEMBLY	10-01
PARTS IDENTIFICATION	10-01
SPECIFICATIONS	10-01
TROUBLESHOOTING THE HYDRAULIC BREAKER.	10-01
1560 HYDRAULIC BREAKER SERVICE	
CHECKING MOUNTING BOLT TORQUE.	20-01
HYDRAULIC BREAKER LUBRICATION	20-01
NITROGEN CHAMBER.	20-01
PARTS IDENTIFICATION	20-01
SPECIFICATIONS	20-01
TROUBLESHOOTING THE HYDRAULIC BREAKER.	20-01
2500/3500 HYDRAULIC BREAKER SERVICE	
CHECKING MOUNTING BOLT TORQUE.	30-01
DISASSEMBLY AND ASSEMBLY	30-01
HYDRAULIC BREAKER LUBRICATION	30-01
NITROGEN CHAMBER.	30-01
PARTS IDENTIFICATION	30-01
SPECIFICATIONS (2500)	30-01
SPECIFICATIONS (3500)	30-01
TROUBLESHOOTING THE HYDRAULIC BREAKER.	30-01
2560/3560 HYDRAULIC BREAKER SERVICE	
DISASSEMBLY AND ASSEMBLY	40-01
NITROGEN CHAMBER.	40-01
PARTS IDENTIFICATION	40-01
SPECIFICATIONS	40-01
TROUBLESHOOTING THE HYDRAULIC BREAKER.	40-01
2570/3570 HYDRAULIC BREAKER SERVICE	
CHECKING MOUNTING BOLT TORQUE.	50-01
DISASSEMBLY AND ASSEMBLY	50-01
HYDRAULIC BREAKER LUBRICATION	50-01
NITROGEN CHAMBER.	50-01
PARTS IDENTIFICATION	50-01
SPECIFICATIONS	50-01
TROUBLESHOOTING THE HYDRAULIC BREAKER.	50-01

CONTINUED ON NEXT PAGE



Thank you very much
for your reading.
Please click here
to get more information.