

Shop Manual

GALEO

D85 EX-15 E0

D85 PX-15 E0

BULLDOZER

SERIAL NUMBERS	D85EX-15E0	11001	and up
	D85PX-15E0	1201	and up

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2007 Komatsu
Printed in U.S.A.
Komatsu America Corp.

This Page Intentionally left Blank

BULLDOZER

D85EX-15E0

D85PX-15E0

Machine model	Serial number
---------------	---------------

D85EX-15E0	11001 and up
D85PX-15E0	1201 and up

00 Index and foreword

Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

O: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00060-02
00 Index and foreword	SEN00061-02
Index	SEN00069-02 ●
Foreword and general information	SEN00070-00
01 Specification	SEN00062-00
Specification and technical data	SEN00071-00
10 Structure, function and maintenance standard	SEN00063-00
Engine and cooling system	SEN00293-00
Power train, Part 1	SEN00295-00
Power train, Part 2	SEN00297-00
Undercarriage and frame	SEN00298-00
Hydraulic system, Part 1	SEN00299-00
Hydraulic system, Part 2	SEN00300-00
Hydraulic system, Part 3	SEN00302-00
Work equipment	SEN00305-00
Cab and its attachments	SEN00306-00
Electrical system	SEN00308-00
20 Standard value table	SEN00064-00
Standard service value table	SEN00629-00
30 Testing and adjusting	SEN00065-00
Testing and adjusting, Part 1	SEN00630-00
Testing and adjusting, Part 2	SEN00631-00
Testing and adjusting, Part 3	SEN00632-00
40 Troubleshooting	SEN00066-00
General information on troubleshooting	SEN00633-00
Troubleshooting by failure code (Display of code), Part 1	SEN00634-00
Troubleshooting by failure code (Display of code), Part 2	SEN00635-00
Troubleshooting by failure code (Display of code), Part 3	SEN00636-00
Troubleshooting by failure code (Display of code), Part 4	SEN00637-00
Troubleshooting of electrical system (E-mode)	SEN00638-00

Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00639-00
Troubleshooting of engine (S-mode)	SEN00640-00
50 Disassembly and assembly	SEN00067-00
General information on disassembly and assembly	SEN01263-00 ○
Engine and cooling system, Part 1	SEN01264-00 ○
Engine and cooling system, Part 2	SEN01265-00 ○
Power train, Part 1	SEN01266-00 ○
Power train, Part 2	SEN01267-00 ○
Undercarriage and frame, Part 1	SEN01268-00 ○
Undercarriage and frame, Part 2	SEN01269-00 ○
Hydraulic system	SEN01270-00 ○
Work equipment	SEN01271-00 ○
Cab and its attachments	SEN01272-00 ○
Electrical system	SEN01273-00 ○
90 Diagrams and drawings	SEN00068-01
Hydraulic diagrams and drawings	SEN00072-00
Electrical diagrams and drawings	SEN00073-01

Table of contents

00 Index and foreword	
Index	SEN00069-02
Composition of shop manual	2
Table of contents.....	4
Foreword and general information	SEN00070-00
Foreword and general information	2
Safety notice.....	2
How to read the shop manual.....	6
Explanation of terms for maintenance standard	8
Handling electric equipment and hydraulic component	10
How to read electric wire code.....	18
Method of disassembling and connecting push-pull type coupler	21
Standard tightening torque table.....	24
Conversion table.....	28
01 Specification	
Specification and technical data	SEN00071-00
Specification and technical data	2
Specification dimensions	2
Specifications.....	3
Weight table.....	11
Table of fuel, coolant and lubricants	16
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00293-00
Engine and cooling system	2
Engine mount.....	2
Cooling system	4
Cooling fan pump.....	6
Cooling fan motor	14
Power train, Part 1	SEN00295-00
Power train, Part 1.....	2
Power train.....	2
HSS system.....	4
General view of power train unit.....	6
Power train hydraulic piping drawing.....	8
Transmission control.....	9
Steering and brake control.....	10
Damper and universal joint.....	12
Torque converter and PTO.....	14
Transmission.....	20
Transmission clutch ECMV.....	32
Main relief valve and torque converter relief valve	37
Lubrication relief valve	39
Power train, Part 2	SEN00297-00
Power train, Part 2.....	2
Bevel gear shaft, HSS and brake	2
Brake valve.....	16
Final drive	22
Undercarriage and frame	SEN00298-00
Undercarriage and frame	2
Main frame.....	2

Suspension.....	4
Track frame.....	8
Idler cushion	10
Idler.....	12
Track roller.....	14
Carrier roller.....	16
Sprocket.....	18
Track shoe.....	20
Hydraulic system, Part 1	SEN00299-00
Hydraulic system, Part 1	2
Work equipment hydraulic piping diagram	2
PPC control piping diagram.....	5
Work equipment control.....	6
Hydraulic tank and filter	8
Scavenging pump.....	10
Power train and steering lubrication pump	11
HSS pump	12
HSS motor.....	30
Hydraulic system, Part 2	SEN00300-00
Hydraulic system, Part 2	2
Control valve.....	2
Self pressure reducing valve	36
Hydraulic system, Part 3	SEN00302-00
Hydraulic system, Part 3	2
Oil cooler bypass valve.....	2
PPC valve.....	4
Electric lever (steering).....	20
Quick drop valve.....	23
PPC lock valve	24
Accumulator.....	25
Work equipment	SEN00305-00
Work equipment.....	3
Cylinder stay	3
Blade	4
Cutting edge and end bit	6
Ripper.....	8
Hydraulic cylinder	10
Piston valve	12
Cab and its attachments	SEN00306-00
Cab and its attachments.....	2
Cab mount.....	2
Cab.....	3
Air conditioner.....	5
Electrical system	SEN00308-00
Electrical system	2
Monitor system	2
Monitor panel.....	4
Engine control.....	8
Engine control system	9
System components.....	10
CRI engine control system	20
Palm command control system	22
KOMTRAX terminal system.....	24
Sensor	26

20 Standard value table	
Standard service value table	SEN00629-00
Standard service value table	2
Standard service value table for engine	2
Standard service value table for chassis	3
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN00630-00
Testing and adjusting, Part 1	3
Tools for testing, adjusting, and troubleshooting	3
Measuring engine speed	5
Measuring intake air pressure (boost pressure)	8
Measuring exhaust temperature	10
Measuring exhaust gas color	12
Adjusting valve clearance	13
Measuring compression pressure	15
Measuring blow-by pressure	17
Measuring engine oil pressure	18
Handling of fuel system devices	19
Releasing residual pressure from fuel system	19
Testing fuel pressure	20
Handling of reduced cylinder mode operation	21
Handling of no injection cranking operation	21
Testing fuel return and leak amount	22
Bleeding air from fuel circuit	25
Testing fuel circuit for leakage	27
Testing and adjusting alternator belt tension	28
Testing and adjusting air conditioner compressor belt tension	29
Adjusting fuel control dial and decelerator pedal	30
Measuring power train oil pressure	32
Adjusting transmission speed sensor	37
Simple method to test brake performance	38
Adjusting brake pedal	39
Adjusting parking brake lever	41
Emergency escape method when power train has trouble	42
Adjusting clearance of idler	45
Inspecting wear of sprocket	46
Testing and adjusting track shoe tension	46
Testing and adjusting work equipment and HSS oil pressure	47
Testing control circuit basic pressure	51
Measuring PPC valve output pressure	52
Adjusting play of work equipment PPC valve	54
Checking parts which caused hydraulic drift of blade and ripper	55
Measuring internal leakage of work equipment cylinder	56
Bleeding air from work equipment cylinder	56
Releasing residual pressure in work equipment cylinder	57
Adjusting work equipment lock lever	58
Measuring fan motor speed	59
Measuring fan pump circuit pressure	60
Bleeding air from fan pump	61
Adjusting blade	62
Testing and adjusting operator cab	64
Testing and adjusting, Part 2	SEN00631-00
Testing and adjusting, Part 2	2
Special functions of monitor panel (EMMS)	2

Testing and adjusting, Part 3	SEN00632-00
Testing and adjusting, Part3.....	2
Handling of voltage circuit of engine controller.....	2
Adjustment method when controller has been replaced.....	2
Preparation work for troubleshooting for electrical system.....	4
Inspection procedure of diode.....	7
Pm Clinic service.....	8
How to start operation of KOMTRAX terminal.....	18
Lamp display of KOMTRAX terminal.....	21
40 Troubleshooting	
General information on troubleshooting	SEN00633-00
General information on troubleshooting.....	2
Points to remember when troubleshooting.....	2
How to proceed troubleshooting.....	3
Checks before troubleshooting.....	4
Classification and procedures of troubleshooting.....	5
How to distinguish wire code.....	8
Wiring table for connector pin numbers.....	11
T-adapter box and T-adapter table.....	34
Troubleshooting by failure code (Display of code), Part 1	SEN00634-00
Troubleshooting by failure code (Display of code), Part 1.....	3
Failure code table.....	3
Before troubleshooting by failure codes.....	10
Contents of troubleshooting table.....	12
Failure code [1500L0] Transmission clutch: Dual engagement.....	14
Failure code [15SAL1] Forward clutch: Fill signal is ON when command current is OFF.....	16
Failure code [15SALH] Forward clutch: Fill signal is OFF when command current is ON.....	18
Failure code [15SBL1] Reverse clutch: Fill signal is ON when command current is OFF.....	20
Failure code [15SBLH] Reverse clutch: Fill signal is OFF when command current is ON.....	22
Failure code [15SEL1] 1st clutch: Fill signal is ON when command current is OFF.....	24
Failure code [15SELH] 1st clutch: Fill signal is OFF when command current is ON.....	26
Failure code [15SFL1] 2nd clutch: Fill signal is ON when command current is OFF.....	28
Failure code [15SFLH] 2nd clutch: Fill signal is OFF when command current is ON.....	30
Failure code [15SGL1] 3rd clutch: Fill signal is ON when command current is OFF.....	32
Failure code [15SGLH] 3rd clutch: Fill signal is OFF when command current is ON.....	34
Failure code [AA10NX] Air cleaner: Clogged.....	36
Failure code [AB00MA] Abnormal battery charge: Malfunction.....	38
Failure code [B@BAZG] Engine oil: Oil pressure too low.....	38
Failure code [B@BCNS] Radiator coolant: Overheat.....	39
Failure code [B@BCZK] Radiator coolant: Level too low.....	39
Failure code [B@CENS] Power train oil: Overheat.....	40
Failure code [B@HANS] Hydraulic oil: Overheat.....	40
Failure code [CA111] Engine controller: Abnormality in controller.....	41
Failure code [CA115] Abnormal engine Ne and Bkup speed sensors: Abnormal speed sensor signal.....	42
Failure code [CA122] Charge pressure sensor too high: Excessively high voltage detected.....	44
Failure code [CA123] Charge pressure sensor too low: Excessively low voltage detected.....	46
Failure code [CA131] Decelerator pedal sensor too high: Excessively high voltage detected.....	48
Failure code [CA132] Decelerator pedal sensor too low: Excessively low voltage detected.....	50
Failure code [CA135] Oil pressure sensor too high: Excessively high voltage detected.....	52
Failure code [CA141] Oil pressure sensor too low: Excessively low voltage detected.....	54
Failure code [CA144] Coolant temperature sensor too high: Excessively high voltage detected.....	56
Failure code [CA145] Coolant temperature sensor too low: Excessively low voltage detected.....	58
Failure code [CA153] Charge temperature sensor too high: Excessively high voltage detected.....	60
Failure code [CA154] Charge temperature sensor too low: Excessively low voltage detected.....	62
Failure code [CA187] Sensor power source 2 too low: Low voltage detected.....	64
Failure code [CA221] Atmospheric pressure sensor too high: Excessively high voltage detected.....	66

Failure code [CA222] Atmospheric pressure sensor too low: Excessively low voltage detected....	68
Failure code [CA227] Sensor power source 2 too high: Excessively high voltage detected.....	70
Failure code [CA234] Engine over speed: Excessively high speed.....	72
Failure code [CA238] Abnormal power source for Ne speed sensor: Excessively low voltage detected.....	74
Failure code [CA263] Fuel temperature sensor too high: Excessively high voltage detected	76
Failure code [CA265] Fuel temperature sensor too low: Excessively low voltage detected	78
Failure code [CA271] PCV1 short circuit: Short circuit.....	79
Failure code [CA272] PCV1 disconnection: Disconnection	80
Failure code [CA273] PCV2 short circuit: Short circuit.....	81
Failure code [CA274] PCV2 disconnection: Disconnection	82
Troubleshooting by failure code (Display of code), Part 2	SEN00635-00
Troubleshooting by failure code (Display of code), Part 2.....	3
Failure code [CA322] Injector No. 1 system disconnection or short circuit: Disconnection, short circuit.....	3
Failure code [CA323] Injector No. 5 system disconnection or short circuit: Disconnection, short circuit.....	4
Failure code [CA324] Injector No. 3 system disconnection or short circuit: Disconnection, short circuit.....	5
Failure code [CA325] Injector No. 6 system disconnection or short circuit: Disconnection, short circuit.....	6
Failure code [CA331] Injector No. 2 system disconnection or short circuit: Disconnection, short circuit.....	7
Failure code [CA332] Injector No. 4 system disconnection or short circuit: Disconnection, short circuit.....	8
Failure code [CA342] Engine controller data matching error: Matching error	9
Failure code [CA351] Abnormal injector drive circuit: Abnormal circuit	10
Failure code [CA352] Sensor power source (1) too low: Excessively low voltage detected.....	12
Failure code [CA386] Sensor power source (1) too high: Excessively high voltage detected	14
Failure code [CA441] Power source voltage too low: Excessively low voltage detected.....	16
Failure code [CA442] Power source voltage too high: Excessively high voltage detected	16
Failure code [CA449] Common rail pressure too high (2): Excessively high pressure trouble occurred.....	17
Failure code [CA451] Common rail pressure sensor too high: Excessively high voltage detected	18
Failure code [CA452] Common rail pressure sensor too low: Excessively low voltage detected ...	20
Failure code [CA553] Common rail pressure too high (1): Excessively high pressure detected	20
Failure code [CA554] In-range error in common rail pressure sensor: In-range error	21
Failure code [CA559] Loss of pressure feed from supply pump (1): Loss of pressure feed detected	22
Failure code [CA689] Abnormal engine Ne speed sensor: Abnormal signal	26
Failure code [CA731] Abnormal engine Bkup speed sensor phase: Abnormal phase	28
Failure code [CA757] Loss of all engine controller data: Loss of all data	29
Failure code [CA778] Abnormal engine Bkup speed sensor: Abnormal Bkup signal	30
Failure code [CA1228] Abnormal EGR valve servo (1): EGR out of control.....	32
Failure code [CA1625] Abnormal EGR valve servo (2): EGR out of control.....	33
Failure code [CA1633] Abnormal KOMNET: Abnormal communication	34
Failure code [CA2185] Decelerator pedal sensor power source too high: Excessively high voltage detected.....	36
Failure code [CA2186] Decelerator pedal sensor power source too low: Excessively low voltage detected.....	37
Failure code [CA2249] Loss of pressure feed from supply pump (2): Loss of pressure feed detected	38
Failure code [CA2271] EGR valve lift sensor too high: Excessively high voltage detected.....	40
Failure code [CA2272] EGR valve lift sensor too low: Excessively low voltage detected.....	42
Failure code [CA2351] EGR valve solenoid drive short circuit: Short circuit.....	44
Failure code [CA2352] EGR valve solenoid drive disconnection: Disconnection	46
Failure code [CA2555] Intake air heater relay disconnection: Disconnection	47
Failure code [CA2556] Intake air heater relay short circuit: Short circuit	48

Troubleshooting by failure code (Display of code), Part 3	SEN00636-00
Troubleshooting by failure code (Display of code), Part 3.....	4
Failure code [D110KA] Battery relay: Disconnection.....	4
Failure code [D110KB] Battery relay: Short circuit.....	6
Failure code [D130KA] Neutral safety relay: Disconnection.....	8
Failure code [D130KB] Neutral safety relay: Short circuit.....	10
Failure code [D161KA] Back-up alarm relay: Disconnection.....	12
Failure code [D161KB] Back-up alarm relay: Short circuit.....	14
Failure code [D190KA] Engine controller ACC signal cutout relay: Disconnection.....	16
Failure code [D190KB] Engine controller ACC signal cutout relay: Short circuit.....	18
Failure code [D811KR] KOMTRAX controller CAN communication: Defective communication.....	20
Failure code [DAFRKR] Monitor panel CAN communication: Defective communication.....	24
Failure codes [DAQ0KT] and [DB30KT] Steering and transmission controller: Abnormal controller memory information.....	27
Failure code [DAQ1KK] [DB31KK] Main power source of steering and transmission controller: Power source voltage drop and input.....	28
Failure code [DAQ2KK] [DB32KK] Load power source of steering and transmission controller: Power source voltage drop and input.....	30
Failure codes [DAQ5KK] and [DB35KK] Steering and transmission controller sensor 5 V power source (1): Power source voltage drop and input.....	32
Failure code [DAQ6KK] [DB36KK] Steering and transmission controller sensor 24 V power source: Power source voltage drop and input.....	34
Failure codes [DAQ7KK] and [DB37KK] Steering and transmission controller sensor 5 V power source (2): Power source voltage drop and input.....	36
Failure code [DAQ9KQ] [DB39KQ] Steering and transmission controller model selection: Inconsistency in model select signal.....	38
Failure codes [DAQRKR] and [DB3RKR] Steering and transmission controller CAN communication: Defective communication.....	40
Failure code [DB2RKR] Engine controller CAN communication: Defective communication.....	44
Failure code [DB30KT] [DAQ0KT] Steering and transmission controller: Abnormal controller memory information.....	47
Failure code [DB31KK] [DAQ1KK] Main power source of steering and transmission controller: Power source voltage drop and input.....	47
Failure code [DB32KK] [DAQ2KK] Load power source of steering and transmission controller: Power source voltage drop and input.....	47
Failure codes [DB35KK] and [DAQ5KK] Steering and transmission controller sensor 5 V power source (1): Power source voltage drop and input.....	47
Failure code [DB36KK] [DAQ6KK] Steering and transmission controller sensor 24 V power source: Power source voltage drop and input.....	47
Failure codes [DB37KK] and [DAQ7KK] Steering and transmission controller sensor 5 V power source (2): Power source voltage drop and input.....	47
Failure codes [DB39KQ] and [DAQ9KQ] Steering and transmission controller model selection: Inconsistent model selection signal.....	47
Failure codes [DB3RKR] and [DAQRKR] Steering and transmission controller CAN communication: Defective communication.....	47
Failure code [DD12KA] Shift up switch: Disconnection.....	48
Failure code [DD12KB] Shift up switch: Short circuit.....	50
Failure code [DD13KA] Shift down switch: Disconnection.....	52
Failure code [DD13KB] Shift down switch: Short circuit.....	54
Failure codes [DD14KA] and [DDQ2KA] Parking lock switch: Disconnection.....	56
Failure codes [DD14KB] and [DDQ2KB] Parking lock switch: Short circuit.....	58
Failure codes [DDQ2KA] and [DD14KA] Parking lock switch: Disconnection.....	60
Failure codes [DDQ2KB] and [DD14KB] Parking lock switch: Short circuit.....	60
Failure code [DGS1KX] Hydraulic oil temperature sensor: Input signal is out of normal range.....	62
Failure code [DGT1KA] Power train oil temperature sensor: Disconnection.....	64
Failure code [DGT1KX] Power train oil temperature sensor: Input signal is out of normal range.....	66
Failure code [DH22KA] HSS and work equipment pump oil pressure sensor: Disconnection.....	68
Failure code [DH22KB] HSS and work equipment pump oil pressure sensor: Short circuit.....	70

Failure code [DK10KA] Fuel dial: Disconnection	72
Failure code [DK10KB] Fuel dial: Short circuit.....	74
Failure code [DK30KA] Steering potentiometer (1): Disconnection	76
Failure code [DK30KB] Steering potentiometer (1): Short circuit.....	78
Failure code [DK30KX] Steering potentiometer: Input signal is out of normal range	80
Failure code [DK30KZ] Steering potentiometer: Disconnection or short circuit (Double failure).....	80
Failure code [DK30L8] Steering potentiometer: Inconsistent analog signal.....	81
Failure code [DK31KA] Steering potentiometer (2): Disconnection	82
Failure code [DK31KB] Steering potentiometer (2): Short circuit.....	84
Failure code [DK40KA] Brake potentiometer: Disconnection.....	86
Failure code [DK40KB] Brake potentiometer: Short circuit.....	87
Failure code [DK55KX] Forward-reverse potentiometer: Input signal is out of normal range	88
Failure code [DK55KZ] Forward-reverse potentiometer: Disconnection or short circuit (Double failure).....	88
Failure code [DK55L8] Forward-reverse potentiometer: Inconsistent analog signal.....	89
Failure code [DK56KA] Forward-reverse potentiometer (1): Disconnection	90
Failure code [DK56KB] Forward-reverse potentiometer (1): Short circuit.....	92
Failure code [DK57KA] Forward-reverse potentiometer (2): Disconnection	94
Failure code [DK57KB] Forward-reverse potentiometer (2): Short circuit.....	96
Troubleshooting by failure code (Display of code), Part 4	SEN00637-00
Troubleshooting by failure code (Display of code), Part 4.....	3
Failure code [DKH1KA] [DKH1KX] Pitch angle sensor: Short circuit.....	3
Failure code [DKH1KB] [DKH1KX] Pitch angle sensor: Disconnection.....	4
Failure code [DKH1KX], [DKH1KA] or [DKH1KB] Pitch angle sensor: Input signal out of range	5
Failure code [DLT3KA] Transmission output speed sensor: Disconnection	6
Failure code [DLT3KB] Transmission output speed sensor: Short circuit.....	7
Failure code [DV00KB] Alarm buzzer: Short circuit.....	8
Failure code [DW7BKA] Fan reverse solenoid: Disconnection.....	9
Failure code [DW7BKB] Fan reverse solenoid: Short circuit	10
Failure code [DW7BKY] Fan reverse solenoid: Hot short circuit	11
Failure code [DWN1KA] HSS EPC solenoid right: Disconnection.....	12
Failure code [DWN1KB] HSS EPC solenoid right: Short circuit	13
Failure code [DWN1KY] HSS EPC solenoid right: Hot short circuit	14
Failure code [DWN2KA] HSS EPC solenoid left: Disconnection	15
Failure code [DWN2KB] HSS EPC solenoid left: Short circuit.....	16
Failure code [DWN2KY] HSS EPC solenoid left: Hot short circuit.....	17
Failure code [DWN5KA] Fan pump EPC solenoid: Disconnection.....	18
Failure code [DWN5KB] Fan pump EPC solenoid: Short circuit.....	19
Failure code [DWN5KY] Fan pump EPC solenoid: Hot short circuit.....	20
Failure code [DXA0KA] HSS and work equipment pump TVC solenoid: Disconnection.....	21
Failure code [DXA0KB] HSS and work equipment pump TVC solenoid: Short circuit	22
Failure code [DXA0KY] HSS and work equipment pump TVC solenoid: Hot short circuit	23
Failure code [DXH4KA] 1st clutch ECMV: Disconnection.....	24
Failure code [DXH4KB] 1st clutch ECMV: Short circuit	25
Failure code [DXH4KY] 1st clutch ECMV: Hot short circuit.....	26
Failure code [DXH5KA] 2nd clutch ECMV: Disconnection	27
Failure code [DXH5KB] 2nd clutch ECMV: Short circuit.....	28
Failure code [DXH5KY] 2nd clutch ECMV: Hot short circuit.....	29
Failure code [DXH6KA] 3rd clutch ECMV: Disconnection	30
Failure code [DXH6KB] 3rd clutch ECMV: Short circuit.....	31
Failure code [DXH6KY] 3rd clutch ECMV: Hot short circuit.....	32
Failure code [DXH7KA] Reverse clutch ECMV: Disconnection.....	33
Failure code [DXH7KB] Reverse clutch ECMV: Short circuit.....	34
Failure code [DXH7KY] Reverse clutch ECMV: Hot short circuit.....	35
Failure code [DXH8KA] Forward clutch ECMV: Disconnection	36
Failure code [DXH8KB] Forward clutch ECMV: Short circuit.....	37
Failure code [DXH8KY] Forward clutch ECMV: Hot short circuit.....	38

Troubleshooting of electrical system (E-mode)	SEN00638-00
Troubleshooting of electrical system (E-mode).....	3
Before troubleshooting of electrical system.....	3
Contents of troubleshooting table.....	5
E-1 Engine does not start.....	6
E-2 The preheater does not operate.....	9
E-3 The monitor panel does not light up at all when the starting switch is turned ON.....	12
E-4 When the starting switch is turned ON, the monitor panel completely remains lighted and does not go out.....	14
E-5 When the starting switch is turned ON, the radiator coolant level caution lamp flashes.....	15
E-6 While the engine is running, the battery charge level caution lamp flashes.....	16
E-7 While the engine is running, the emergency warning item flashes.....	18
E-8 While the preheater is operating, the preheating pilot lamp does not light up.....	20
E-9 The coolant temperature gauge does not indicate correctly.....	22
E-10 Power train oil temperature gauge does not indicate correctly.....	24
E-11 Hydraulic oil temperature gauge does not indicate properly.....	26
E-12 Fuel gauge does not indicate properly.....	28
E-13 Gear speed and engine speed are not indicated properly.....	29
E-14 The preset mode and service meter do not indicate properly.....	29
E-15 The warning lamp does not flash or does not go out.....	30
E-16 The alarm buzzer does not sound or does not stop.....	32
E-17 Auto shift down does not operate or does not release.....	34
E-18 Buzzer cancel switch does not work.....	36
E-19 The information switch does not work.....	38
E-20 The manual mode does not operate or does not release.....	40
E-21 The monitor panel cannot be set in the service mode or cannot be set out of the service mode.....	42
E-22 The back-up alarm does not sound.....	44
E-23 The head lamp and rear lamp do not light up.....	46
E-24 The horn does not sound or does not stop.....	49
E-25 Malfunction of wipers.....	50
E-26 Washer does not spray water.....	66
E-27 The air conditioner does not operate.....	71
E-28 KOMTRAX system does not operate normally.....	76
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00639-00
Troubleshooting of hydraulic and mechanical system (H-mode).....	3
Contents of troubleshooting table.....	3
H-1 There is no travel power (no drawbar pull).....	4
H-2 Machine does not move (at 2nd or 3rd speed).....	5
H-3 Machine does not move at any gear speed.....	6
H-4 Machine travels only in one direction, forward or reverse.....	7
H-5 When gear is shifted or travel direction is changed, large time lag is made.....	8
H-6 Machine cannot be steered (Machine does not turn leftward or rightward).....	9
H-7 Steering speed or power is low.....	9
H-8 Brake does not work.....	10
H-9 Overheat of power train oil.....	11
H-10 Abnormal sound comes out from around HSS and work equipment pump or HSS motor.....	12
H-11 All work equipment speeds are slow.....	13
H-12 All work equipments do not move.....	14
H-13 Blade lift speed is slow or lacks power.....	14
H-14 Blade tilt speed is slow or lacks power.....	15
H-15 Ripper lift speed is slow or lacks power.....	15
H-16 Excessive hydraulic drift of blade lift.....	16
H-17 Excessive hydraulic drift of blade tilt.....	16
H-18 Excessive hydraulic drift of ripper lift.....	17

Troubleshooting of engine (S-mode)	SEN00640-00
Troubleshooting of engine (S-mode).....	3
Method of using troubleshooting charts.....	3
S-1 Starting performance is poor.....	6
S-2 Engine does not start.....	8
S-3 Engine does not pick up smoothly.....	12
S-4 Engine stops during operations.....	13
S-5 Engine does not rotate smoothly.....	14
S-6 Engine lacks output (or lacks power).....	15
S-7 Exhaust smoke is black (incomplete combustion).....	16
S-8 Oil consumption is excessive (or exhaust smoke is blue).....	17
S-9 Oil becomes contaminated quickly.....	18
S-10 Fuel consumption is excessive.....	19
S-11 Oil is in coolant (or coolant spurts back, or coolant level goes down).....	20
S-12 Oil pressure drops.....	21
S-13 Oil level rises (water, fuel in oil).....	22
S-14 Coolant temperature becomes too high (overheating).....	24
S-15 Abnormal noise is made.....	25
S-16 Vibration is excessive.....	26

50 Disassembly and assembly

General information on disassembly and assembly	SEN01263-00
General information on disassembly and assembly.....	2
How to read this manual.....	2
Coating materials list.....	4
Special tool list.....	7
Sketch of special tool.....	11
Engine and cooling system, Part 1	SEN01264-00
Engine and cooling system, Part 1.....	2
Removal and installation of fuel supply pump assembly.....	2
Removal and installation of cylinder head assembly.....	8
Removal and installation of fuel injector assembly.....	20
Removal and installation of engine front seal.....	25
Removal and installation of engine rear seal.....	27
Removal and installation of engine oil pan.....	31
Engine and cooling system, Part 2	SEN01265-00
Engine and cooling system, Part 2.....	2
Removal and installation of engine assembly.....	2
Removal and installation of radiator assembly.....	6
Removal and installation of fan drive assembly.....	9
Removal and installation of fan motor assembly.....	11
Removal and installation of fuel tank assembly.....	12
Removal and installation of damper assembly.....	14
Removal and installation of engine hood assembly.....	16
Power train, Part 1	SEN01266-00
Power train, Part 1.....	2
Removal and installation of power train unit assembly.....	2
Disconnection and connection of power train unit assembly.....	7
Disassembly and assembly of PTO assembly.....	11
Disassembly and assembly of torque converter assembly.....	17
Disassembly and assembly of TORQFLOW transmission assembly.....	21
Power train, Part 2	SEN01267-00
Power train, Part 2.....	2
Disassembly and assembly of HSS assembly.....	2
Removal and installation of final drive assembly.....	21
Disassembly and assembly of final drive assembly.....	23

Undercarriage and frame, Part 1	SEN01268-00
Undercarriage and frame, Part 1	2
Removal and installation of track frame assembly	2
Removal and installation of idler assembly	5
Disassembly and assembly of idler assembly	7
Removal and installation of recoil spring assembly	11
Disassembly and assembly of recoil spring assembly	13
Removal and installation of track roller assembly	17
Disassembly and assembly of track roller assembly	18
Removal and installation of carrier roller assembly	21
Disassembly and assembly of carrier roller assembly	22
Undercarriage and frame, Part 2	SEN01269-00
Undercarriage and frame, Part 2	2
Expansion and installation of track shoe assembly	2
Whole disassembly and assembly of track shoe	6
Removal and installation of pivot shaft assembly	25
Removal and installation of equalizer bar assembly	26
Disassembly and assembly of equalizer bar assembly	28
Hydraulic system	SEN01270-00
Hydraulic system	2
Removal and installation of work equipment control valve assembly	2
Disassembly and assembly of work equipment control valve assembly	5
Removal and installation of HSS and work equipment pump assembly	6
Removal and installation of power train and lubricating oil pump assembly	8
Removal and installation of fan pump assembly	9
Removal and installation of scavenging pump assembly	10
Removal and installation of HSS motor assembly	11
Disassembly and assembly of hydraulic cylinder assembly	12
Work equipment	SEN01271-00
Work equipment	2
Removal and installation of blade assembly	2
Disassembly and assembly of ripper assembly	4
Cab and its attachments	SEN01272-00
Cab and its attachments	2
Removal and installation of ROPS guard assembly	2
Removal and installation of operator's cab assembly	3
Removal and installation of operator's cab glass (Stuck glass)	9
Removal and installation of floor frame assembly	18
Electrical system	SEN01273-00
Electrical system	2
Removal and installation of engine controller	2
Removal and installation of steering and transmission controller	4
Removal and installation of KOMTRAX terminal	5
90 Diagrams and drawings	
Hydraulic diagrams and drawings	SEN00072-00
Hydraulic diagrams and drawings	2
Power train hydraulic circuit diagram	2
Hydraulic circuit diagram	3
Electrical diagrams and drawings	SEN00073-01
Electrical diagrams and drawings	3
Electrical circuit diagram	3
Connector arrangement diagram	5

D85EX, PX-15E0 Bulldozer

Form No. SEN00069-02

BULLDOZER

D85EX-15E0

D85PX-15E0

Machine model Serial number

D85EX-15E0	11001 and up
D85PX-15E0	1201 and up

00 Index and foreword

Foreword and general information

Foreword and general information	2
Safety notice	2
How to read the shop manual	6
Explanation of terms for maintenance standard.....	8
Handling electric equipment and hydraulic component.....	10
How to read electric wire code	18
Method of disassembling and connecting push-pull type coupler.....	21
Standard tightening torque table	24
Conversion table	28

Foreword and general information

(Rev. 2005/09)

Safety notice

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol **▲** is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

▲ Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine.

- 1) Before carrying out any greasing or repairs, read all the safety plates stuck to the machine. For the locations of the safety plates and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.

- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.

Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.

- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.


4. Precautions for sling work and making signs

- 1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is seen well from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.
 - Do not stand under the load.
 - Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slings with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

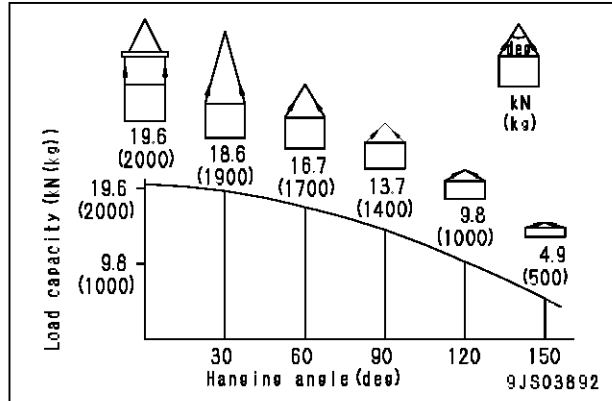

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
 - Slings near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

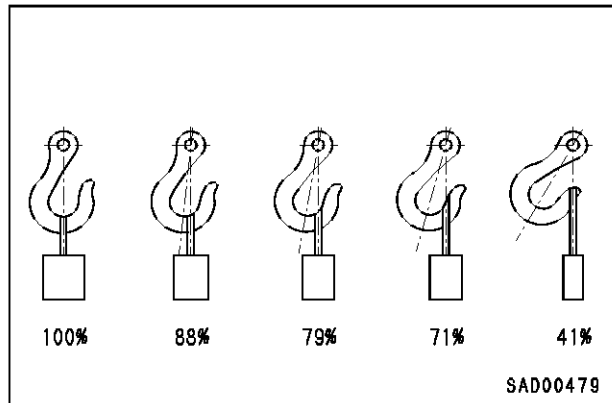

- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
 - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

