



2040 and 2240 Tractor



TECHNICAL MANUAL 2040 and 2240 Tractor

TM1221 (01NOV80) English



John Deere Tractor Works
TM1221 (01NOV80)

LITHO IN U.S.A.
ENGLISH



2040 and 2240 Tractors (Serial No. 350,000L-)

Technical Manual
TM-1221 (Nov-80)

CONTENTS

SECTION 10 — GENERAL

- Group 00 — Specifications and Special Tools
- Group 05 — Pre-delivery, Delivery and After-Sales Inspections
- Group 10 — Lubrication and Periodic Service
- Group 15 — Engine and Tractor Tune-Up
- Group 20 — Tractor Separation

SECTION 20 — ENGINE

- Group 00 — Specifications and Special Tools
- Group 05 — General Information, Diagnosing Malfunctions
- Group 10 — Cylinder Head and Camshaft
- Group 15 — Cylinder Block, Liners, Pistons and Connecting Rods
- Group 20 — Crankshaft, Main Bearings and Flywheel
- Group 25 — Timing Gear Train
- Group 30 — Engine Lubrication System
- Group 35 — Engine Cooling System

SECTION 30 — FUEL SYSTEM

- Group 00 — Specifications and Special Tools
- Group 05 — Diagnosing Malfunctions
- Group 10 — Fuel Tank, Fuel Transfer Pump and Fuel Filter
- Group 15 — Roto Diesel Fuel Injection Pump
- Group 20 — Fuel Injection Nozzles
- Group 25 — Ether Starting Aid
- Group 30 — Speed Control Linkage
- Group 35 — Air Intake System

SECTION 40 — ELECTRICAL SYSTEM

- Group 00 — Specifications and Special Tools
- Group 05 — Description and Diagnosing Malfunctions
- Group 10 — Wiring Harnesses
- Group 15 — Controls and Instruments
- Group 20 — Lighting Systems
- Group 25 — Wiring Diagram
- Group 30 — Starting Motor
- Group 35 — Alternator

000

Copyright © 1980
DEERE & COMPANY
Moline, Illinois

All rights reserved

CONTENTS — Continued**SECTION 50 — POWER TRAIN**

- Group 00 — Specifications and Special Tools
- Group 05 — Engine Clutches and Clutch Linkages
- Group 10 — Hi-Lo Shift Unit
- Group 15 — Reverser Transmission
- Group 20 — Synchronized Transmission and Transmission Oil Pump
- Group 25 — Collar Shift Transmission and Transmission Oil Pump
- Group 30 — Differential
- Group 35 — Final Drives
- Group 40 — Independent PTO Shaft
- Group 45 — Continuous-Running PTO
- Group 50 — Mechanical Front Wheel Drive

SECTION 60 — STEERING SYSTEM AND BRAKES

- Group 00 — Specifications and Special Tools
- Group 05 — Power Steering
- Group 10 — Brakes

SECTION 70 — HYDRAULIC SYSTEM

- Group 00 — Specifications and Special Tools
- Group 05 — Hydraulic System Operation
- Group 06 — Hydraulic System Tests
- Group 10 — Oil Reservoir, Filter, Valves and Oil Cooler
- Group 15 — Hydraulic Pump
- Group 20 — Rockshaft
- Group 25 — Selective Control Valves and Breakaway Coupler
- Group 30 — Remote Cylinder

SECTION 80 — MISCELLANEOUS

- Group 00 — Specifications
- Group 05 — Front Axle
- Group 10 — Belt Pulley
- Group 15 — Front and Rear Wheels
- Group 20 — ROLL-GARD® Protective Structure
- Group 25 — Operator's Station

Section 10

GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 00 — SPECIFICATIONS AND SPECIAL TOOLS		GROUP 05 — PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS	
Specifications	10-00-3	Tractor Storage	10-05-1
Serial Numbers	10-00-3	Predelivery Inspection	10-05-2
Model Numbers	10-00-3	Delivery Inspection	10-05-8
Engine	10-00-3	After-Sales Inspection	10-05-8
Engine Clutch	10-00-4		
Cooling System	10-00-4	GROUP 10 — LUBRICATION AND SERVICE	
Fuel System	10-00-4	Lubrication and Service	10-10-1
Electrical System	10-00-5		
Synchronized Transmission	10-00-5	GROUP 15 — TUNE-UP	
Collar Shift Transmission	10-00-5	Preliminary Engine Testing	10-15-1
Hi-Lo Shift Unit	10-00-5	Dynamometer Test	10-15-1
Reverser Transmission	10-00-5	Testing Compression Pressure	10-15-2
Differential and Final Drives	10-00-6	Tune-up	10-15-3
Differential Lock	10-00-6	Checking Tractor Operation	10-15-8
PTO	10-00-6	Standard Torques	10-15-9
Mechanical Front Wheel Drive	10-00-7		
Power Steering	10-00-7	GROUP 20 — TRACTOR SEPARATION	
Foot Brakes	10-00-7	Separating Between Engine and	
Handbrake	10-00-7	Tractor Front End	10-20-1
Hydraulic System	10-00-7	Removal and Installation of	
Capacities	10-00-7	Engine	10-20-5
Travel Speeds	10-00-8	Removal and Installation of	
Front and Rear Wheels	10-00-8	Clutch Housing	10-20-7
Dimensions and Weights	10-00-8	Removal and Installation of	
Predelivery, Delivery and		Final Drives	10-20-9
After-Sales Inspections	10-00-10	Removal and Installation of	
Lubrication and Service	10-00-11	Rockshaft	10-20-10
Tune-up	10-00-12		
Tractor Separation	10-00-13		
Standard Torques	10-00-14		
Special Tools	10-00-16		



Thank you very much
for your reading.
Please click here
to get more information.