

# 110 and 112 Lawn and Garden Tractors Serial No. (100,001 - 250,000)



JOHN DEERE

## SERVICE MANUAL

 
110 and 112 Lawn and Garden Tractors  
Serial No. (100,001 - 250,000)

SM2088 (01NOV69) English



John Deere  
Lawn & Grounds Care Division  
SM2088 (01NOV69)

LITHO IN U.S.A.  
ENGLISH





# Service Manual

## 110 AND 112 LAWN AND GARDEN TRACTORS

(Serial No. 100,001- )

### CONTENTS

#### SECTION 10 - GENERAL

- Group 5 - Tractor Identification
- Group 10 - Specifications
- Group 15 - Tune-Up and Adjustment
- Group 20 - Fuel and Lubricants

#### SECTION 20 - ENGINE

##### **Kohler Engines**

- Group 5 - General Information
- Group 10 - Cylinder Head, Valves and Breather
- Group 15 - Piston, Crankshaft, Main Bearings and Flywheel
- Group 20 - Camshaft, Tappets and Governor

##### **Tecumseh Engine**

- Group 25 - General Information
- Group 30 - Cylinder Head, Valves and Breather
- Group 35 - Piston, Crankshaft, Main Bearings and Flywheel
- Group 40 - Camshaft, Tappets and Governor

#### SECTION 30 - FUEL SYSTEM

- Group 5 - General Information
- Group 10 - Carburetor
- Group 15 - Air Cleaner
- Group 20 - Sediment Bowl, Fuel Strainer and Gas Tank
- Group 25 - Fuel Pump (112 Kohler Only)

#### SECTION 40 - ELECTRICAL SYSTEM

- Group 5 - General Information
- Group 10 - Cranking System
- Group 15 - Ignition System (Magneto)
- Group 20 - Ignition System (Battery)
- Group 25 - Ignition System (Solid State)
- Group 30 - Charging System

#### SECTION 50 - POWER TRAIN

- Group 5 - General Information
- Group 10 - Clutch, Brake and Variable Speed Drive
- Group 15 - 4-Speed Transaxle


#### SECTION 60 - HYDRAULIC SYSTEM

- Group 5 - General Information
- Group 10 - Control Valve
- Group 15 - Pump
- Group 20 - Cylinder

#### SECTION 70 - MISCELLANEOUS

- Group 5 - Steering Linkage
- Group 10 - Front Wheels and Axles
- Group 15 - Lift Linkage

## INTRODUCTION

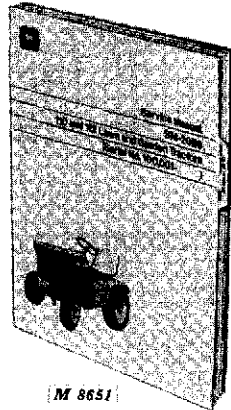

*Service Manual*

This service manual contains service and maintenance information for John Deere 110 and 112 Lawn and Garden Tractors (Serial No. 100,001- ).

The manual is divided into sections. Each section pertains to a certain component or operational system of the tractor. The information is divided into groups within each section.

Emphasis is placed on diagnosing malfunctions, analysis and testing. Diagnosing malfunctions includes possible troubles, their causes and how to correct them. Under specific components these troubles are analyzed to help you understand what is causing the problem. In this way, you can eliminate the cause

rather than just replace parts and have the same problem keep recurring.

Specifications and special tools are found at the end of the Groups for easy reference.

This manual can be kept in its own cover, or it can be removed and filed in your service manual rack or placed behind the service manual tab in your Lawn and Garden Parts and Service Binder.

Whenever new or revised pages are provided, insert them into your manual as soon as you receive them. Your service manual will always be up-to-date and be a valuable asset in your service department.

---

# Section 10 GENERAL

## Group 5 TRACTOR IDENTIFICATION

### TABLE OF CONTENTS

	Page		Page
<b>GROUP 5 - TRACTOR IDENTIFICATION</b>		<b>GROUP 15 - TUNE-UP AND ADJUSTMENT</b>	
Serial Numbers .....	5-2	Preliminary Engine Testing .....	15-1
Vintage Information .....	5-2	Minor Tune-Up Guide .....	15-1
Serial Number Plates .....	5-3	Major Tune-Up Guide .....	15-2
Identification Codes .....	5-3		
<b>GROUP 10 - SPECIFICATIONS</b>		<b>GROUP 20 - FUEL AND LUBRICANTS</b>	
Engine Specifications .....	10-1	Fuel .....	20-1
Electrical System .....	10-1	Lubricants .....	20-1
Capacities .....	10-1	Capacities .....	20-1
Fuel and Lubricant .....	10-2	Type of Lubricant .....	20-2
Transmission and Axle .....	10-2	Service Intervals .....	20-2
Brakes, Clutch and Steering .....	10-2	Changing Crankcase Oil .....	20-3
Curb Weights .....	10-2	Changing Transaxle Oil .....	20-3
Tire Specifications and Tractor Dimensions ..	10-3	Grease Fitting Locations .....	20-4
Bolt Torque Chart .....	10-4	Repack PTO Clutch Bearing .....	20-4
Set Screw Seating Torque Chart .....	10-4		



Thank you very much  
for your reading.  
Please click here  
to get more information.