

# 200, 208, 210, 212, 214 and 216 Lawn and Garden Tractors



JOHN DEERE

## SERVICE MANUAL

 
200, 208, 210, 212, 214 and 216 Lawn  
and Garden Tractors

SM2105 (01OCT81) English



John Deere  
Lawn & Grounds Care Division  
SM2105 (01OCT81)

LITHO IN U.S.A.  
ENGLISH





# JOHN DEERE 200, 208, 210, 212, 214 AND 216 LAWN AND GARDEN TRACTORS

Service Manual  
SM-2105 (June-81)

## TABLE OF CONTENTS

### SECTION 10 - GENERAL

- Group 5 - Tractor Identification
- Group 10 - Specifications
- Group 15 - Fuel and Lubricants
- Group 20 - Tune-Up and Adjustments

### SECTION 20 - ENGINE

- Group 5 - General Information
- Group 10 - Cylinder Head, Valves and Breather
- Group 15 - Minor Engine Recondition
- Group 20 - Major Engine Recondition
- Group 25 - Specifications

### SECTION 30 - FUEL SYSTEM

- Group 5 - General Information
- Group 10 - Carburetor
- Group 15 - Air Cleaner
- Group 20 - Fuel Strainer and Fuel Tank
- Group 25 - Fuel Pump
- Group 30 - Specifications

### SECTION 40 - ELECTRICAL SYSTEM

- Group 5 - General Information
- Group 10 - Cranking System
- Group 15 - Ignition System
- Group 20 - Charging System
- Group 25 - Lights
- Group 30 - Electric Lift
- Group 35 - Electric PTO Clutch

### SECTION 50 - POWER TRAIN

- Group 5 - General Information
- Group 10 - Clutch and Variable Speed Drive
- Group 15 - Brakes
- Group 20 - 4-Speed Transaxle
- Group 25 - PTO Clutch

### SECTION 60 - HYDRAULIC LIFT SYSTEM

- Group 5 - General Information
- Group 10 - Control Valve
- Group 15 - Pump
- Group 20 - Cylinder

### SECTION 70 - MISCELLANEOUS

- Group 5 - Steering Linkage
- Group 10 - Front Wheels and Axles
- Group 15 - Lift Linkage

### SECTION 80 - SPECIAL SERVICE TOOLS

- Group 5 - Engine Convenience Service Tools
- Group 10 - Tractor Essential Service Tools
- Group 15 - Tractor Convenience Service Tools

### SECTION 90 - TRACTOR ATTACHMENTS

- Group 5 - 37A Snow Thrower
- Group 10 - 39 and 47 Rotary Mowers
- Group 15 - 541A PTO
- Group 20 - 31 Rotary Tiller

00A

*(All information, illustrations, and specifications contained in this service manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.)*

Litho in U.S.A.

Copyright © 1980  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved

## INTRODUCTION

This service manual contains service and maintenance information for the John Deere 200, 208, 210, 212, 214 and 216 Lawn and Garden Tractors and attachments through 1982 model (SN 195,001-).


The manual is divided into sections. Each section pertains to a certain component or operational system of the tractor or attachment. The information is divided into groups within each section.

Emphasis is placed on diagnosing malfunctions, analysis and testing. Diagnosing malfunctions includes possible troubles, their causes and how to correct them. Under specific components these troubles are analyzed to help you understand what is causing the problem. In this way, you can eliminate the cause rather than just replace the part.

Metric equivalents have been included, where applicable, throughout this service manual.

Specifications and special tools are found in the last group of each section.

Whenever new or revised pages are provided, insert them into your manual as soon as you receive them. Your service manual will always be up-to-date and be a valuable asset in your service department.

 **This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.**

### FOR YOUR CONVENIENCE

Vertical lines appear in the margins of many of the pages. These lines identify new material and revised information that affects specifications, procedures, and other important instructions.

---

# Section 10 GENERAL

## Group 5 TRACTOR IDENTIFICATION

### CONTENTS

	Page		Page
<b>GROUP 5 - TRACTOR IDENTIFICATION</b>		<b>GROUP 20 - TUNE-UP AND ADJUSTMENTS</b>	
Serial Numbers .....	5-2	Purpose of Tune-Up and Adjustments .....	20-1
Tractor .....	5-2	Visual Inspection .....	20-1
Engine .....	5-2	Engine Tune-Up .....	20-1
Transaxle .....	5-2	Tractor Adjustments .....	20-1
Identification Codes .....	5-2	Tune-Up Guide .....	20-1
Tire Codes .....	5-2	Tune-Up and Adjustments .....	20-2
<b>GROUP 10 - SPECIFICATIONS</b>		Clean Engine Shrouds and	
Engine Specifications .....	10-1	Cooling Fins .....	20-2
Battery Specifications .....	10-2	Clean or Replace Air Filter	
Tractor Specifications .....	10-2	Element .....	20-2
Tire Specifications .....	10-3	Tractor Fuel Strainer .....	20-2
Rear Wheel Weight Bolt Size Chart .....	10-3	Check and Clean Engine Crankcase	
Bolt Torque Chart .....	10-4	Breather .....	20-2
Set Screw Seating Torque Chart .....	10-4	Check Spark Plug Gap .....	20-3
<b>GROUP 15 - FUEL AND LUBRICANTS</b>		Check Ignition Breaker Points and	
Fuel .....	15-1	Engine Timing .....	20-3
Lubricants .....	15-1	Adjust Carburetor .....	20-5
Engine Crankcase .....	15-1	Check Engine Speed .....	20-5
Transaxle .....	15-1	Change Engine Crankcase Oil .....	20-6
Tractor Grease Fittings .....	15-1	Check or Change Transaxle Lubricant .....	20-6
Hydraulic System (Optional Equip.) .....	15-1	Lubricate Grease Fittings .....	20-6
Capacities .....	15-1	Repack PTO Clutch Bearing .....	20-6
Service Intervals .....	15-2	Service Battery .....	20-6
Lubricating Grease Fittings .....	15-2	Check Tire Pressure .....	20-6
Changing Engine Crankcase Oil .....	15-3	Check Operation and Condition of:	
Changing Transaxle Lubricant .....	15-3	Lights .....	20-6
Repacking PTO Clutch Bearing .....	15-4	Lift System .....	20-6
Lubricating Integral Hitch Grease		Steering .....	20-6
Fitting .....	15-4	Brakes .....	20-6
Checking Hydraulic Lift System Fluid		Belts and Equipment .....	20-6
Level .....	15-4		



Thank you very much  
for your reading.  
Please click here  
to get more information.