



200 Lawn and Garden Tractors

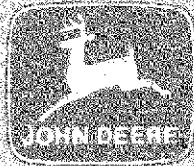

SERVICE
MANUAL

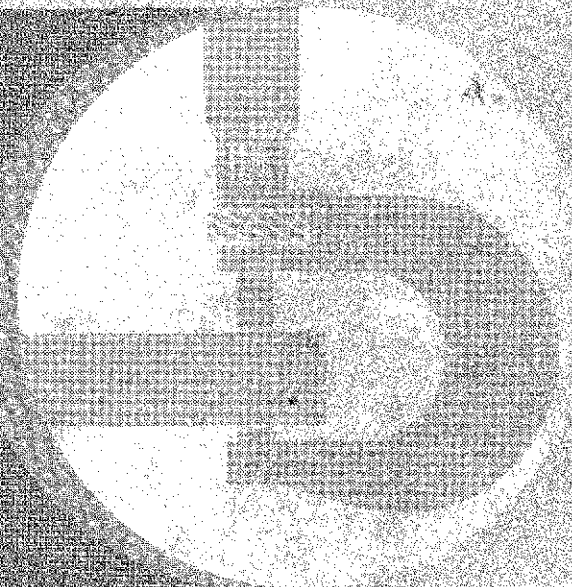

John Deere Horizon Works
SM-2105 (Oct-81)

Litho in U.S.A.

JOHN DEERE 200, 208, 210, 212, 214 AND 216 LAWN AND GARDEN TRACTORS

Service Manual
SM-2105 (June-81)

TABLE OF CONTENTS

SECTION 10 - GENERAL

- Group 5 - Tractor Identification
- Group 10 - Specifications
- Group 15 - Fuel and Lubricants
- Group 20 - Tune-Up and Adjustments

SECTION 20 - ENGINE

- Group 5 - General Information
- Group 10 - Cylinder Head, Valves and Breather
- Group 15 - Minor Engine Recondition
- Group 20 - Major Engine Recondition
- Group 25 - Specifications

SECTION 30 - FUEL SYSTEM

- Group 5 - General Information
- Group 10 - Carburetor
- Group 15 - Air Cleaner
- Group 20 - Fuel Strainer and Fuel Tank
- Group 25 - Fuel Pump
- Group 30 - Specifications

SECTION 40 - ELECTRICAL SYSTEM

- Group 5 - General Information
- Group 10 - Cranking System
- Group 15 - Ignition System
- Group 20 - Charging System
- Group 25 - Lights
- Group 30 - Electric Lift
- Group 35 - Electric PTO Clutch

SECTION 50 - POWER TRAIN

- Group 5 - General Information
- Group 10 - Clutch and Variable Speed Drive
- Group 15 - Brakes
- Group 20 - 4-Speed Transaxle
- Group 25 - PTO Clutch

SECTION 60 - HYDRAULIC LIFT SYSTEM

- Group 5 - General Information
- Group 10 - Control Valve
- Group 15 - Pump
- Group 20 - Cylinder

SECTION 70 - MISCELLANEOUS

- Group 5 - Steering Linkage
- Group 10 - Front Wheels and Axles
- Group 15 - Lift Linkage

SECTION 80 - SPECIAL SERVICE TOOLS

- Group 5 - Engine Convenience Service Tools
- Group 10 - Tractor Essential Service Tools
- Group 15 - Tractor Convenience Service Tools

SECTION 90 - TRACTOR ATTACHMENTS

- Group 5 - 37A Snow Thrower
- Group 10 - 39 and 47 Rotary Mowers
- Group 15 - 541A PTO
- Group 20 - 31 Rotary Tiller

00A

(All information, illustrations, and specifications contained in this service manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.)

Litho in U.S.A.

Copyright © 1980
DEERE & COMPANY
Moline, Illinois
All rights reserved

INTRODUCTION

This service manual contains service and maintenance information for the John Deere 200, 208, 210, 212, 214 and 216 Lawn and Garden Tractors and attachments through 1982 model (SN 195,001-).

The manual is divided into sections. Each section pertains to a certain component or operational system of the tractor or attachment. The information is divided into groups within each section.

Emphasis is placed on diagnosing malfunctions, analysis and testing. Diagnosing malfunctions includes possible troubles, their causes and how to correct them. Under specific components these troubles are analyzed to help you understand what is causing the problem. In this way, you can eliminate the cause rather than just replace the part.

Metric equivalents have been included, where applicable, throughout this service manual.

Specifications and special tools are found in the last group of each section.

Whenever new or revised pages are provided, insert them into your manual as soon as you receive them. Your service manual will always be up-to-date and be a valuable asset in your service department.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

FOR YOUR CONVENIENCE

Vertical lines appear in the margins of many of the pages. These lines identify new material and revised information that affects specifications, procedures, and other important instructions.

MANUFACTURER'S IDENTIFICATION		PAGE NUMBER		DATE		REASON FOR DEFECT	
1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96
97	98	99	100				

CLASSIFICATION		SERIAL NUMBER	
1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68
69	70	71	72
73	74	75	76
77	78	79	80
81	82	83	84
85	86	87	88
89	90	91	92
93	94	95	96
97	98	99	100

Section 10 GENERAL Group 5 TRACTOR IDENTIFICATION

CONTENTS

	Page		Page
GROUP 5 - TRACTOR IDENTIFICATION		GROUP 20 - TUNE-UP AND ADJUSTMENTS	
Serial Numbers	5-2	Purpose of Tune-Up and Adjustments	20-1
Tractor	5-2	Visual Inspection	20-1
Engine	5-2	Engine Tune-Up	20-1
Transaxle	5-2	Tractor Adjustments	20-1
Identification Codes	5-2	Tune-Up Guide	20-1
Tire Codes	5-2	Tune-Up and Adjustments	20-2
GROUP 10 - SPECIFICATIONS		Clean Engine Shrouds and	
Engine Specifications	10-1	Cooling Fins	20-2
Battery Specifications	10-2	Clean or Replace Air Filter	
Tractor Specifications	10-2	Element	20-2
Tire Specifications	10-3	Clean Fuel Strainer	20-2
Rear Wheel Weight Bolt Size Chart	10-3	Check and Clean Engine Crankcase	
Bolt Torque Chart	10-4	Breather	20-2
Set Screw Seating Torque Chart	10-4	Check Spark Plug Gap	20-3
GROUP 15 - FUEL AND LUBRICANTS		Check Ignition Breaker Points and	
Fuel	15-1	Engine Timing	20-3
Lubricants	15-1	Adjust Carburetor	20-5
Engine Crankcase	15-1	Check Engine Speed	20-5
Transaxle	15-1	Change Engine Crankcase Oil	20-6
Tractor Grease Fittings	15-1	Check or Change Transaxle Lubricant	20-6
Hydraulic System (Optional Equip.)	15-1	Lubricate Grease Fittings	20-6
Capacities	15-1	Repack PTO Clutch Bearing	20-6
Service Intervals	15-2	Service Battery	20-6
Lubricating Grease Fittings	15-2	Check Tire Pressure	20-6
Changing Engine Crankcase Oil	15-3	Check Operation and Condition of:	
Changing Transaxle Lubricant	15-3	Lights	20-6
Repacking PTO Clutch Bearing	15-4	Lift System	20-6
Lubricating Integral Hitch Grease		Steering	20-6
Fitting	15-4	Brakes	20-6
Checking Hydraulic Lift System Fluid		Belts and Equipment	20-6
Level	15-4		



Thank you very much
for your reading.
Please click here
to get more information.