

2054, 2056, 2058 2064 and 2066 Combines



John Deere Werke Zweibrücken
TM4505 (05DEC00)

Printed in Germany
ENGLISCH

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Dealer Presentation Sheet

SUPPLEMENT (OCT96) FOR TECHNICAL MANUAL TM4505 2054, 2056, 2058, 2064 AND 2066 COMBINES

Please insert the revised and new Groups in the correct sequence in your Technical Manual, discarding all original pages which have been revised.

The following Sections or Groups have been revised or are new:

Section 40	Group 05	revised
	Group 20	completely new
Section 50	Group 20	revised
Section 70	Group 20	completely new
	Group 21	completely new
Section 120	Group 30	completely new
	Group 35	completely new
Section 130	Group 05	completely new
	Group 10	completely new
Section 240	Group 10	revised*
	Group 11	completely new
	Group 15AG	completely new
	Group 15AH	completely new
	Group 16A	completely new
	Group 16H	completely new
	Group 16T	completely new
	Group 16V	completely new
	Group 16Z	completely new
	Group 16AA	completely new
	Group 16AB	completely new
Section 270	Group 20	revised

New or revised modules within the Groups listed above can be recognized by the broken left and right module frame lines.

** One leaf only. Group 240-10 now applies only up to Serial No. 062721. However, only the first leaf is supplied, as the information remains unchanged. We recommend that you write the words "up to Serial No. 062721" on each page of Group 240-10.*

ZX,DLR,XZCO96 -19-01OCT96

Dealer Presentation Sheet

Contents

SECTION 05—Safety

Group 05—Safety Information

SECTION 10—General

Group 05—Introduction

Group 10—Torques for Hardware

SECTION 20—Engine

Group 05—Removing and Installing Engine

SECTION 30—Fuel, Air Intake and Cooling Systems

Group 05—Fuel System

Group 10—Air Intake System

Group 15—Cooling System

SECTION 40—Electrical System

Group 05—Connectors

Group 10—Alternator

Group 15—Starting Motor

Group 20—Main Electrical System

SECTION 50—Power Train

Group 05—Intermediate Transmission

Group 10—Transmission and Differential

Group 15—Planetary Final Drives

Group 20—Final Drives

Group 21—Hillmaster Final Drives

Group 25—Hydrostatic Ground Speed Drive

SECTION 60—Brakes, Steering, Rear Axle

Group 05—Brake Operating Assembly

Group 10—Brakes

Group 15—Hydrostatic Steering

Group 20—Rear Axle

SECTION 70—Hydraulic System

Group 05—Accumulators

Group 10—Triple Hydraulic Pump

Group 15—Electromagnetic Control Valve

Group 20—Hydraulic Cylinders

Group 21—Hillmaster Hydraulic Cylinder

SECTION 80—Miscellaneous

Group 05—Bearings and Shafts

Group 10—Drive Belts

Group 15—Drive Chains

Group 20—Side Guard

SECTION 90—Operator's Cab and Air Conditioning

Group 05—Air Conditioning System - R134a

Group 10—Operator's Cab Heating System

SECTION 110—Feeder House

Group 05—Removing Feeder House

SECTION 120—Separator and Cleaning Unit

Group 05—Cylinder Drive Reduction Gear

Group 10—Threshing Cylinder

Group 30—Variable Cylinder Drive

Group 35—Cylinder Drive and Reduction Gear

SECTION 130—Grain Recovery and Unloading System

Group 05—Tailings Elevator

Group 10—Clean Grain Elevator

SECTION 230—Fuel, Air Intake and Cooling Systems

Group 05—Fuel System

SECTION 240—Electrical System

Group 05—General Information

Group 06—Test Equipment

Group 10—Functional Schematics & Harness Diagrams, up to Ser.No. 062721

Group 11—Functional Schematics & Harness Diagrams, from Ser.No. 062722

Group 15A—Current Supply/Starting Motor to Ser.No. 062721

Group 16A—Current Supply/Starting Motor from Ser.No. 062722

Group 15B—Cold Weather Starting Aid

Group 15C—Engine Shut-Off Device

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM4505-19-05DEC00

COPYRIGHT© 1996
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1995, 1994, 1992 Deere & Company



Thank you very much
for your reading.
Please click here
to get more information.