



2940 Tractor



TECHNICAL MANUAL

2940
Tractor

TM1220 (01MAR83) English



John Deere Tractor Works
TM1220 (01MAR83)

LITHO IN U.S.A.
ENGLISH



2940 TRACTOR TECHNICAL MANUAL TM-1220 (MAY-82)

CONTENTS

SECTION 10 - GENERAL

- Group 00 - Specifications and Special Tools
- Group 05 - Predelivery, Delivery, and After-Sales Inspections
- Group 10 - Lubrication and Service
- Group 15 - Tune-Up
- Group 20 - Tractor Separation

SECTION 20 - ENGINE

- Group 00 - Specifications and Special Tools
- Group 05 - General Information, Diagnosing Malfunctions
- Group 10 - Cylinder Head, Valves and Camshaft
- Group 15 - Cylinder Block, Liners, Pistons and Rods
- Group 20 - Crankshaft, Main Bearings and Flywheel
- Group 25 - Timing Gear Train
- Group 30 - Engine Lubrication System
- Group 35 - Engine Cooling System

SECTION 30 - FUEL SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - General Information, Diagnosing Malfunctions
- Group 10 - Fuel Tank, Transfer Pumps, and Filter
- Group 15 - Roto Diesel Fuel Injection Pump
- Group 20 - Fuel Injection Nozzles
- Group 25 - Ether Starting Aids
- Group 30 - Speed Control Linkage
- Group 35 - Air Intake System

SECTION 40 - ELECTRICAL SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description and Diagnosing Malfunctions
- Group 10 - Wiring Harnesses
- Group 15 - Controls and Instruments
- Group 20 - Lighting System
- Group 25 - Wiring Diagram
- Group 30 - Starting Motor
- Group 35 - Alternator

SECTION 50 - POWER TRAIN

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Operation and Lubrication System
- Group 10 - Clutch Operating Assemblies
- Group 15 - Engine Clutches
- Group 20 - Hi-Lo Shift Unit
- Group 25 - Transmission Shift Linkage
- Group 30 - Synchronized Transmission and Transmission Oil Pump
- Group 35 - Differential
- Group 40 - Final Drive
- Group 45 - Independent PTO
- Group 50 - Mechanical Front Wheel Drive

SECTION 60 - STEERING SYSTEM AND BRAKES

- Group 00 - Specifications and Special Tools
- Group 05 - Steering System
- Group 10 - Brakes

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1982
DEERE & COMPANY
Moline, Illinois
All rights reserved
Previous Edition
Copyright® 1980 Deere & Company

CONTENTS - Continued**SECTION 70 - HYDRAULIC SYSTEM**

- Group 00 - Specifications and Special Tools
- Group 05 - Hydraulic System Operation and Tests
- Group 10 - Oil Reservoir, Filter, Valves and Oil Cooler
- Group 15 - Hydraulic Pump
- Group 20 - Rockshaft
- Group 25 - Selective Control Valve and Breakaway Coupler
- Group 30 - Remote Cylinder

SECTION 80 - MISCELLANEOUS

- Group 00 - Specifications
- Group 05 - Front Axle
- Group 10 - Front and Rear Wheels

SECTION 90 - OPERATOR'S STATION

- Group 00 - Specifications and Special Tools
- Group 05 - Air Conditioning System
- Group 10 - Cab Ventilation and Heating
- Group 15 - Seats
- Group 20 - Sound Gard Body
- Group 25 - Roll-Gard Protective Structure

Section 10 GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 00 - SPECIFICATIONS AND SPECIAL TOOLS		GROUP 05 - PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS	
Specifications	10-00-3	Tractor Storage	10-05-1
Serial Numbers	10-00-3	Predelivery Inspection	10-05-2
Model Numbers	10-00-3	Delivery Inspection	10-05-8
Engine	10-00-3	After-Sales Inspection	10-05-9
Engine Clutch	10-00-4		
Cooling System	10-00-4	GROUP 10 - LUBRICATION AND SERVICE	
Fuel System	10-00-4	Lubrication and Service	10-10-1
Electrical System	10-00-4		
Synchronized Transmission	10-00-4	GROUP 15 - TUNE-UP	
Hi-Lo Shift Unit	10-00-4	Preliminary Engine Testing	10-15-1
Differential and Final Drives	10-00-5	Dynamometer Test	10-15-1
Differential Lock	10-00-5	Testing Compression Pressure	10-15-2
PTO	10-00-5	Tune-Up	10-15-3
Mechanical Front Wheel Drive	10-00-5	Checking Tractor Operation	10-15-8
Hydrostatic Steering	10-00-6	Standard Torques	10-15-9
Foot Brakes	10-00-6		
Handbrake	10-00-6	GROUP 20 - TRACTOR SEPARATION	
Hydraulic System	10-00-6	Separating between Engine and	
Capacities	10-00-6	Tractor Front End	10-20-1
Travel Speeds	10-00-6	Removal and Installation of Engine	10-20-5
Front and Rear Wheels	10-00-6	Removal and Installation of	
Dimensions and Weights	10-00-6	Clutch Housing	10-20-7
Predelivery, Delivery and		Removal and Installation of	
After-Sales Inspections	10-00-7	Final Drives	10-20-9
Lubrications and Service	10-00-8	Removal and Installation of	
Tune-up	10-00-9	Rockshaft	10-20-11
Tractor Separation	10-00-10	Removal of Sound-Gard Body	10-20-13
Standard Torques	10-00-11	Installation of Sound-Gard Body	10-20-17
Special Tools	10-00-13		



Thank you very much
for your reading.
Please click here
to get more information.