

# 300D, 310D, 315D Backhoe Loaders Repair

## TECHNICAL MANUAL TM1497 17JUL02 (ENGLISH)

For complete service information also see:

300D,310D,315D Backhoe Loaders Operation and Test (Complete) . . . . .	TM1496
300D,310D,315D Backhoe Loaders Repair (Complete) . . . . .	TM1497



# Contents

## SECTION 00—General Information

- Group 0001—Safety Information
- Group 0002—General Specifications
- Group 0003—Torque Values
- Group 0004—Fuels And Lubricants

## SECTION 01—Wheels

- Group 0110—Powered Wheels And Fastenings
- Group 0120—Non-Powered Wheels And Fastenings

## SECTION 02—Axles And Suspension Systems

- Group 0225—Input Drive Shafts And U-Joints
- Group 0230—Non-Powered Wheel Axles
- Group 0240—Powered Wheel Axle (MFWD)
- Group 0250—Axle Shaft, Bearings, And Reduction Gears
- Group 0299—Dealer Fabricated Tools

## SECTION 03—Transmission

- Group 0300—Removal And Installation
- Group 0315—Controls Linkage
- Group 0325—Input Drive Shafts And U-Joints
- Group 0350—Gears, Shafts, Bearings, And Power Shift Clutch
- Group 0360—Hydraulic System
- Group 0399—Dealer Fabricated Tools

## SECTION 04—Engine

- Group 0400—Removal And Installation

## SECTION 05—Engine Auxiliary Systems

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling Systems
- Group 0515—Speed Controls
- Group 0520—Intake System
- Group 0560—External Fuel Supply System

## SECTION 06—Torque Converter

- Group 0651—Turbine, Gears And Shaft

## SECTION 09—Steering System

- Group 0960—Hydraulic System

## SECTION 10—Service Brakes

- Group 1011—Active Elements
- Group 1060—Hydraulic System
- Group 1099—Dealer Fabricated Tools

## SECTION 11—Park Brake

- Group 1111—Active Elements
- Group 1160—Hydraulic System

## SECTION 16—Electrical Systems

- Group 1671—Batteries, Support And Cables
- Group 1672—Alternator, Regulator And Charging System Wiring
- Group 1673—Lighting System
- Group 1674—Wiring Harness And Switches
- Group 1675—System Controls
- Group 1676—Instruments And Indicators
- Group 1677—Motors And Actuators

## SECTION 17—Frames, Chassis Or Supporting Structure

- Group 1740—Frame Installation
- Group 1749—Chassis Weights

## SECTION 18—Operator's Station

- Group 1800—Removal And Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat And Seat Belt
- Group 1830—Heating And Air Conditioning
- Group 1899—Dealer Fabricated Tools

## SECTION 19—Sheet Metal And Styling

- Group 1910—Hood And Engine Enclosure
- Group 1913—Miscellaneous Shields
- Group 1921—Grille And Grille Housing
- Group 1927—Fenders

## SECTION 20—Safety, Convenience And Miscellaneous

- Group 2001—Radio
- Group 2004—Horn And Warning Devices

## SECTION 21—Main Hydraulic System

- Group 2160—Hydraulic System

## SECTION 31—Loader

- Group 3100—Remove And Install
- Group 3102—Bucket

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2002  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright © 1994, 1993, 1991

# tm1497 - 300D, 310D, 315D Backhoe Loaders Repair


## Foreword

---

### Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

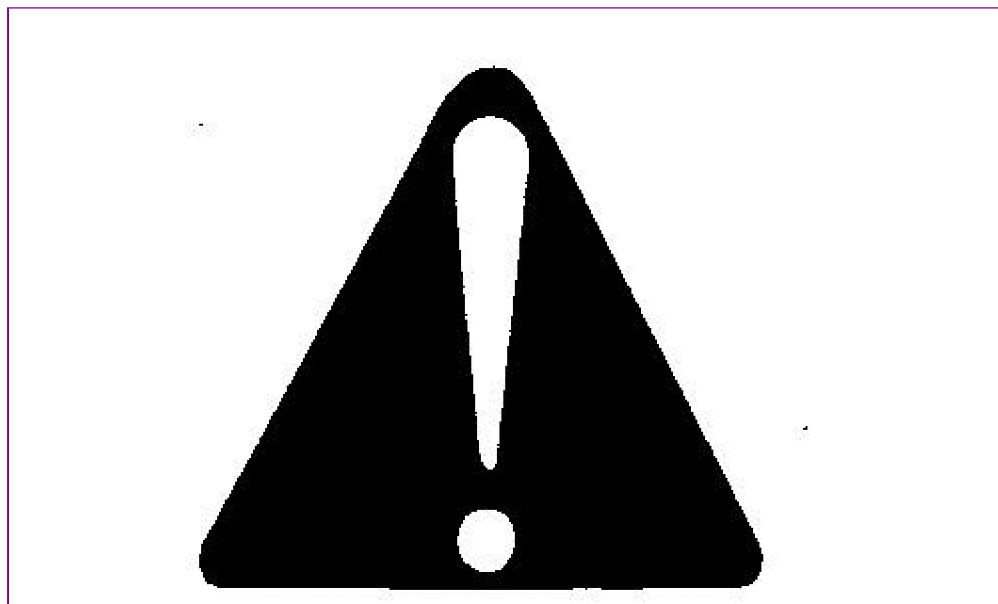

T81389-UN: Символ сигнала безопасности

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

See DB1990 Service Publications Catalog to order a complete Technical Manual (TM) or a Technical Manual Section (TMS). A complete Repair manual includes the following sections:

- TMS149700 Manual includes:
  - Section 00 General Information
- TMS149701 Manual includes:
  - Section 01 Wheels
  - Section 02 Axles and Suspension Systems
  - Section 03 Transmission
  - Section 04 Engine
  - Section 05 Engine Auxiliary Systems
  - Section 06 Torque Converter
- TMS149709 Manual includes:

- Section 09 Steering System
  - Section 10 Service Brakes
  - Section 11 Park Brake
- TMS149716 Manual includes:
  - Section 16 Electrical Systems
- TMS149717 Manual includes:
  - Section 17 Frame or Supporting Structure
  - Section 18 Operator's Station
  - Section 19 Sheet Metal and Styling
  - Section 20 Safety and Convenience
- TMS149721 Manual includes:
  - Section 21 Main Hydraulic System
  - Section 31 Loader
  - Section 33 Backhoe


---

TX310DIFC-19-1994/10/12

## tm1497 - 300D, 310D, 315D Backhoe Loaders Repair Handle Fluids Safely-Avoid Fires

---

### Handle Fluids Safely-Avoid Fires

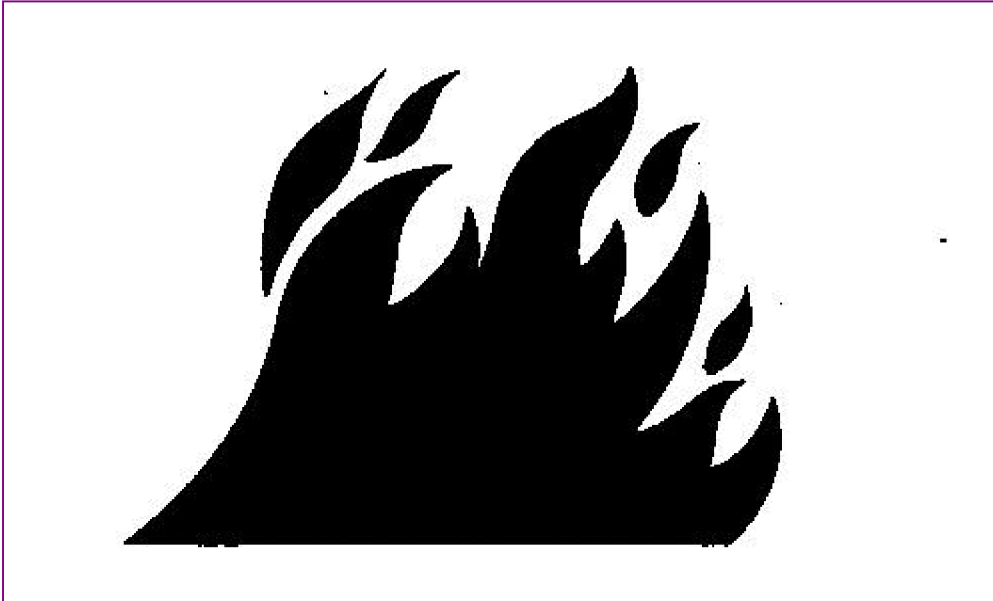

TS227-UN: Avoid Fires

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.

---

DX,FLAME-19-1998/09/29



Thank you very much  
for your reading.  
Please click here  
to get more information.