

310SG and 315SG Backhoe Loader Repair

TECHNICAL MANUAL 310SG, 315SG Backhoe Loader TM1884 16SEP11 (ENGLISH)

For complete service information also see:

310SG and 315SG Backhoe Loader Operation and Test	TM1883
310G, 310SG, 315SG (S.N. —910055) Backhoe Loader.....	OMT166699
310G, 310SG (S.N. 910056—910056—948698, S.N. 2000—2000) Backhoe Loader.....	
POWERTECH®4.5 L & 6.8 L Diesel Engines—Base Engine	CTM104
POWERTECH®4.5 L & 6.8 L Diesel Engines—Mechanical Fuel Systems	CTM207
POWERTECH®4.5 L & 6.8 L Diesel Engines—Level 12 Electronic Fuel System with DE10 Pump	CTM331
Alternators and Starting Motors	CTM77
Front Wheel Drive Axles—AS and MS Series	CTM4687
SERVICE ADVISOR™System Computer Connection.....	T133991
100 Series Hydraulic Cylinders	CTM103519
120 Series Hydraulic Cylinders	CTM114319
125 Series Hydraulic Cylinders	CTM109319
Specifications Manual.....	SP458

PDF



DOWNLOAD



Worldwide Construction
And Forestry Division

LITHO IN U.S.A.

Contents

Section 00—General Informations

Group 01—Safety Information

Section 01—Wheels

Group 0110—Powered or Non-Powered Wheels and Fastenings

Section 02—Axles and Suspension Systems

Group 0225—Input Drive Shafts and U-Joints

Group 0230—Non-Powered Wheel Axles

Group 0240—Powered Wheel Axle (MFWD)

Group 0250—Axle Shaft, Bearings and Reduction Gears

Section 03—Transmission

Group 0300—Removal and Installation

Group 0315—Controls Linkage

Group 0325—Input Drive Shafts and U-Joint

Group 0350—Gears, Shafts, Bearings, and Powershift Clutches

Group 0360—Hydraulic System

Section 04—Engine

Group 0400—Removal and Installation

Section 05—Engine Auxiliary Systems

Group 0505—Cold Weather Starting Aid

Group 0510—Cooling System

Group 0515—Speed Controls

Group 0520—Intake System

Group 0530—Exhaust System

Group 0560—External Fuel Supply System

Section 06—Torque Converter

Group 0651—Turbine, Gears and Shaft

Section 09—Steering System

Group 0960—Hydraulic System

Section 10—Service Brakes

Group 1011—Active Elements

Group 1060—Hydraulic System

Section 11—Park Brake

Group 1111—Active Elements

Section 16—Electrical Systems

Group 1671—Batteries, Support, and Cables

Group 1672—Alternator, Regulator and Charging System Wiring

Group 1674—Wiring Harness and Switches

Group 1676—Instruments and Indicators

Group 1677—Motors and Actuators

Section 17—Frames, Chassis or Supporting Structure

Group 1740—Frame Installation

Group 1749—Chassis Weights

Section 18—Operator's Station

Group 1800—Removal and Installation

Group 1810—Operator Enclosure

Group 1821—Seat and Seat Belt

Group 1830—Heating and Air Conditioning

Section 19—Sheet Metal and Styling

Group 1910—Hood and Engine Enclosure

Group 1913—Miscellaneous Shields

Group 1921—Grille and Grille Housing

Group 1927—Fenders

Section 20—Safety, Convenience and Miscellaneous

Group 2001—Radio

Group 2004—Horn and Warning Devices

Section 21—Main Hydraulic System

Group 2160—Hydraulic System

Section 31—Loader

Group 3100—Loader

Group 3102—Bucket

Group 3115—Control Linkages

Group 3160—Hydraulic System

Section 33—Backhoe

Group 3302—Bucket

Group 3315—Control Linkage

Group 3340—Frames

Group 3360—Hydraulic System

Section 99—Dealer Fabricated Tool

Group 9900—Dealer Fabricated Tool

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2011
DEERE & COMPANY
Moline, Illinois
All rights reserved.

A John Deere ILLUSTRATION © Manual
Previous Editions

Copyright © 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2009, 2010


tm1884 - 310SG and 315SG Backhoe Loader Repair

Foreword

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

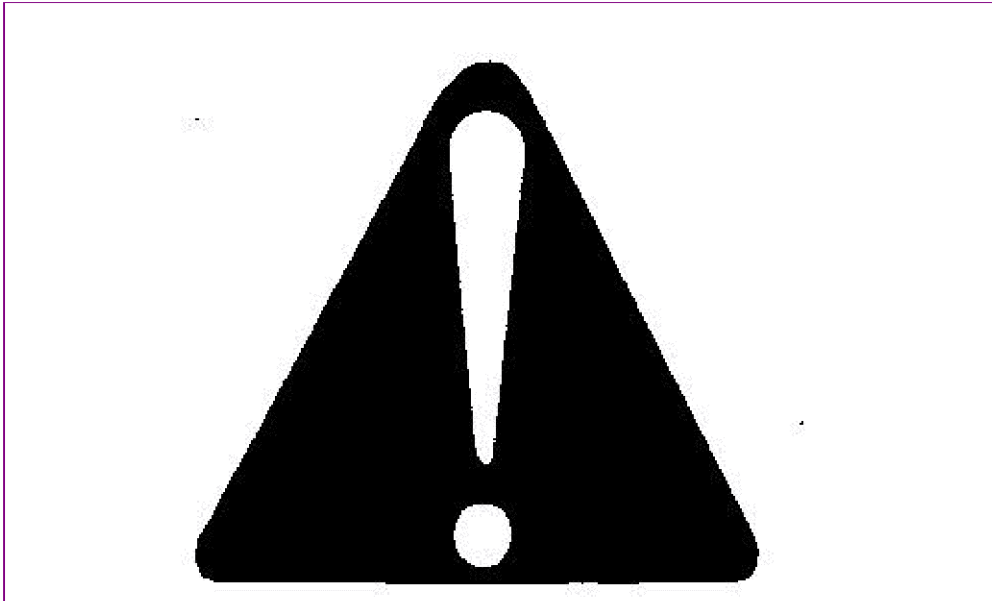

T81389-UN: Символ сигнала безопасности

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

TX03399.0001836-19-01 SEP06

**tm1884 - 310SG and 315SG Backhoe Loader Repair
 Technical Information Feedback Form**

Technical Information Feedback Form

We need your help to continually improve our technical publications. Please copy this page and FAX or mail your comments, ideas and improvements.

-: Technical Manual Fax

SEND TO: John Deere Dubuque Works
 P.O. Box 538
 Attn: Publications Supervisor, Dept. 303
 Dubuque, IA 52004-0538

FAX NUMBER: 563-589-5800

Ideas, Comments (Please State Page Number):

OVERALL, how would you rate the quality of this publication? (Check one)

	Poor			Fair			Good			Very Good			Excellent
1	2	3	4	5	6	7	8	9	10				

Company Name:

Technician Name:

Address:

Phone:

Fax No.:

Dealer Acct. No.:

THANK YOU!

TX,TM,FAX-19-03JUL01



Thank you very much
for your reading.
Please click here
to get more information.