

350C, 350D Crawler Bulldozer 350C, 355D Crawler Loader



JOHN DEERE

TECHNICAL MANUAL

 
350C, 350D Crawler Bulldozer 350C,
355D Crawler Loader

TM1115 (01NOV86) English



John Deere Dubuque Works
TM1115 (01NOV86)

LITHO IN U.S.A.
ENGLISH



350C AND 350D CRAWLER BULLDOZERS 350C AND 355D CRAWLER LOADERS TECHNICAL MANUAL TM-1115 (NOV-86)

SECTION AND GROUP CONTENTS

SECTION 1—GENERAL INFORMATION

- Group I—Introduction and Safety
- Group II—Specifications
- Group III—Torque Values
- Group IV—Fuels and Lubricants
- Group V—Inspection Procedures

SECTION 1—TRACKS

- Group 0130—Track Systems
- Group 0199—Specifications and Special Tools

SECTION 2—AXLES AND SUSPENSION SYSTEMS

- Group 0201—Drive Axle Housing and Support
- Group 0210—Differential or Bevel Drive
- Group 0225—Input Drive Shafts
- Group 0250—Axle Shaft, Bearings and Reduction Gears
- Group 0299—Specifications and Special Tools

SECTION 3—TRANSMISSION

- Group 0315—Controls
- Group 0341—Housings and Covers
- Group 0350—Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360—Transmission Hydraulics
- Group 0399—Specifications and Special Tools

SECTION 4—ENGINES

- Group 0401—Crankshaft and Main Bearings
- Group 0402—Camshafts and Valve Actuating Means
- Group 0403—Connecting Rods and Pistons
- Group 0404—Cylinder Block (Liners)

SECTION 4—ENGINES—CONTINUED

- Group 0405—Carburetor
- Group 0406—Governor
- Group 0407—Engine Oiling System
- Group 0408—Ventilating System
- Group 0409—Cylinder Head and Valves
- Group 0410—Exhaust Manifold
- Group 0411—Ignition System
- Group 0413—Fuel Injection System
- Group 0414—Intake Manifold
- Group 0415—Engine Balancer
- Group 0416—Turbocharger
- Group 0417—Water Pump
- Group 0418—Thermostats, Housings and Piping
- Group 0419—Engine Oil Cooler
- Group 0420—Fuel Filter
- Group 0421—Fuel Transfer Pump
- Group 0422—Starting System
- Group 0433—Flywheel, Housing and Fasteners
- Group 0499—Specifications and Special Tools

SECTION 5—ENGINE AUXILIARY SYSTEMS

- Group 0505—Cold Weather Starting Aids
- Group 0510—Engine Cooling Systems
- Group 0520—Intake System
- Group 0560—External Fuel Supply Systems
- Group 0599—Specifications and Special Tools

SECTION 15—EQUIPMENT ATTACHING

- Group 1511—Drawbar
- Group 1520—Hitches and Hitch Pins
- Group 1599—Specifications and Special Tools

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. Whenever applicable, specifications and design information are in accordance with SAE and ICED standards.

Copyright© 1986
DEERE & COMPANY
Moline, Illinois
All Rights Reserved
Previous Editions
A JOHN DEERE ILLUSTRATION

Previous Editions
Copyright© 1984 Deere & Company
Copyright© 1983 Deere & Company
Copyright© 1980 Deere & Company
Copyright© 1978 Deere & Company
Copyright© 1976 Deere & Company
Copyright© 1974 Deere & Company

T64;1115 K13 131086

SECTION AND GROUP CONTENTS—CONTINUED**SECTION 16—ELECTRICAL SYSTEMS**

- Group 1671—Batteries, Support and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1673—Vehicle Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1699—Specifications and Special Tools

SECTION 17—CRAWLER MAIN FRAME

- Group 1741—Crawler Main Frame
- Group 1746—Frame Bottom Guard
- Group 1749—Chassis Weights
- Group 1799—Specifications and Special Tools

SECTION 18—OPERATOR'S STATION

- Group 1806—Safety Equipment
- Group 1808—Comfort and Convenience Items
- Group 1810—Operator Enclosure
- Group 1821—Seat
- Group 1823—Instruments and Indicators
- Group 1824—External Engine Speed Controls
- Group 1899—Specifications and Special Tools

SECTION 19—SHEET METAL

- Group 1910—Hood or Engine Enclosure
- Group 1921—Grille and Grille Housing

SECTION 21—MAIN HYDRAULIC SYSTEM

- Group 2160—Hydraulic System
- Group 2199—Specifications and Special Tools

SECTION 30—WINCH

- Group 3015—Controls Linkage
- Group 3041—Housing and Mounting Structure
- Group 3050—Winch Drive and Clutches
- Group 3060—Winch Hydraulic System
- Group 3099—Specifications and Special Tools

SECTION 31—LOADER

- Group 3102—Buckets
- Group 3103—Forks
- Group 3115—Controls Linkage
- Group 3140—Loader Frames
- Group 3160—Loader Hydraulics
- Group 3199—Specifications and Special Tools

SECTION 32—DOZER

- Group 3201—Blade
- Group 3215—Controls Linkage
- Group 3241—Main Frame
- Group 3243—Moveable Frames
- Group 3399—Specifications and Special Tools

SECTION 33—9250 BACKHOE

- Group 3302—Bucket
- Group 3315—Controls Linkage
- Group 3340—Frames
- Group 3360—Hydraulic System
- Group 3399—Specifications and Special Tools

SECTION 33A—9300 BACKHOE

- Group 3302—Bucket
- Group 3315—Controls Linkage
- Group 3340—Frames
- Group 3360—Hydraulic System
- Group 3399—Specifications and Special Tools

SECTION 33B—9550 BACKHOE

- Group 3302—Bucket
- Group 3315—Controls Linkage
- Group 3340—Frames
- Group 3360—Hydraulic System
- Group 3399—Specifications and Special Tools

SECTION 37—LOG ARCH

- Group 3740—Frames

SECTION 40—WINCH DRIVE

- Group 4015—PTO Control
- Group 4051—Gears, Shafts and Bearings

SECTION 41—MISCELLANEOUS FUNCTION MECHANICAL DRIVES

- Group 4158—Output Shaft or Pulley
- Group 4199—Specifications and Special Tools

SECTION 42—GROUND CONDITIONING TOOL

- Group 4201—Teeth and Shanks
- Group 4240—Frame
- Group 4260—Hydraulic System
- Group 4299—Specifications and Special Tools

SECTION 90—SYSTEM TESTING

- Group 9005—Operational Checkout Procedure
- Group 9010—Engine
- Group 9015—Electrical System
- Group 9020—Power Train
- Group 9025—Hydraulic System
- Group 9025A—Hydraulic System (Analyzer)
- Group 9030—Miscellaneous Components
- Group 9035—Specifications and Special Tools

INTRODUCTION

This manual is part of a total service support program.

FOS Manuals—reference


Technical Manuals—machine service

Component Manuals—component service

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand alone manuals covering multiple machine applications.

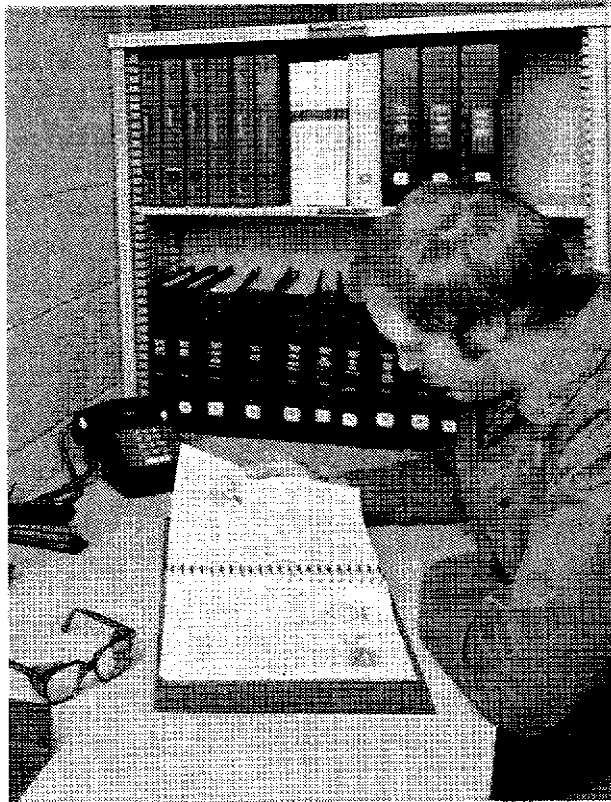

AB6:RW5559 053:INTRO2 030785

FEATURES OF THIS TECHNICAL MANUAL

John Deere ILLUSTRATION format emphasizing illustrations and concise instructions in easy-to-use modules.

Emphasis on diagnosis, analysis, and testing so you can understand the problem and correct it.


Diagnostic information presented with the most logical and easiest to isolate problems first to help you identify the majority of routine failures quickly.

Step-by-step instructions for teardown and assembly.

Summary listing at the beginning of each group of all applicable specifications, wear tolerances, torque values, essential tools, and materials needed to do the job.

An emphasis throughout on safety—so you do the job right without getting hurt.

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.

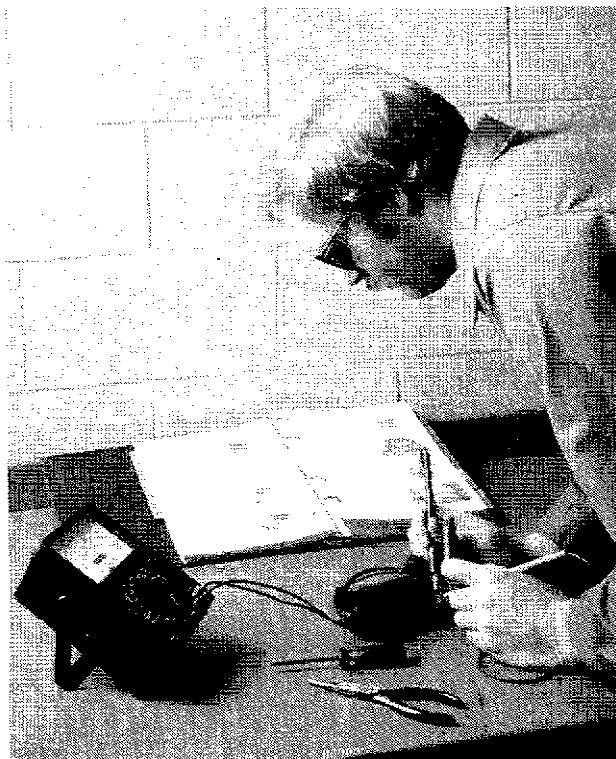

AB6:RW5560 053:INTRO3 071085



Thank you very much
for your reading.
Please click here
to get more information.