

410 Backhoe Loader



TECHNICAL MANUAL

410
Backhoe Loader

TM1037 (01DEC82) English



TM1037 (01DEC82)

LITHO IN U.S.A.
ENGLISH



JD410 LOADER BACKHOE

Technical Manual TM-1037 (Dec-82)

CONTENTS

Section 10 - GENERAL

- Group 5 - Specifications
- Group 10 - Predelivery, Delivery, and After-Sales Services
- Group 15 - Tune-up
- Group 20 - Lubrication
- Group 25 - Separation

Section 20 - ENGINE

- Group 5 - Diagnosis
- Group 10 - Basic Engine
- Group 15 - Lubrication System
- Group 20 - Governor and Speed Control Linkage
- Group 25 - Cooling System
- Group 30 - Specifications and Special Tools

Section 30 - FUEL SYSTEM

- Group 5 - Diagnosis
- Group 10 - Fuel Tank, Transfer Pump, and Filters
- Group 15 - Air Intake System
- Group 20 - Carburetor
- Group 25 - Fuel Injection Pump

Section 40 - ELECTRICAL SYSTEM

- Group 5 - Wiring Diagrams
- Group 10 - Charging System
- Group 15 - Starting Motor
- Group 20 - Ignition System
- Group 25 - Gauges and Switches

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and IEMC standards.

Section 50 - POWER TRAIN

- Group 5 - Diagnosis
- Group 10 - Clutch Assembly
- Group 15 - Transmission
- Group 20 - Reverser
- Group 25 - Differential and Parking Brake
- Group 30 - Final Drive
- Group 35 - Wheels

Section 60 - STEERING AND BRAKES

- Group 5 - Hydraulic Brakes
- Group 10 - Power Steering

Section 70 - HYDRAULIC SYSTEM

- Group 5 - General Information, Testing and Diagnosis
- Group 6 - System Testing (Analyzer)
- Group 10 - Hydraulic Pump
- Group 15 - Hydraulic Components
- Group 20 - Loader Control Valve
- Group 25 - Backhoe Control Valve (9410 and 9500)
- Group 30 - Hydraulic Cylinders
- Group 35 - 9500 Backhoe Swing Cylinder
- Group 40 - Extendible Dipperstick Control Valve and Linkage

Section 80 - MISCELLANEOUS COMPONENTS


- Group 5 - Front Axle and Front Support
- Group 10 - Loader Frame, Boom, and Bucket
- Group 15 - Backhoe Frame, Boom, and Bucket
- Group 20 - Extendible Dipperstick
- Group 25 - Operator's Station

INDEX

Copyright © 1982
DEERE & COMPANY
Moline, Illinois
All rights reserved

Previous Editions
Copyright © 1971 DEERE & Company
Copyright © 1973 DEERE & Company
Copyright © 1974 DEERE & Company
Copyright © 1977 DEERE & Company
Copyright © 1979 DEERE & Company

INTRODUCTION

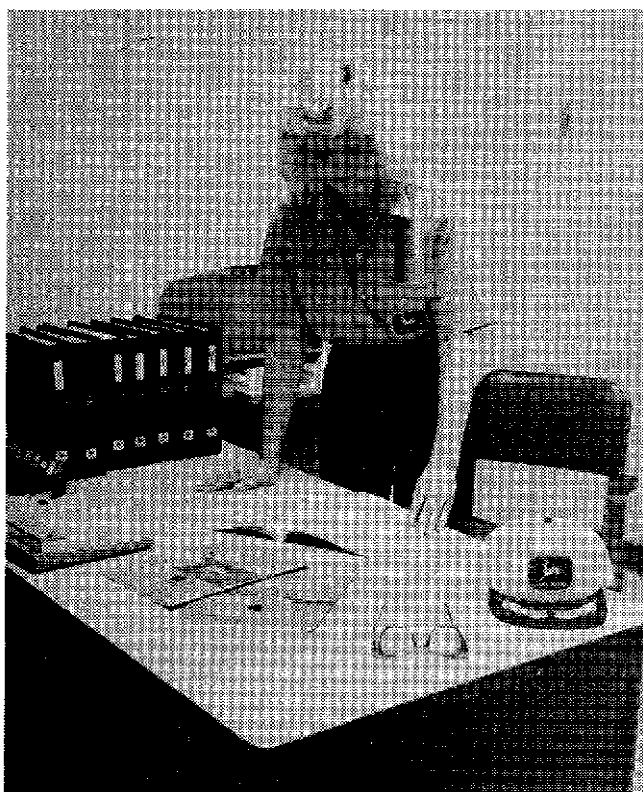

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

• FOS Manuals — for reference


Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.



When a service technician should refer to a FOS manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

• Technical Manuals — for actual service

Technical Manuals are *concise service guides* for a *specific machine*. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

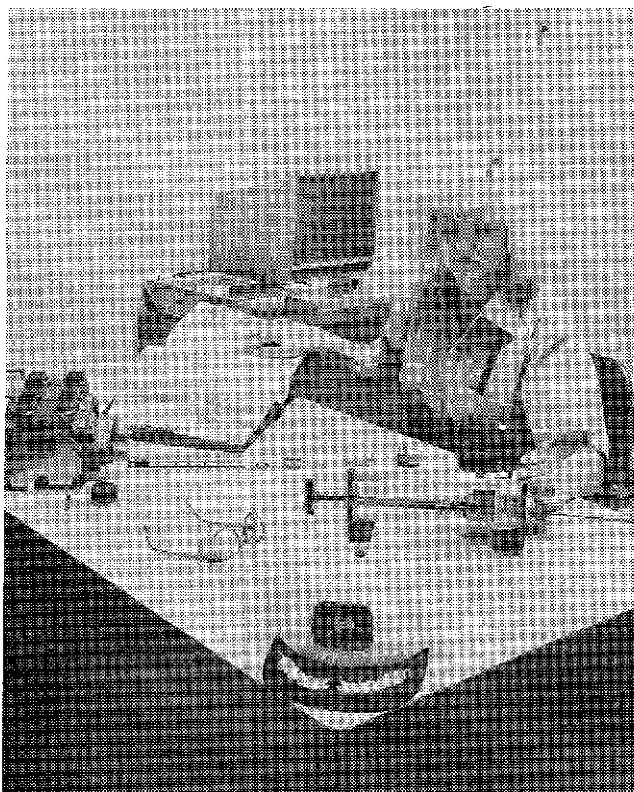

Use Technical Manuals for Actual Service


This technical manual was planned and written for you — an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.


Some features of this manual:

- Inside front cover - "Table of Contents" and "Maintenance Without Accident".
- Section 10 - General specifications and services.
- Sections 20 through 60 - Removal, repair, testing (components removed), installation, and adjustment.
- Section 70 - Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications and Special Tools grouped and illustrated at the end of each section.


MAINTENANCE WITHOUT ACCIDENT WORK SAFELY

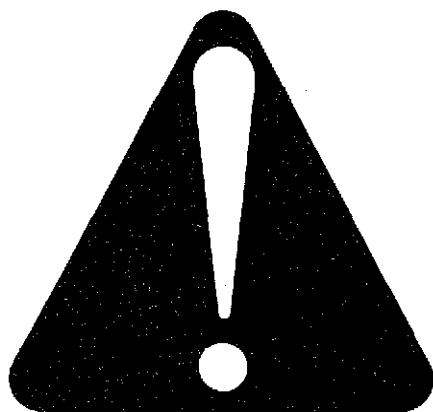

T27995H

 This safety alert symbol identifies important safety messages in this manual and on the backhoe loader. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

EVERY EMPLOYER HAS A SAFETY PROGRAM. KNOW WHAT IT IS!

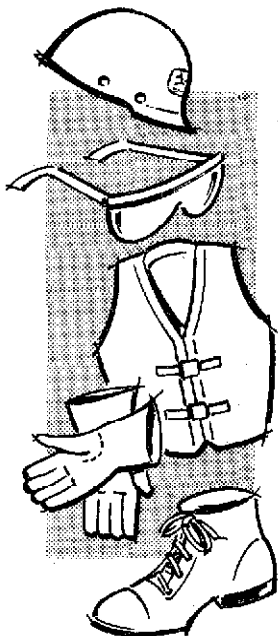

T27501H

See your shop supervisor for specific instructions on a job, and the safety equipment required.


For instance, you may need: Hard hat, safety shoes, safety goggles, heavy gloves, reflector vests, ear protectors, respirators.



T27502

BE ALERT!

Plan ahead—work safely—know how to use a first-aid kit and a fire extinguisher—and where to get aid and assistance.

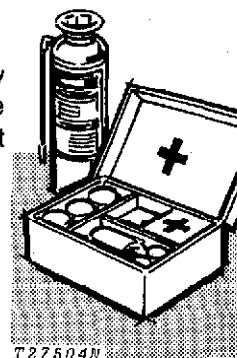

T27504H

Maintenance Area

Make sure the maintenance area has enough ventilation.

Keep the maintenance area **CLEAN AND DRY**. Oily and wet floors are slippery. Greasy rags are a hazard. Wet spots are dangerous when working with electrical equipment.

Keep starting aids in a cool, well-ventilated place, out of reach of unauthorized personnel.



Thank you very much
for your reading.
Please click here
to get more information.