

4650 and 4850 Tractors Repair



JOHN DEERE

TECHNICAL MANUAL 4650 and 4850 Tractors Repair

TM1354 (01SEP87) English



John Deere Tractor Works
TM1354 (01SEP87)

LITHO IN U.S.A.
ENGLISH



4650 AND 4850 TRACTORS TECHNICAL MANUAL TM-1354 (SEP-87)

CONTENTS—REPAIR SECTIONS

PUBLICATION NUMBER CHANGE

This technical manual was formerly TM-1258. The number was changed to TM-1354 when engine information was removed. Some pages still carry the old publication number. For engine information, refer to engine component technical manual CTM-1, 6466 Engines. This machine technical manual covers removal and installation of the engine components. The component manual covers basic repair of engine. For main hydraulic pump repair information, refer to component technical manual, CTM-7, Radial Piston Pumps.

SECTION 10—GENERAL

- Group 00—Specifications
- Group 05—Predelivery, Delivery and After-Sale Services
- Group 10—Tune-up
- Group 15—Lubrication

SECTION 15—SEPARATION

- Group 05—Front Axle
- Group 10—Front-End
- Group 15—Front-End and Engine
- Group 20—Engine
- Group 25—SOUND-GARD® body and Roll-Gard Protective Structure
- Group 30—Power Shift Clutch Housing
- Group 31—QUAD-RANGE™ Clutch Housing
- Group 35—Transmission
- Group 40—Final Drives

SECTION 20—ENGINE

- Group 05—Acquire Access to Cylinder Head, Valves and Camshaft
- Group 10—Acquire Access to Cylinder Block, Liners, Pistons and Rods
- Group 15—Acquire Access to Crankshaft, Main Bearings and Flywheel
- Group 20—Acquire Access to Lubrication System
- Group 25—Remove/Install Cooling System

SECTION 30—FUEL AND AIR SYSTEM

- Group 05—Acquire Access to Air Intake System
- Group 10—Acquire Access to Diesel Fuel System
- Group 15—Speed Control Linkage

SECTION 40—ELECTRICAL

- Group 05—Harness Replacement
- Group 06—Connector Repair
- Group 10—Remove/Install Delco-Remy Charging Circuit
- Group 11—John Deere Charging Circuit
- Group 15—Starting Circuit Replacement
- Group 25—Lighting Circuit Repair
- Group 30—INVESTIGATOR II™ Warning System And Digital Tachometer Repair
- Group 31—Gauge Cluster Instrumentation Repair
- Group 32—Analog Tachometer Repair
- Group 35—Accessories Circuits Repair

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1987
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION
Previous Edition Copyright© 1982, 1983, 1984, 1985
DEERE & COMPANY

U10;010GEN AX4 151087

CONTENTS—CONTINUED

SECTION 50—POWER TRAIN—QUAD-RANGE TRANSMISSION

- Group 05—Remove/Install Clutch Pressure Valve Housing
- Group 10—Clutch Oil Pressure Regulating Valve Housing
- Group 15—Clutch Operating Piston Housing
- Group 20—PERMA CLUTCH™
- Group 30—QUAD-RANGE™ Planetary
- Group 35—QUAD-RANGE Transmission & Charge Pump
- Group 40—Shift Lever Assembly
- Group 55—PTO Gear Train
- Group 60—Adjust PTO Clutch Rod
- Group 65—Differential
- Group 70—Remove/Install Differential Lock Valve and Adjust Lock Valve Release Bar
- Group 75—Differential Lock Valve
- Group 80—Final Drive

SECTION 55—POWER TRAIN—POWER SHIFT TRANSMISSION

- Group 05—Remove/Install Traction Clutch Valve Housing
- Group 10—Traction Clutch Valve Housing
- Group 15—Remove/Install Transmission Control Valve Housing
- Group 20—Transmission Control Valves
- Group 25—Remove/Install Traction Clutch
- Group 30—Traction Clutch and Drive Shafts
- Group 35—Input Planetary
- Group 40—Reduction Gear Train
- Group 45—Output Planetary
- Group 50—Speed Selector Assembly
- Group 55—Charge Pump Assembly
- Group 60—PTO Gear Train with MFWD
- Group 61—PTO Gear Train without MFWD
- Group 65—Adjust PTO Clutch Rod
- Group 70—Differential
- Group 75—Remove/Install Differential Lock Valve and Adjust Lock Valve Release Bar
- Group 80—Differential Lock Valve
- Group 85—Final Drive
- Group 95—MFWD Gear Train

- Group 100—MFWD Clutch
- Group 105—MFWD Axle and Final Drive

SECTION 60—STEERING/BRAKES

- Group 05—Remove/Install Power Steering Components
- Group 10—Steering Column
- Group 15—Metering Pump
- Group 20—Steering Valve
- Group 25—Steering Motor
- Group 30—Steering Assist Cylinders (MFWD)
- Group 35—Remove/Install Brake Valve and Brake Accumulator
- Group 40—Brake Valve
- Group 45—Brake Accumulator
- Group 50—Bleeding Brakes and Testing Brake Accumulator
- Group 55—Brake Pistons, Plates and Disks

SECTION 70—HYDRAULICS

- Group 05—Remove/Install Main Hydraulic Pump
- Group 15—Oil Filter Relief Valve Housing (QRT)
- Group 20—Return Oil Filter Relief Valve Housing (PST)
- Group 25—Remove/Install Attenuator
- Group 30—Hydraulic Attenuator
- Group 35—Remove/Install HYDRACUSHIONED™ Seat Valve
- Group 40—Repair Hydra-Cushioned Seat Valve Assembly
- Group 45—Pressure Control Valve
- Group 50—Remove/Install Rockshaft Components and Lift Assist Cylinders
- Group 55—Rockshaft Components
- Group 60—Lift Assist Cylinders
- Group 65—Draft Sensing Cylinders
- Group 70—Hitch Components
- Group 75—Remove/Install SCV Coupler and Levers
- Group 80—SCV and ISO Coupler
- Group 85—Remote Cylinder
- Group 90—Hydraulic Oil Cooler and Thermal Bypass Valve
- Group 95—Transmission-Hydraulic System Clean-up Procedure

Continued on next page

U10:0106EN BX4 201087

CONTENTS—CONTINUED

SECTION 80—MISCELLANEOUS

Group 05—Rear Wheels

Group 10—Front Axle

SECTION 90—OPERATOR STATION

Group 05—Air Conditioning System

Group 06—Air Conditioning System Service

Group 10—Heating System

Group 15—Seat

Group 20—Miscellaneous Components

SECTION 95—MISCELLANEOUS OPTIONS

Group 40—Auxiliary Lighting and Electrical Components

Group 62—Auxiliary Trailer Brake

Group 63—Secondary Brake

Group 80—Minor Options

SECTION 99—SPECIAL TOOLS



Thank you very much
for your reading.
Please click here
to get more information.