

John Deere 482 Cotton Stripper



TECHNICAL MANUAL

John Deere 482 Cotton Stripper

TM1097 (01SEP75) English



TM1097 (01SEP75)

LITHO IN U.S.A. ENGLISH



482 COTTON STRIPPER

Technical Manual TM-1097 (Sep-75)

CONTENTS

SECTION 10 - GENERAL

GROUP 5 - Specifications

GROUP 10 - Predelivery, Delivery and After Sale Service

GROUP 15 - Tune-Up and Adjustment

GROUP 20 - Lubrication

SECTION 20 - ENGINE

GROUP 5 - General Information, Diagnosis, and

Removal

GROUP 10 - NB329 Engine GROUP 15 - NA219 Engine

GROUP 20 - Specifications, Torque Values and

Special Tools

SECTION 30 - FUEL SYSTEMS

GROUP 5 - Diagnosing Malfunctions

GROUP 10 - Diesel Fuel System

GROUP 15 - Gasoline and LP-Gas Fuel Sys-

tems

GROUP 20 - Specifications, Torque Values and

Special Tools

SECTION 40 - ELECTRICAL SYSTEM

GROUP 5 - General Information and Wiring

Diagrams

GROUP 10 - Charging Circuit

GROUP 15 - Starting Circuit

GROUP 20 - Ignition Circuit

GROUP 25 - Specifications, Torque Values and

Special Tools

SECTION 50 - POWER TRAIN

GROUP 5 - Clutch and Main Drive Shaft

GROUP 10 - Transmission

GROUP 15 - Differential

GROUP 20 - Final Drives

GROUP 25 - Auxiliary Gear Housing

GROUP 30 - Hydrostatic Drive

GROUP 35 - Specifications, Torque Values and

Special Tools

(All information, illustrations, and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.)

SECTION 60 - STEERING AND BRAKES

GROUP 5 - Steering

GROUP 10 - Brakes

GROUP 15 - Specifications and Torque Values

SECTION 70 - HYDRAULIC SYSTEM

GROUP 5 - General Information, Diagnosis, and

Tests

GROUP 10 - Hydraulic Pump

GROUP 15 - Hydraulic Valve

GROUP 20 - Hydraulic Cylinders

GROUP 25 - Steering

GROUP 30 - Automatic Height Control

GROUP 35 - Specifications, Torque Values and

Special Tools

SECTION 80 - STRIPPING UNITS, AIR SYSTEM

AND DUAL GUIDE WHEELS

GROUP 5 - Stripping Units

GROUP 10 - Air System

GROUP 15 - Dual Guide Wheels

GROUP 20 - Specifications, Torque Values and

Special Tools

SECTION 90 - OPERATOR'S CAB

GROUP 5 - Pressurizer System

GROUP 10 - Air Conditioning System

GROUP 15 - Heating System

GROUP 20 - Specifications, Torque Values and

Special Tools


SECTION 100 - ALPHABETICAL INDEX

FOR YOUR CONVENIENCE

Vertical lines appear in the margins of many of the pages. These lines identify new material and revised information that affects specifications, procedures, and other important instructions.

Copyright© 1975 DEERE & COMPANY Moline, Illinois All Rights Reserved

INTRODUCTION

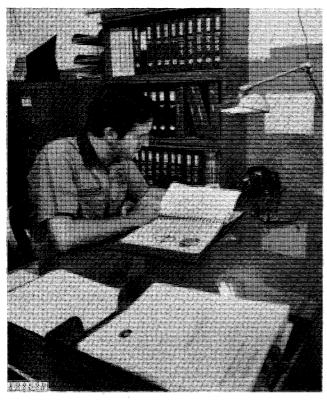

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

- FOS Manuals-for reference
- Technical Manuals—for actual service

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of trouble shooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new people and for reference by experienced technicians.

Technical Manuals are concise service guides for a specific machine. Technical Manuals are on-the-job guides containing only the vital information needed by an experienced technician.



Whenever the service technician may need to refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.



Use Technical Manuals for Actual Service

Some features of this technical manual:

- Table of contents at front of manual
- Exploded views showing parts of relationship
- Photos showing service techniques
- Specifications grouped for easy reference

This technical manual was planned and written for you—an experienced technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.

This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.


SAFETY AND YOU



T27999N

INTRODUCTION

This safety alert symbol identifies important safety messages in this manual and on the machine. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

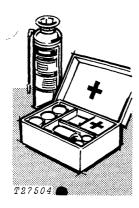

Be prepared if an accident or fire should occur. Learn where the first aid kit and the fire extinguishers are located—know how to use them.

BLOCKING THE COTTON STRIPPER

CAUTION: Whenever any components of the basket lift or engine are to be disconnected or removed for service or replacement, it is very important that the basket be securely blocked so it will not fall and cause serious personal injury or damage to the stripper.

Always service the cotton stripper on level ground and block the wheels to prevent it from moving while it is being serviced.



Thank you very much for your reading.

Please click here to get more information.