

5210, 5310, 5410, and 5510 Tractors



D C G

TECHNICAL MANUAL 5210, 5310, 5410, and 5510 Tractors TM1716 26APR04 (ENGLISH)

For complete service information also see:

Component Technical Manual 3029 2.9L Engine	CTM125
Component Technical Manual 4045 4.5L Engine	CTM104
Component Technical Manual 4045 Mechanical Fuel Systems	CTM007
Alternators and Starting M	



John Deere Augusta Works
LITHO IN U.S.A.



T M 1 7 1 6
2 6 A P R 0 4

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-29SEP98-1/1

Contents

SECTION 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Locations
- Group 30—Features and Accessories

SECTION 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

SECTION 30—Fuel and Air Repair

- Group 05—Fuel System
- Group 10—Air Intake System
- Group 15—Speed Control Linkage

SECTION 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 10—Electrical System Components
- Group 15—Wiring Harness

SECTION 50—Power Train Repair

- Group 05—Clutch Housing
- Group 10—Clutch Assembly—
CollarShift/SyncShuttle™ Transmissions
- Group 11—Clutch Assembly—PowrReverser™
Transmission
- Group 12—PowrReverser™
- Group 15—CollarShift/SyncShuttle™ Transmission
- Group 16—PowrReverser™ Transmission
- Group 20—Rear PTO Drive Shaft
- Group 25—Differential
- Group 30—Final Drives
- Group 35—Mechanical Front Wheel Drive
- Group 40—Creeper Assembly

SECTION 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Brake Repair

SECTION 70—Hydraulic Repair

- Group 05—Hydraulic Pump and Filter
- Group 06—Hydraulic Oil Cooler
- Group 10—Rockshaft
- Group 15—Dual Selective Control Valve

- Group 16—Single (Third) Selective Control Valve
- Group 20—Hydraulic Mid Mount Coupler
- Group 25—Hydraulic Power Beyond

SECTION 80—Miscellaneous Repair

- Group 05—Front Axle—2WD
- Group 10—Wheels
- Group 15—3-Point Hitch

SECTION 90—Operator Station Repair

- Group 05—Seat and Support
- Group 06—Control Console and Panel—Tractors
Without Cab
- Group 10—ROLL-GARD
- Group 15—Cab Components
- Group 20—Air Conditioning System
- Group 25—Heating System

SECTION 210—Operational Checkout Procedures

- Group 10—Operational Checkout Procedures

SECTION 220—Engine Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests, and Adjustments

SECTION 230—Fuel/Air Operation, Tests, and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

SECTION 240—Electrical System Operation, Tests & Adjust

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Test and Adjust
- Group 20—Wiring Schematics

SECTION 250—Power Train Operation, Tests, and Adjustments

- Group 05—Component Location—Collar Shift and

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2004
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright © 2000

10	SyncShuttle™ Transmissions
	Group 06—Component Location—PowrReverser™ Transmission
	Group 10—Theory of Operation—Collar Shift and SyncShuttle™ Transmissions
20	Group 11—Theory of Operation—PowrReverser™ Transmission
	Group 15—Diagnosis, Tests, and Adjustments— CS/SS Transmissions
	Group 16—Diagnosis, Tests, and Adjustments— PowrReverser™

**SECTION 260—Steering and Brake Operation,
Tests, and Adjustments**

	Group 05—Component Location
	Group 10—Theory of Operation
40	Group 15—Diagnosis, Tests and Adjustments

**SECTION 270—Hydraulic System Operation, Tests,
and Adjustments**

	Group 05—Component Location
	Group 10—Theory of Operation
	Group 15—Diagnosis
50	Group 16—Hydraulic Tests—Without SCV
	Group 17—Hydraulic Tests—With SCV
	Group 18—Hydraulic Tests—All
	Group 19—Adjustments
60	Group 20—Hydraulic Schematics

SECTION 290—Operator Station

	Group 05—Component Location
	Group 10—Theory of Operation
70	Group 15—Diagnosis, Tests, and Adjustments

SECTION 299—Dealer Fabricated Tools

	Group 00—Dealer Fabricated Tools
--	----------------------------------

80

90

210

220

230

240

250

260

270

290

299

INDX



Thank you very much
for your reading.
Please click here
to get more information.