

5220, 5320, 5420, and 5520 Tractor Repair

TECHNICAL MANUAL 5220, 5320, 5420, and 5520 Tractor Repair

TM2048 15MAR02 (ENGLISH)

For complete service information also see:

5220, 5320, 5420, and 5520 Tractor Operation and Test	TM2049
Component Technical Manual 4045 Engine	CTM104
Component Technical Manual 4045 Mechanical Fuel System	CTM007
Component Technical Manual Engine	
Alternators and Starting Motors...	

PDF



DOWNLOAD




Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMFC -19-23SEP98-1/1

Contents

SECTION 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Locations
- Group 30—Features and Accessories

SECTION 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

SECTION 30—Fuel and Air Repair

- Group 05—Fuel System
- Group 10—Air Intake System
- Group 15—Speed Control Linkage

SECTION 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 10—Electrical System Components
- Group 15—Wiring Harness

SECTION 50—Power Train Repair

- Group 05—Clutch Housing
- Group 10—Clutch Assembly—
CollarShift/SyncShuttle™ Transmissions
- Group 11—Clutch Assembly—PowrReverser™
Transmission
- Group 12—PowrReverser™
- Group 15—CollarShift/SyncShuttle™ Transmission
- Group 16—PowrReverser™ Transmission
- Group 20—Rear PTO Drive Shaft
- Group 25—Differential
- Group 30—Final Drives
- Group 31—Hi-Crop Final Drives
- Group 35—Mechanical Front Wheel Drive
- Group 40—Creeper Assembly

SECTION 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Brake Repair

SECTION 70—Hydraulic Repair

- Group 05—Hydraulic Pump and Filter
- Group 06—Hydraulic Oil Cooler

- Group 10—Rockshaft
- Group 15—Selective Control Valve
- Group 20—Hydraulic Mid Mount Control Valve

SECTION 80—Miscellaneous Repair

- Group 05—Front Axle—2WD
- Group 10—Wheels
- Group 15—3-Point Hitch
- Group 20—Fenders

SECTION 90—Operator Station Repair

- Group 05—Seat and Support
- Group 06—Control Console and Panel
- Group 10—ROLL-GARD
- Group 15—Cab Components
- Group 16—Isolated Open Operator Station
Components
- Group 20—Air Conditioning System
- Group 25—Heating System

10

20

30

40

50

60

70

80

90

INDX

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2002
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

10
20
30
40
50
60
70
80
90
INDX

Section 10 General Information

Contents

	Page		Page
Group 05—Safety	10-05-1	Group 25—Serial Number Locations	
Group 10—General Specifications		Serial Numbers	10-25-1
Machine Specifications 5220 and 5320	10-10-1	Product Identification Number Location	10-25-1
Machine Specifications 5420 and 5520	10-10-6	Engine Serial Number Location	10-25-1
Collar Shift and SyncShuttle™		Fuel Injection Pump Serial Number Location	10-25-1
Transmission Ground Speed Estimates	10-10-11	Alternator Serial Number Location	10-25-2
Collar Shift and SyncShuttle™ Creeper		Power Steering Valve Serial Number	
Transmissions Ground Speed Estimates	10-10-12	Location	10-25-2
PowrReverser™ Transmission Ground Speed		Starter Serial Number Location	10-25-2
Estimates	10-10-13	Transmission Serial Number Location	10-25-2
PowrReverser Creeper Transmissions		Front Axle (2WD) Serial Number Location	10-25-3
Ground Speed Estimates	10-10-14	Mechanical Front Wheel Drive (MFWD) Serial	
Correction Factors for Other Tire Sizes	10-10-15	Number Location	10-25-3
Machine Dimensions (Straddle Mount)	10-10-16	Air Conditioning Compressor Serial Number	
Machine Dimensions (5520 Series Hi-Crop		Location	10-25-3
Straddle Mount)	10-10-18	Group 30—Features and Accessories	
Machine Dimensions (Isolated Open Operator		Features and Accessories	10-30-1
Station)	10-10-19	Standard Features—Straddle Mount and	
Machine Dimensions (Cab)	10-10-21	Isolated Open Operator Station Tractors	10-30-2
Repair Specifications	10-10-23	Standard Features—Cab Tractor	10-30-4
Service Recommendations for O-Ring		Standard Features—5520 Hi-Crop Straddle	
Boss Fittings	10-10-35	Mount Tractors	10-30-5
Service Recommendations for Flat Face		Standard Features—5220 through 5520	10-30-6
O-Ring Seal Fittings	10-10-37	Factory Installed Optional Equipment	
Metric Cap Screw Torque Values—Grade		(5220—5520)	10-30-7
7	10-10-38	Field Installed Optional Kits and	
Metric Bolt and Cap Screw Torque Values	10-10-39	Accessories—5220 through 5520	10-30-8
Unified Inch Bolt and Cap Screw Torque			
Values	10-10-40		
Abbreviations	10-10-41		
Group 20—Fuel and Lubricants			
Diesel Fuel Specifications	10-20-1		
Storing Fuel	10-20-1		
Do Not Use Galvanized Containers	10-20-2		
Fill Fuel Tank	10-20-3		
Diesel Engine Oil	10-20-4		
Diesel Engine Coolant	10-20-5		
Liquid Coolant Conditioner	10-20-6		
Transmission and Hydraulic Oil	10-20-7		
MFWD Gear Oil	10-20-8		
Grease (Specific Application)	10-20-8		
Grease	10-20-9		
Alternative and Synthetic Lubricants	10-20-10		
Lubricant Storage	10-20-10		



Thank you very much
for your reading.
Please click here
to get more information.