


# 640D Skidder 648D Grapple Skidder Repair

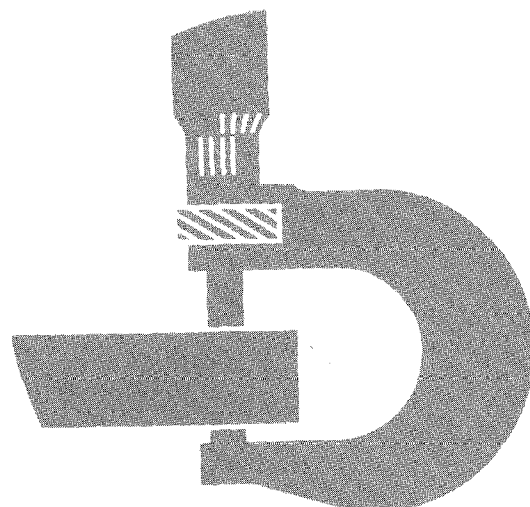

For complete service information also see:

640D Skidder, 648D Grapple	
Operation and Test .....	TM1440
6414 Engine .....	CTM4
Radial Piston Pumps .....	CTM7
Engine Assessories .....	CTM11

**TM1440 (11SEP90)**

LITHO IN U.S.A.



 
## JOHN DEERE DEALERS

**IMPORTANT: Please remove this page and route through your service department.**

This is a complete revision for TM-1440, 640D Skidder and 648D Grappler Skidder.

This manual was revised to:

1. Add front and rear differential serial number break information.
2. Add axle shaft-to-bearing cup grease dam wear specification information.
3. Add information concerning old and new style clutch pack disks.
4. Add additional information on clutch pressure plate and disk.
5. Add information on hydraulic pump.
6. Add 4000 series winch story with adjustments.
7. Add or update miscellaneous information throughout manual.



# Contents

## SECTION I—GENERAL INFORMATION

- Group I —Safety Information
- Group II —General Specifications
- Group III —Torque Values
- Group IV —Fuels and Lubricants
- Group V —Inspection Procedure

## SECTION 01—WHEELS

- Group 0110—Powered Wheels and Fastenings

## SECTION 02—AXLES AND SUSPENSION SYSTEM

- Group 0200—Removal and Installation
- Group 0210—Differential Or Bevel Drive
- Group 0225—Input Drive Shafts And U-Joints
- Group 0250—Axle Shaft, Bearings, And Reduction Gears
- Group 0260—Hydraulic System

## SECTION 03—TRANSMISSION

- Group 0300—Removal and Installation
- Group 0315—Controls Linkage
- Group 0350—Gears, Shafts, Bearings And Power Shift Clutch
- Group 0360—Hydraulic System

## SECTION 04—ENGINE

- Group 0400—Removal and Installation

## SECTION 05—ENGINE AUXILIARY SYSTEMS

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling Systems
- Group 0515—Speed Controls
- Group 0520—Intake System
- Group 0530—External Exhaust System
- Group 0560—External Fuel Supply System

## SECTION 07—CLUTCH

- Group 0715—Controls Linkage
- Group 0752—Elements

## SECTION 09—STEERING SYSTEM

- Group 0930—Secondary Steering

- Group 0960—Hydraulic System

## SECTION 10—SERVICE BRAKES

- Group 1011—Active Elements
- Group 1060—Hydraulic System

## SECTION 11—PARK BRAKE

- Group 1111—Active Elements
- Group 1115—Controls Linkage
- Group 1160—Hydraulic System

## SECTION 16—ELECTRICAL SYSTEM

- Group 1671—Batteries, Supports and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1673—Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1676—Instruments and Indicators

## SECTION 17—FRAME, CHASSIS OR SUPPORT STRUCTURE

- Group 1740—Frame Installation
- Group 1746—Frame Bottom Guards

## SECTION 18—OPERATOR'S STATION

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat and Seat Belt
- Group 1830—Heating and Air Conditioning

## SECTION 19—SHEET METAL AND STYLING

- Group 1910—Hood or Engine Enclosure
- Group 1921—Grille and Grille Housing

## SECTION 20—SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2004—Horn and Warning Devices

## SECTION 21—MAIN HYDRAULIC SYSTEM

- Group 2160—Hydraulic System

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1440-19-11SEP90

COPYRIGHT® 1990  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright® 1988 Deere & Company



Thank you very much  
for your reading.  
Please click here  
to get more information.