


646B Compactor



TECHNICAL MANUAL

PDF

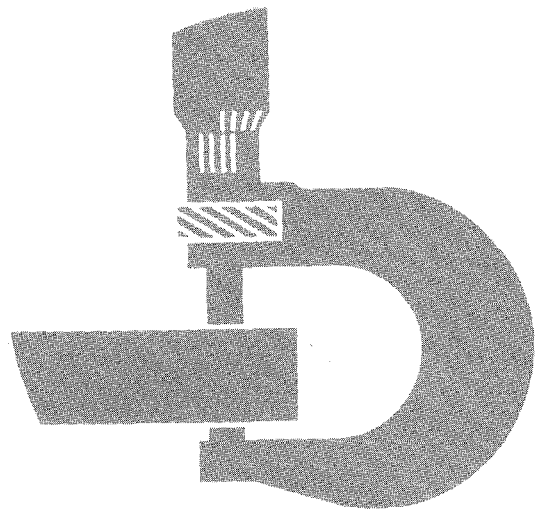

DOWNLOAD



John Deere Dubuque Works

TM-1116

LITHO IN U.S.A.

JD646-B COMPACTOR

Technical Manual
TM-1116 (Nov-74)

SECTIONAL CONTENTS OF THIS MANUAL

Section I - General Information _____	[REDACTED]
Section 1 - Wheels _____	[REDACTED]
Section 2 - Axles and Suspension System _____	[REDACTED]
Section 3 - Transmission _____	[REDACTED]
Section 4 - Engine _____	[REDACTED]
Section 5 - Engine Auxiliary System _____	[REDACTED]
Section 6 - Torque Converter _____	[REDACTED]
Section 9 - Steering System _____	[REDACTED]
Section 10 - Service Brakes _____	[REDACTED]
Section 11 - Parking-Emergency Brakes _____	[REDACTED]
Section 16 - Electrical System _____	[REDACTED]
Section 17 - Frame, Chassis, or Supporting Structure _____	[REDACTED]
Section 18 - Operator's Station _____	[REDACTED]
Section 19 - Sheet Metal _____	[REDACTED]
Section 31 - Loader _____	[REDACTED]
Section 90 - System Testing _____	[REDACTED]
Section II - Index _____	[REDACTED]

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and IEMC standards.

Copyright 1974
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

SECTION 1 - WHEELS

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts
- Group 0341 - Housings and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Transmission Hydraulics
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINES

- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshafts and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block (Liners)
- Group 0407 - Engine Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Engine Cooling Systems
- Group 0520 - Intake System
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION 6 - TORQUE CONVERTER

- Group 0641 - Converter Housing and Cover
- Group 0651 - Converter Turbine, Gears, Shafts Etc.
- Group 0699 - Specifications and Special Tools

SECTION 9 - STEERING SYSTEMS

- Group 0960 - Power Steering
- Group 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- Group 1011 - Service Brake Active Elements
- Group 1060 - Brake Hydraulics
- Group 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Parking Brake Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Vehicle Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1741 - Engine Frame
- Group 1742 - Equipment Frame
- Group 1746 - Bottom Guards
- Group 1749 - Chassis Weights
- Group 1799 - Specifications and Special Tools

SECTION 18 - OPERATOR'S STATION

- Group 1806 - Safety Equipment
- Group 1808 - Comfort and Convenience Items
- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1823 - Instruments and Indicators
- Group 1824 - External Engine Speed Controls
- Group 1830 - Heater
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing

SECTION 31 - LOADER

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Loader Frames
- Group 3160 - Loader Hydraulics
- Group 3199 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System
- Group 9030 - Miscellaneous Components
- Group 9035 - Specifications and Special Tools

II INDEX



Thank you very much
for your reading.
Please click here
to get more information.