

*TECHNICAL MANUAL*

# 650 and 750 Tractors



# 650 AND 750 TRACTORS TECHNICAL MANUAL

## CONTENTS—REPAIR SECTIONS

### SECTION 10—GENERAL

- Group 00—Specifications and Special Tools
- Group 05—Predelivery, Delivery and After-Sale Services
- Group 10—Tune-Up
- Group 15—Lubrication
- Group 20—650 Separation
- Group 25—750 Separation

### SECTION 20—ENGINE REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Valve Train, Cylinder Head and Camshaft
- Group 10—Pistons, Rods, and Cylinder Blocks
- Group 15—Flywheel, Crankshaft, and Main Bearings
- Group 20—Lubrication System
- Group 25—Cooling System

### SECTION 30—FUEL AND REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Air Intake System
- Group 10—Diesel Fuel System
- Group 15—Speed Control Linkage

### SECTION 40—ELECTRICAL REPAIR

- Group 00—Specifications and Special Tools
- Group 05—General Information
- Group 10—Charging System
- Group 15—Starting Motor
- Group 20—Instruments and Accessory Circuits
- Group 25—Lighting Circuits

### SECTION 50—650 POWER TRAIN REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Engine Clutch and Linkage

- Group 10—Sliding Gear Transmission
- Group 15—Rear PTO
- Group 20—Differential
- Group 25—Final Drive
- Group 30—Mechanical Front-Wheel Drive
- Group 35—Front PTO

### SECTION 55—750 POWER TRAIN REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Engine Clutch and Linkage
- Group 10—Sliding Gear Transmission
- Group 15—Rear PTO
- Group 20—Differential
- Group 25—Final Drive
- Group 30—Mechanical Front-Wheel Drive
- Group 35 Front PTO

### SECTION 60—STEERING/BRAKES REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Steering Gear Repair
- Group 10—Power Steering Repair (Field Option)
- Group 15—Brakes Repair

### SECTION 70—HYDRAULIC REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Hydraulic Pump Repair
- Group 10—Rockshaft and Implement Hitches
- Group 15—Selective Control Valve Repair

### SECTION 80—MISCELLANEOUS REPAIR

- Group 00—Specifications and Special Tools
- Group 05—Front Axle Assembly
- Group 10—Wheels
- Group 15—Operators Station Repair

*All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

## CONTENTS—OPERATION AND TEST SECTIONS

### SECTION 220—ENGINE OPERATION AND TESTS

- Group 00—Specifications and Special Tools
- Group 05—System Operation
- Group 10—System Tests and Diagnosis

### SECTION 230—FUEL/AIR OPERATION AND TESTS

- Group 00—Specifications and Special Tools
- Group 05—Air Intake System
- Group 10—Diesel Fuel System
- Group 15—Speed Control Linkage

### SECTION 240 ELECTRICAL OPERATION

- Group 00—Specifications and Special Tools
- Group 05—General Information and Diagrams
- Group 10—Charging System
- Group 15—Starting Circuit
- Group 20—Instruments and Accessory Circuits
- Group 25—Lighting Circuits

### SECTION 250—650 POWER TRAIN OPERATION AND TESTS

- Group 00—Specifications and Special Tools
- Group 05—Clutch and Transmission Operation
- Group 10—Diagnosing the Clutch, Transmission and Front-Wheel Drive
- Group 15—Differential and Final Drive
- Group 20—Mechanical Front-Wheel Drive Operation

### SECTION 255—750 POWER TRAIN OPERATION AND TESTS

- Group 00—Specifications and Special Tools
- Group 05—Clutch and Transmission Operation
- Group 10—Diagnosing the Transmission, and Front-Wheel Drive
- Group 15—Differential and Final Drive
- Group 20—Mechanical Front-Wheel Drive Operation

### SECTION 260—STEERING/BRAKES OPERATION AND TEST

- Group 00—Specifications and Special Tools
- Group 05—Manual Steering
- Group 10—Power Steering
- Group 15—Brakes

### SECTION 270—HYDRAULIC OPERATION AND TESTS

- Group 00—Specifications and Special Tools
- Group 05—Hydraulic System Operation
- Group 10—Hydraulic System Tests and Diagnosis
- Group 15—Hydraulic Pump
- Group 20—Rockshaft and Implement
- Group 30—Selective Control Valve



This tractor is of metric design. All hardware is therefore metric. Make sure you use the specified metric hardware when replacement becomes necessary. For your convenience most specifications are given in metric measurement with customary U.S. measurement following.

*All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

# Section 10 GENERAL

## CONTENTS

### GROUP 00 - SPECIFICATIONS AND SPECIAL TOOLS

General Tractor Specifications .....	10-00-1
Predelivery .....	10-00-3
Tune-Up .....	10-00-4
Lubrication .....	10-00-4
Separation .....	10-00-5
Special Tools .....	10-00-5

### GROUP 05 - PREDELIVERY, DELIVERY AND AFTER-SALE SERVICES

Predelivery Service-General Information .....	10-05-1
Lubricate Grease Fittings .....	10-05-2
Align Muffler .....	10-05-3
Adjust All Lamps .....	10-05-4
Torque Wheel Hardware .....	10-05-4
Check Tire Pressures .....	10-05-5
Adjust Wheel Spacing-Front Tread .....	10-05-5
Adjust Wheel Spacing-Rear Tread .....	10-05-5
Adjust Front Wheel Toe-In .....	10-05-6
Adjust 650 Tractor Toe-In .....	10-05-6
Adjust 750 Tractor Toe-In .....	10-05-6
Engine Break-In .....	10-05-6
Verify Predelivery Service .....	10-05-7
Delivery Service .....	10-05-12
After-Sale Inspection .....	10-05-13

### GROUP 10 - TUNE-UP

Preliminary Engine Tests .....	10-10-1
Remove and Inspect Air Cleaner Element .....	10-10-1
Clean Filter Element .....	10-10-2
Tighten Air Intake Connections .....	10-10-3
Clean Crankcase Breather System .....	10-10-3
Clean Radiator Screen .....	10-10-3
Test Cooling System .....	10-10-3
Flush Cooling System .....	10-10-4
Check and Adjust Fan Belt Tension .....	10-10-4
Clean Fuel Filter .....	10-10-5
Clean and Adjust Injection Pump Timing .....	10-10-5
Check and Adjust Fast Idle Speed .....	10-10-9

Clean and Test Battery .....	10-10-10
Make Final Engine Test .....	10-10-11
Check Toe-In .....	10-10-11
Miscellaneous .....	10-10-12

### GROUP 15 - LUBRICATION

Lubricate Tractor Properly .....	10-15-1
Use Correct Engine Oil .....	10-15-1
Use Correct Transmission-Hydraulic Oil .....	10-15-2
Use Correct Grease .....	10-15-2
Use Approved Alternative Lubricants .....	10-15-3
Store Lubricants Correctly .....	10-15-3
Lubrication Services (Chart) .....	10-15-4
Check Engine Oil Level .....	10-15-5
Change Engine Oil and Oil Filter .....	10-15-5
Clean Crankcase Vent System .....	10-15-5
Check Transmission-Hydraulic Oil Level .....	10-15-6
Change Transmission-Hydraulic System Oil .....	10-15-6
Service Transmission-Hydraulic Filter Screen .....	10-15-7
Replace Transmission-Hydraulic Oil Filter .....	10-15-7
Check Front Axle Oil Level (MFWD Tractors Only) .....	10-15-8
Change Front Axle Oil (MFWD Tractors Only) .....	10-15-8
Repack Front Wheel Bearings (650 Without MFWD) .....	10-15-9
Repack Front Wheel Bearings (750 Without MFWD) .....	10-15-10
Lubricate Steering Linkage .....	10-15-10
Lubricate Front Axle Pivot (Tractors Without MFWD) .....	10-15-11
Lubricate Steering Spindles (Tractors Without MFWD) .....	10-15-11
Lubricate Steering Spindles (650 With MFWD) .....	10-15-11
Lubricate Clutch and Brake Pedal Pivots .....	10-15-11
Lubricate 3-Point Hitch .....	10-15-12
Lubricate Front PTO Shaft Bearing .....	10-15-12

Continued

D1000N A 080181

**CONTENTS—Continued**

**GROUP 20 - SEPARATION**

Remove Front End .....	10-20-1
Install Front End .....	10-20-4
Remove Engine .....	10-20-5
Install Engine .....	10-20-7
Remove Front End From Clutch Housing .....	10-20-8
Install Front End To Clutch Housing .....	10-20-11
Remove Clutch Housing From Transmission .....	10-20-12
Install Clutch Housing To Transmission .....	10-20-14
Mount Transmission Stand .....	10-20-15
Remove Axle .....	10-20-16
Install Axle .....	10-20-19

**GROUP 25 - 750 SEPARATION**

Remove Front End .....	10-25-1
Install Front End .....	10-25-3
Remove Front End From Clutch Housing .....	10-25-4
Install Front End To Clutch Housing .....	10-25-7
Remove Engine .....	10-25-8
Install Engine .....	10-25-11
Remove Clutch Housing From Transmission .....	10-25-12
Install Clutch Housing To Transmission .....	10-25-14
Remove Transmission From Differential .....	10-25-15
Install Transmission To Differential .....	10-25-17
Mount Transmission Stand .....	10-25-18
Remove Axle .....	10-25-21
Install Axle .....	10-25-23



Thank you very much  
for your reading.  
Please click here  
to get more information.