

655, 755, 855, 955, 756 and 856 Compact Utility Tractors

TECHNICAL MANUAL



John Deere
Lawn & Grounds Care Division
TM1360 (June 1996)

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

LIVE WITH SAFETY: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

PThis is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

NOTE: The 756 and 856 tractors are identical to the 755 and 855 tractors; therefore, all information pertaining to the 755 also pertains to the 756 and the same is true for the 855 and the 856 tractors. The 655, 756 and 856 tractors were all discontinued before the late model 755 and 855 tractors and the new 955 tractors were produced. Therefore, any late model references do not include the 655, 756, and 856 tractors.

Contents

SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—Repair Specifications
- Group 15—Repair Information
- Group 20—Fuels, Lubricants, and Coolants
- Group 25—Serial Number Locations

SECTION 20—DIESEL ENGINE REPAIR

- Group 05—Yanmar Diesel Engine Repair
- Group 10—Remove and Install Oil Cooler
- Group 15—Remove and Install Radiator
- Group 20—Remove and Install Diesel Engine

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Fuel Transfer Pump
- Group 10—Fuel Tank
- Group 15—Fuel Tank Tube and Sender
- Group 20—Air Cleaner

SECTION 40—ALTERNATOR REPAIR

- Group 05—Alternator Repair Specifications
- Group 10—Alternator Installation

SECTION 50—POWER TRAIN REPAIR

- Group 05—Hydrostatic Transmission
- Group 10—Transaxle
- Group 15—Final Drives
- Group 20—Mechanical Front Wheel Drive (MFWD)
- Group 25—Power Train Gears and Shafts
- Group 30—Speed Control Linkage

SECTION 60—STEERING AND BRAKES REPAIR

- Group 05—Standard Front Axle
- Group 10—Steering Valve
- Group 15—Brake Linkage

SECTION 70—HYDRAULICS REPAIR

- Group 05—Hydraulic Pump
- Group 10—Flow Divider and Selective Control Valves (SCV's)
- Group 15—Rockshaft
- Group 20—Hydraulic Hoses

SECTION 80—MISCELLANEOUS REPAIR

- Group 15—Operator's Seat
- Group 20—European Roll-Gard®
- Group 25—German Rear Hitch
- Group 30—3-Point Hitch

SECTION 210—MACHINE OPERATIONAL CHECKOUT PROCEDURE

- Group 05—Machine Operational Checkout Procedure

SECTION 220—ENGINE/FUEL OPERATION AND TESTS

- Group 05—Engine Systems Operational Checkout Procedure
- Group 10—Engine System Diagnosis

SECTION 240—ELECTRICAL OPERATION AND TESTS

- Group 05—Electrical System Checkout
- Group 10—Electrical System Diagnosis
- Group 15—Theory of Operation

SECTION 250—POWER TRAIN OPERATION AND TESTS

- Group 05—Power Train System Checkout
- Group 10—Power Train Tests and Adjustments
- Group 15—Theory of Operation

SECTION 260—STEERING AND BRAKE OPERATION AND TESTS

- Group 05—Steering and Brakes System Checkout
- Group 10—Steering and Brakes Tests and Adjustments
- Group 15—Theory of Operation

SECTION 270—HYDRAULIC OPERATION AND TESTS

- Group 05—Hydraulic System Checkout
- Group 10—Hydraulic System Tests and Adjustments
- Group 15—Theory of Operation

INDEX

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM 1360-19-01Jun 96

COPYRIGHT©1996
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION Manual
Previous Editions
Copyright© 1991, 1990, 1986 Deere & Company

10

20

30

40

50

60

70

80

210

220

240

250

260

270

INDX

Section 10

General Information

Contents

	Page		Page
Group 05—Safety		Group 25—Serial Number Locations	
Safety Items	10-05-1	Product Serial Number	10-25-1
Group 10—Repair Specifications		Engine Serial Number	10-25-1
General Tractor Specifications	10-10-1	Transaxle Serial Number	10-25-1
Group 15—Repair Information		Mower Deck Serial Number	10-25-1
Metric Fastener Torque Values	10-15-1		
Inch Fastener Torque Values	10-15-2		
O-Ring Face Seal Fittings	10-15-3		
O-Ring Boss Fittings	10-15-4		
Group 20—Fuels, Lubricants, and Coolants			
Diesel Fuel—North America	10-20-1		
Diesel Fuel Lubricity—North America	10-20-1		
Diesel Fuel Storage—North America	10-20-1		
Diesel Fuel—Europe	10-20-2		
Diesel Fuel Lubricity—Europe	10-20-2		
Diesel Fuel Storage—Europe	10-20-2		
Engine Oil—North America	10-20-3		
Engine Oil—Europe	10-20-4		
Break-in Engine Oil—North America	10-20-5		
Break-in Engine Oil—Europe	10-20-6		
Hydrostatic Transmission and Hydraulic Oil— North America	10-20-7		
Hydrostatic Transmission and Hydraulic Oil— Europe	10-20-8		
Gear Case Oil (MFWD)—North America	10-20-9		
Gear Case Oil (MFWD)—Europe	10-20-10		
Grease—North America	10-20-11		
Grease—Europe	10-20-12		
North America			
Alternative Lubricants	10-20-13		
Synthetic Lubricants	10-20-13		
Lubricant Storage	10-20-13		
Mixing of Lubricants	10-20-13		
Oil Filters	10-20-13		
Europe			
Alternative Lubricants	10-20-14		
Synthetic Lubricants	10-20-14		
Lubricant Storage	10-20-14		
Mixing of Lubricants	10-20-14		
Oil Filters	10-20-14		
Diesel Engine Coolant—North America	10-20-15		
Diesel Engine Coolant—Europe	10-20-16		



Thank you very much
for your reading.
Please click here
to get more information.