

# 6600 Side Hill 6600 and 7700 Combines



 
## TECHNICAL MANUAL 6600 Side Hill 6600 and 7700 Combines

TM1021 (01JAN84) English



**John Deere Harvester Works**  
**TM1021 (01JAN84)**

LITHO IN U.S.A.  
ENGLISH





# 6600, SIDEHILL 6600, AND 7700 COMBINES

TECHNICAL MANUAL  
TM-1021 (Jan-84)

## CONTENTS

- |   |   |
|---|---|
| <p><b>SECTION 10 - GENERAL</b><br/>           Group 5 - General Specifications<br/>           Group 10 - Predelivery, Delivery Service, and After-Sale Inspection<br/>           Group 15 - Lubrication<br/>           Group 20 - Diagnosing and Testing Procedures<br/>           Group 25 - Tune-Up and Adjustment</p> <p><b>SECTION 20 - ENGINES</b><br/>           Group 5 - General Information, Diagnosis and Removal<br/>           Group 10 - Cylinder Head, Valves and Camshaft<br/>           Group 15 - Cylinder Block, Liners, Pistons and Rods<br/>           Group 20 - Crankshaft, Main Bearings and Flywheel<br/>           Group 25 - Lubrication System<br/>           Group 30 - Cooling System<br/>           Group 35 - Governor and Speed Control Linkage<br/>           Group 40 - Specifications and Special Tools</p> <p><b>SECTION 30 - FUEL SYSTEM</b><br/>           Group 5 - Air Intake System, Fuel Tank and Electric Fuel Pump<br/>           Group 10 - Diesel Fuel System<br/>           Group 15 - Gasoline Fuel System<br/>           Group 20 - Specifications and Special Tools</p> <p><b>SECTION 40 - ELECTRICAL SYSTEM</b><br/>           Group 5 - General Information, Wiring Diagrams and Electrical System Diagnosis<br/>           Group 10 - Motorola Charging Circuit<br/>           Group 15 - Delcotron Charging Circuit<br/>           Group 20 - Delco-Remy Starting Circuit<br/>           Group 25 - John Deere Starting Circuit<br/>           Group 30 - Ignition Circuit<br/>           Group 35 - Lights, Instruments and Accessory Circuits<br/>           Group 40 - Low Shaft Speed Monitor System<br/>           Group 45 - Harness Replacement<br/>           Group 50 - Specifications and Special Tools</p> | <p><b>SECTION 50 - POWER TRAIN</b><br/>           Group 5 - Clutch<br/>           Group 10 - Transmission<br/>           Group 15 - Differential<br/>           Group 20 - Final Drive<br/>           Group 25 - Hydrostatic Drive<br/>           Group 30 - Power Rear Wheel Drive<br/>           Group 35 - Posi-Torq Ground Drive<br/>           Group 40 - Tires and Wheels<br/>           Group 45 - Crawler Tracks<br/>           Group 50 - Specifications and Special Tools</p> <p><b>SECTION 60 - POWER STEERING AND BRAKES</b><br/>           Group 5 - Power Steering<br/>           Group 10 - Brakes<br/>           Group 15 - Specifications</p> <p><b>SECTION 70 - HYDRAULIC SYSTEM</b><br/>           Group 5 - Hydraulic System Operation<br/>           Group 10 - Hydraulic System Tests<br/>           Group 15 - Reservoir<br/>           Group 20 - Hydraulic Pumps<br/>           Group 25 - Hydraulic Valves<br/>           Group 30 - Hydraulic Cylinders<br/>           Group 35 - Hydraulic Motors<br/>           Group 40 - Hydraulic Oil Lines and Hoses<br/>           Group 45 - Specifications and Special Tools</p> <p><b>SECTION 80 - OPERATOR'S CAB</b><br/>           Group 5 - Pressurizer System<br/>           Group 10 - Air Conditioning System<br/>           Group 15 - Heating System<br/>           Group 20 - Personal Posture Seat<br/>           Group 25 - Miscellaneous Components<br/>           Group 30 - Specifications and Special Tools</p> |
|---|---|

## CONTENTS—Continued

### SECTION 90 - HEADERS

- Group 5 - 200 Series Cutting Platforms
- Group 10 - Quik-Tatch Cutting Platforms
- Group 15 - 40 Series Corn Heads
- Group 20 - Row-Crop Heads
- Group 25 - Specifications and Special Tools

### SECTION 100 - FEEDER HOUSE

- Group 5 - Feeder Conveyor Chain
- Group 10 - Feeder Conveyor Drum
- Group 15 - Feeder House Paddles and Stripper - SideHill 6600
- Group 20 - Variable Speed Feeder House Drives
- Group 25 - Feeder House Lower Shaft
- Group 30 - Feeder House Upper Shaft
- Group 35 - Specifications

### SECTION 110 - SEPARATOR

- Group 5 - Cylinder, Cylinder Cover, Concave and Beater
- Group 10 - Cylinder Drives
- Group 15 - Straw Walkers and Crankshafts
- Group 20 - Straw Chopper, Straw Spreader and Rear Hood
- Group 25 - Shoe Supply Augers, Cleaning Fan and Sieve Frame
- Group 30 - Tailings Elevator and Augers
- Group 35 - Clean Grain Elevator, Lower Auger and Grain Tank Loading Auger
- Group 40 - Separator Uprights
- Group 45 - Specifications and Special Tools

### SECTION 120 - GRAIN TANK AND UNLOADING AUGERS

- Group 5 - Grain Tank Auxiliary Unloading Augers and Drive
- Group 10 - Grain Tank Inner and Outer Unloading Augers
- Group 15 - Grain Tank
- Group 20 - Specifications

### SECTION 130 - MAJOR DRIVES

- Group 5 - Engine Powershaft
- Group 10 - Primary Countershaft
- Group 15 - Secondary Countershaft
- Group 20 - Separator Control Lever
- Group 25 - Specifications

### SECTION 140 - ELECTRO-HYDRAULIC SYSTEMS

- Group 5 - General Information, Diagnosis and Tests - SideHill 6600 Leveling System
- Group 10 - Electrical Components - SideHill 6600 Leveling System
- Group 15 - Hydraulic Components - SideHill 6600 Leveling System
- Group 20 - General Information, Diagnosis and Tests - Automatic Header Height Control
- Group 25 - Mechanical System - Automatic Header Height Control
- Group 30 - Electrical System - Automatic Header Height Control
- Group 35 - Hydraulic System - Automatic Header Height Control
- Group 40 - Unloading Auger Hydraulic Swing and Automatic Latching System
- Group 45 - Specifications and Special Tools

### SECTION 150 - MACHINE RECONDITIONING

- Group 5 - Cleaning and Painting
- Group 10 - Decal Installation
- Group 15 - Shielding
- Group 20 - Specifications

*All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

*The specifications given in this technical manual are intended for service only. They do not include normal factory manufacturing tolerances.*

Copyright© 1984 Deere & Company  
Moline, Illinois All rights reserved.

#### Previous Editions

Copyright© 1981 Deere & Company  
Copyright© 1979 Deere & Company  
Copyright© 1978 Deere & Company  
Copyright© 1977 Deere & Company  
Copyright© 1976 Deere & Company  
Copyright© 1975 Deere & Company  
Copyright© 1974 Deere & Company  
Copyright© 1973 Deere & Company


## SAFETY AND YOU


### AVOID FIRE HAZARDS



T279997

### INTRODUCTION

 This safety alert symbol identifies important safety messages in this manual and on the combine. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

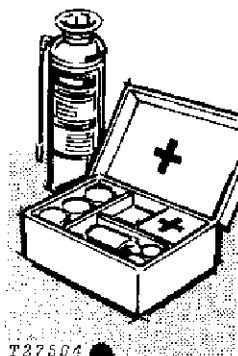

T27504

Be prepared if an accident or fire should occur. Know where the first aid kit and the fire extinguishers are located—know how to use them.

### SERVICE AREA


Keep the service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment.

Make sure the service area is adequately vented.

Periodically check the shop exhaust system for leakage. Engine exhaust gas is dangerous.

Be sure all electrical outlets and tools are properly grounded.

Use adequate light for the job at hand.

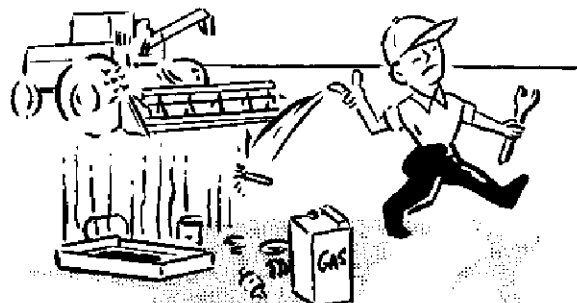

R24226R

WRONG

Don't smoke while refueling or handling highly flammable material.

Engine should be shut off when refueling.

Use care in refueling if the engine is hot.

Don't use open pans of gasoline or diesel fuel for cleaning parts. Good commercial, nonflammable solvents are preferred.

Provide adequate ventilation when charging batteries.

Don't check battery charge by placing metal objects across the posts.

Don't allow sparks or open flame near batteries.

Don't smoke near battery.

Never check fuel, battery electrolyte or coolant levels with an open flame.

Never use an open flame to look for leaks anywhere on the equipment.

Never use a open flame as a light anywhere on or around the equipment.

When preparing engine for storage, remember that inhibitor is volatile and therefore dangerous. Seal and tape openings after adding the inhibitor. Keep container tightly closed when not in use.



Thank you very much  
for your reading.  
Please click here  
to get more information.