


F435521

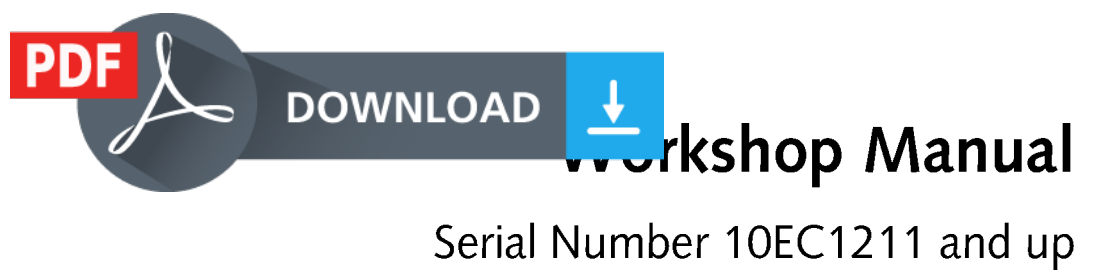

0. General Information

0010 How To Use This Book.	0010 - 1
1. Serial Numbers	0010 - 1
2. Component Numbers	0010 - 1
3. Page Layout	0010 - 2
4. Abbreviations	0010 - 4
0020 Chapters and Sections Contents	0020 - 2
0030 Foreword and Warranty	0030 - 1
1. Foreword	0030 - 1
2. Emissions Control Warranty Statement	0030 - 4
3. Customer Feedback	0030 - 6
4. Modifications or Repairs to Roll-over Protective Structures (ROPS)	0030 - 7
5. Non-approved Field Product Changes	0030 - 9
6. Sound Information	0030 - 10
7. Registered Trade Marks	0030 - 10
8. Warranty	0030 - 10
0040 Safety Information	0040 - 2
1. General	0040 - 2
2. Safety Symbol	0040 - 2
3. Understanding Signal Words	0040 - 2
4. Skidder Safety Features	0040 - 3
5. General Safety Precautions	0040 - 4
6. Operating Safety Precautions	0040 - 8
7. Servicing Safety Precautions	0040 - 16
8. Transporting on Public Roads	0040 - 27
9. Fire Prevention	0040 - 29
10. What to Do if the Machine Catches Fire	0040 - 30

11. 660D Skidder Safety Decals	0040 - 31
0060 General - Component Locators	0060 - 1
1. General	0060 - 1
2. Component Locators	0060 - 2
2.1 Engine Compartment Locator	0060 - 2
2.2 Hydraulic Component Locator	0060 - 4
2.3 Electrical Component Locator	0060 - 5
2.4 Power Train Component Locator	0060 - 6
2.5 Cab Component Locator	0060 - 7
2.6 Frames Component Locator	0060 - 8
2.7 Tree Handling Component Locator	0060 - 9
0070 Towing / Transporting the Skidder	0070 - 1
1. Towing Over a Short Distance	0070 - 1
2. Releasing the Brakes	0070 - 2
3. Towing Procedure	0070 - 4
4. Transporting the Skidder	0070 - 5
5. Driving the Skidder on the Road	0070 - 6
0080 Repairs	0080- 1
1. Troubleshooting Techniques	0080- 1
2. Welding	0080- 2
3. Hydraulics	0080- 3
4. Storage	0080- 4
4.1 Preparing Machine for Storage	0080- 4
4.2 Monthly Storage Procedure	0080- 6
5. Periodic Maintenance Checklist	0080- 7
0010 How To Use This Book	0010 - 1
1. Serial Numbers	0010 - 1
2. Component Numbers	0010 - 1
3. Page Layout	0010 - 2

4. Abbreviations	0010 - 4
0020 Chapters and Sections Contents	0020 - 1
0030 Foreword and Warranty	0030 - 1
1. Foreword	0030 - 1
2. Emissions Control Warranty Statement	0030 - 4
3. Customer Feedback	0030 - 6
4. Modifications or Repairs to Roll-over Protective Structures (ROPS)	0030 - 7
5. Non-approved Field Product Changes	0030 - 8
6. Sound Information	0030 - 9
7. Registered Trade Marks	0030 - 9
8. Warranty	0030 - 9
0040 Safety Information	0040 - 1
1. General	0040 - 1
2. Safety Symbol	0040 - 1
3. Understanding Signal Words	0040 - 1
4. Skidder Safety Features	0040 - 2
5. General Safety Precautions	0040 - 3
6. Operating Safety Precautions	0040 - 7
7. Servicing Safety Precautions	0040 - 15
8. Transporting on Public Roads	0040 - 26
9. Fire Prevention	0040 - 28
10. What to Do if the Machine Catches Fire	0040 - 29
11. Safety Signs	0040 - 31
11.1 848G Skidder Safety Decals	0040 - 31

0060 General - Component Locators	0060 - 1
1. General	0060 - 1
2. Component Locators	0060 - 2
2.1 Engine Compartment Locator	0060 - 2
2.2 Hydraulic Component Locator	0060 - 4
2.3 Electrical Component Locator	0060 - 5
2.4 Power Train Component Locator	0060 - 6
2.5 Cab Component Locator	0060 - 7
2.6 Frames Component Locator	0060 - 8
2.7 Tree Handling Component Locator	0060 - 9
0070 Towing / Transporting the Skidder	0070 - 1
1. Towing Over a Short Distance	0070 - 1
2. Releasing the Brakes	0070 - 2
3. Towing Procedure	0070 - 4
4. Transporting the Skidder	0070 - 5
5. Driving the Skidder on the Road	0070 - 6
0080 Repairs	0080- 1
1. Troubleshooting Techniques	0080- 1
2. Welding	0080- 2
3. Hydraulics	0080- 3
4. Storage	0080- 4
4.1 Preparing Machine for Storage	0080- 4
4.2 Monthly Storage Procedure	0080- 6
5. Periodic Maintenance Checklist	0080- 7



Thank you very much
for your reading.
Please click here
to get more information.