

# 670, 770, 790, 870, 970, 1070 Compact Utility Tractors

## TECHNICAL MANUAL



**John Deere**  
**Worldwide Commercial and**  
**Consumer Equipment Division**

**TM1470 (15MAR99)**  
**Replaces TM1470 (15MAR94)**

# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

**N** This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

## FOS MANUALS—REFERENCE

### TECHNICAL MANUALS—MACHINE SERVICE

### COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

# Contents

## **SECTION 10—GENERAL INFORMATION**

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Repair Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Locations

## **SECTION 20—ENGINE REPAIR**

- Group 05—670/770
- Group 06—870/970/1070
- Group 07—790
- Group 10—Cooling System
- Group 15—Throttle and Governor Control Linkage
- Group 20—Fuel System

## **SECTION 40—ELECTRICAL SYSTEM**

- Group 05—Alternator
- Group 10—Starter
- Group 15—Sender, Switches and Gauges

## **SECTION 50—POWER TRAIN REPAIR—670/770/790**

- Group 05—Clutch Housing
- Group 06—Single Stage Clutch
- Group 07—Dual Stage Clutch
- Group 10—Transmission
- Group 15—Rear PTO Drive Shaft
- Group 20—Differential
- Group 25—Final Drive
- Group 30—Mechanical Front Wheel Drive
- Group 35—Throttle and Governor Control Linkage

## **Section 55—POWER TRAIN REPAIR —870/970/1070**

- Group 05—Clutch Housing
- Group 06—Dual Stage Clutch
- Group 10—Transmission
- Group 15—Rear PTO Drive Shaft
- Group 20—Differential
- Group 25—Final Drive
- Group 30—Mechanical Front Wheel Drive—870
- Group 35—Mechanical Front Wheel Drive  
—970/1070
- Group 40—Mid Mount PTO

## **SECTION 60—STEERING AND BRAKE REPAIR**

- Group 05—Manual Steering
- Group 10—Power Steering
- Group 15—Brake Repair—670/770/790
- Group 20—Brake Repair—870/970/1070

## **SECTION 70—HYDRAULIC REPAIR**

- Group 05—Hydraulic Pump and Filter
- Group 10—Rockshaft—670/770/790
- Group 11—Rockshaft—870/970/1070
- Group 15—Selective Control Valve
- Group 20—Rear Auxiliary Hydraulic Lines

## **SECTION 80—MISCELLANEOUS REPAIR**

- Group 05—Wheels
- Group 10—Front Axle
- Group 15—Hood
- Group 20—3-Point Hitch
- Group 25—Seat and Support
- Group 30—Roll-Gard
- Group 35—Mower Spindles
- Group 40—Mower Gearbox

## **SECTION 210—OPERATIONAL CHECKOUT PROCEDURE AND SPECIFICATIONS**

- Group 05—Test and Adjustment Specifications
- Group 10—Operational Checkout Procedures

## **SECTION 220—ENGINE OPERATION, TESTS, AND ADJUSTMENTS**

- Group 05—Component Locations
- Group 10—Theory of Operation
- Group 15—Engine System Diagnosis

## **SECTION 240—ELECTRICAL SYSTEM OPERATION AND TESTS**

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis and Test
- Group 20—Schematic

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1470-19-15JAN99

COPYRIGHT©1999  
DEERE & COMPANY  
Moline, Illinois

All rights reserved  
A John Deere ILLUSTRATION™ Manual

**SECTION 250—POWER TRAIN—670/770/790**

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis and Test

**SECTION 255—POWER TRAIN—870/970/1070**

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis and Test

**SECTION 260—STEERING AND BRAKES**

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis and Test

**SECTION 270—HYDRAULIC SYSTEM**

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis and Test
- Group 20—Schematic

240

250

255

260

270

INDX



Thank you very much  
for your reading.  
Please click here  
to get more information.