

Contents

SECTION 05—SAFETY

Group 05—Safety Measures

SECTION 10—GENERAL INFORMATION

Group 05—Specifications

Group 10—Tune-Up

Group 15—Predelivery Inspection

SECTION 20—ENGINE

Group 00—Engine Removal and Installation

SECTION 30—FUEL, AIR INTAKE AND COOLING SYSTEMS

Group 05—Speed Control Linkage

Group 10—Fuel System

Group 15—Air Intake System

Group 20—Cooling System

Group 25—Cold Weather Starting Aids

SECTION 40—ELECTRICAL SYSTEM

Group 05—Connectors

Group 10—Wiring Harnesses

Group 15—Charging Circuit

Group 20—Starting Motor Circuit

Group 25—Switches, Relays and Solenoids

Group 30—Monitoring System

Group 40—Auxiliary Lighting and Electrical Components

Group 45—Convenience and Accessory Components

SECTION 55—POWRQUAD TRANSMISSION

Group 00—Removal and Installation of Transmission Components

Group 05—Transmission Controls

Group 10—PowrQuad M

Group 15—Creeper Trans

Group 20—Range Transmissi

SECTION 56—DRIVE SYSTEMS

Group 00—Component Removal and Installation

Group 05—U-Jointed Shafts and Torsion Damper

Group 10—Front Wheel Drive Clutch

Group 15—Differential

Group 20—Final Drives

Group 25—Rear PTO

Group 30—Front PTO

Group 35—Hydraulic Pump Drive

Group 40—Front Implement Drive

SECTION 60—STEERING AND BRAKES

Group 05—Hydrostatic Steering

Group 10—Brake Valve

Group 15—Rear Wheel Brakes

Group 20—Handbrake

Group 25—Hydraulic Trailer Brake

Group 30—Air Brakes

SECTION 70—HYDRAULIC SYSTEM

Group 05—Controls

Group 10—Hydraulic Pump and Charge Pump

Group 15—Valves

Group 20—Three-Point Hitch

Group 25—Selective Control Valves and Couplers

SECTION 80—MISCELLANEOUS

Group 00—Component Removal and Installation

Group 05—Main Frame

Group 10—Front and Rear Wheels

Group 15—Trailer Hitch

Group 20—Pick-Up Hitch

Group 25—Swinging Drawbar

SECTION 90—OPERATOR'S CAB AND 4-POST ROPS

Group 00—Tilting or Removing/Installing Operator's Cab

Group 05—Controls and Instruments

Group 10—Electronic Hitch Control Components

Group 15—Air Conditioning System

Group 20—Lighting System

Group 25—Operator's Cab

Group 30—Radio Installation

PDF



DOWNLOAD



Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM4516-19-15MAR96

**SECTION 99—SPECIAL TOOLS
(Dealer-Fabricated)**

Group 05—Special Tools (Dealer-Fabricated)

Index

05

10

20

30

40

55

56

60

70

80

Section 05
SAFETY

05

Contents

Page

Group 05—Safety Measures

SAFETY INFORMATION

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.



LX,CRA05 002884-19-09APR92

“IMPORTANT” - INFORMATION

Information marked as IMPORTANT points out problems that may lead to machine damage. By following the directions given, these problems can be avoided.

LX,CRA05 002885-19-09APR92

“NOTE” - INFORMATION

When marked with NOTE the information given is more detailed or contains restrictions to directions given previously. On the other hand useful information may be given belonging to certain instructions without being directly connected to them.

LX,CRA05 002886-19-09APR92



Thank you very much
for your reading.
Please click here
to get more information.