



70 Skid-Steer Loader



TECHNICAL MANUAL

70
Skid-Steer Loader

TM1072 (01JAN74) English



John Deere
Lawn & Grounds Care Division
TM1072 (01JAN74)

LITHO IN U.S.A.
ENGLISH



70 SKID-STEER LOADER

Technical Manual
TM-1072 (Jan-74)

CONTENTS

- SECTION 10 - GENERAL
 - Group 5 - Specifications
 - Group 10 - Predelivery, Delivery, and After Sales Service
 - Group 15 - Tune Up and Adjustment
 - Group 20 - Lubrication
- SECTION 20 - ENGINE
 - Group 5 - Diagnosing Engine Malfunctions
 - Group 10 - Basic Engine
 - Group 15 - Repair, Assembly, and Adjustments of Engine
 - Group 20 - Specifications and Special Tools
- SECTION 30 - FUEL SYSTEM
 - Group 5 - Diagnosing Fuel System Malfunctions
 - Group 10 - Carburetor
 - Group 15 - Fuel Filter and Fuel Pump
 - Group 20 - Specifications and Special Tools
- SECTION 40 - ELECTRICAL SYSTEM
 - Group 5 - Diagnosing Electrical System
 - Group 10 - Battery and Wiring Diagrams
 - Group 15 - Charging System
 - Group 20 - Ignition System
 - Group 25 - Starting Motor
 - Group 30 - Specifications and Special Tools
- SECTION 50 - POWER TRAIN
 - Group 5 - Diagnosing Hydrostatic Drive System
 - Group 10 - Operation of Hydrostatic Pumps
 - Group 15 - Hydrostatic Pumps
 - Group 20 - Hydrostatic Motor
 - Group 25 - Axle Assemblies
 - Group 30 - Center Reduction Gear
 - Group 35 - Specifications and Special Tools
- SECTION 60 - STEERING AND BRAKES
 - Group 5 - Steering
 - Group 10 - Brakes
 - Group 15 - Specifications and Special Tools
- SECTION 70 - HYDRAULIC SYSTEM
 - Group 5 - Diagnosing Hydraulic System
 - Group 10 - Hydraulic Pump
 - Group 15 - Hydraulic Control Valve
 - Group 20 - Hydraulic Cylinders
 - Group 25 - Hydraulic Oil Filter
 - Group 30 - Specifications and Special Tools

FOR YOUR CONVENIENCE

Vertical lines appear in the margins of many of the pages. These lines identify new material and revised information that affects specifications, procedures, and other important instructions.

"All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice."


Litho in U.S.A.

Copyright© 1974
DEERE & COMPANY
Moline, Illinois
All rights reserved

INTRODUCTION



Use FOS Manuals for Reference

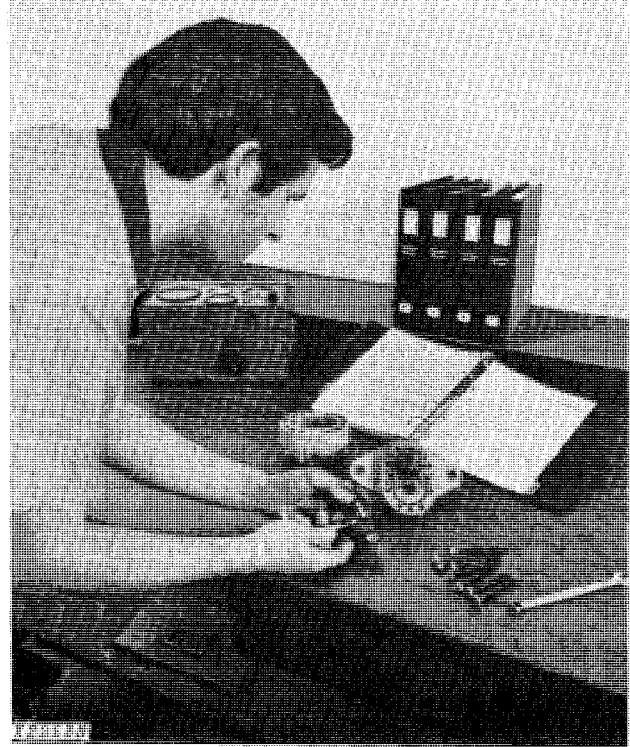

Use Technical Manuals for Actual Service

This technical manual is part of a twin concept of service:

- **FOS Manuals—for reference**
- **Technical Manuals—for actual service**

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new men and for reference by experienced men.

Technical Manuals are concise service guides for a specific machine. Technical Manuals are on-the-job guides containing only the vital information needed by a journeyman mechanic.



When a serviceman should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

Some features of this technical manual:

- *Table of contents at front of manual*
- *Exploded views showing parts relationship*
- *Photos showing service techniques*
- *Specifications grouped for easy reference*

This technical manual was planned and written for you—a journeyman mechanic. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.




This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.


SAFETY AND YOU



T27999N

INTRODUCTION


 This safety alert symbol identifies important safety messages in this manual and on the skid-steer loader. When you see this symbol, be alert to the possibility of bodily injury and carefully read the message that follows.

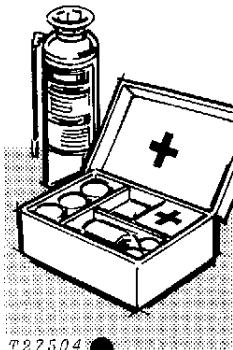

T27504

Be prepared if an accident or fire should occur. Know where the first aid kit and the fire extinguishers are located—know how to use them.

BOOM LOCKS CAUTION

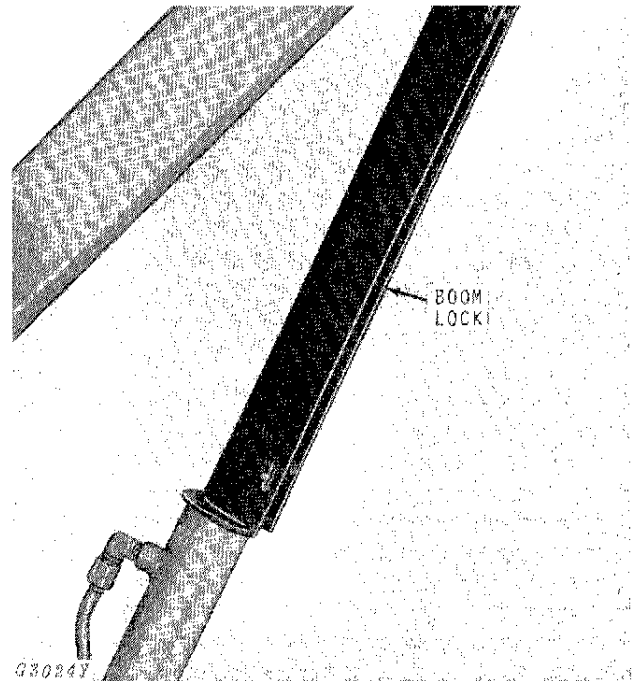

Install the boom locks on the lift cylinders as follows whenever work or repair is being done on the loader with the boom raised:

1. Start the engine and raise the boom to its greatest height. Shut off the engine.
2. Lay the boom locks on the cylinder rods and install the drilled pins and spring pins.
3. Install boom blocks on other cylinder rods in the same manner.
4. Lower the boom until it contacts the boom locks.

IMPORTANT: After servicing the loader, raise the boom and remove the boom locks.



Thank you very much
for your reading.
Please click here
to get more information.