



7440 and 7445 Cotton Strippers



JOHN DEERE

TECHNICAL MANUAL 7440 and 7445 Cotton Strippers

TM1282 (03AUG94) English

FOR COMPLETE SERVICE INFORMATION ALSO SEE:

6359 ENGINE..... CTM4
6059 ENGINE..... CTM8
RADIAL PISTON PUMP..... CTM7
STARTING MOTORS AND ALTERNATORS CTM77



John Deere Des Moines Works
TM1282 (03AUG94)

LITHO IN U.S.A.
ENGLISH



Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Contents

SECTION 10—GENERAL

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuels and Lubricants

SECTION 20—ENGINE REPAIR

- Group 05—Remove and Install Engine
- Group 10—Cooling System

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Diesel Fuel System

SECTION 40—ELECTRICAL REPAIR

- Group 05—MOTOROLA Charging Circuit Repair
- Group 06—NIPPONDENSO Charging Circuit Repair
- Group 07—BOSCH Charging Circuit Repair
- Group 10—Starting Circuit Repair
- Group 15—Monitor System Repair
- Group 20—Tachometer and Gauges
- Group 25—Lights and Accessory Circuit Repair
- Group 30—Connector Repair

SECTION 50—POWER TRAIN REPAIR

- Group 05—EATON Hydrostatic Drive
- Group 06—SUNSTRAND Hydrostatic Drive
- Group 10—Transmission
- Group 15—Differential
- Group 20—Final Drive

SECTION 60—STEERING AND BRAKES REPAIR

- Group 05—Remove and Install Steering Components
- Group 06—Steering Column Repair
- Group 07—Steering Metering Pump Repair
- Group 08—Steering Cylinder Repair
- Group 10—Brake Repair

SECTION 70—HYDRAULIC REPAIR

- Group 05—Hydraulic Pump
- Group 10—Main Control Valve—7440 Stripper
- Group 11—Main Control Valve—7445 Stripper
- Group 15A—Basket Lift Cylinder

- Group 15B—Rockshaft Lift Cylinders
- Group 15C—Height Control Cylinder
- Group 15D—Boll Box Cylinder
- Group 15G—Axle Stabilizer Cylinder
- Group 15H—Vane Compactor Cylinder
- Group 20—Hydraulic Motors
- Group 25—Height Control
- Group 30—Basket Interlock Valve—7445
- Group 35—Stabilizer Valve

SECTION 80—AXLES AND WHEEL REPAIR

- Group 05—Guide Wheel Axle—7440 and 7445 (S.N. —4000)
- Group 10—Guide Wheel Axle—7445 (S.N. 4001—)

SECTION 90—OPERATOR STATION REPAIR

- Group 05—DELCO R-12 Air Conditioning System
- Group 06—NIPPONDENSO R-12 Air Conditioning System
- Group 07—R-12 Air Conditioning System
- Group 08—NIPPONDENSO R-134 Air Conditioning System
- Group 10—Heating System
- Group 15—Seat Repair
- Group 20—Cab Repair

SECTION 100—STRIPPING UNITS REPAIR

- Group 05—Unit Removal and Installation
- Group 10—Unit Repair
- Group 15—Cross Augers and Slip Clutch
- Group 20—Input Shafts and Slip Clutches—7440 Stripper
- Group 21—Input Shafts and Slip Clutches—7445 Stripper

SECTION 110—AIR SYSTEM REPAIR

- Group 05—Air System

SECTION 120—CLEANER REPAIR

- Group 05—Cleaner Repair

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1282-19-03AUG94

COPYRIGHT® 1994
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright® 1992, 1986, 1985, 1983 Deere & Company

Contents

SECTION 210—OPERATIONAL CHECKOUT PROCEDURE

Group 05—Machine Operational Checkout

SECTION 220—ENGINE OPERATION AND TESTS

Group 05—Engine

SECTION 230—FUEL/AIR OPERATION AND TESTS

Group 05—Air Intake System

Group 10—Diesel Fuel System

SECTION 240—ELECTRICAL OPERATION AND TESTS

Group 05—System Information

Group 10—Electrical System Diagnosis

Group 10A—Starting Circuit

Group 10B—Charging Circuit (7440; 7445, P.I.N.
-12000)

Group 10C—Charging Circuit (7445, P.I.N.
12001-)

Group 10D—Gauge Cluster

Group 10E—Lighting Circuit

Group 10F—Accessory Circuit

Group 11—Monitor System Diagnosis

Group 15—Battery

Group 20—Charging Circuit

Group 25—Starting Circuit

Group 30—Tachometer

Group 35—Monitor System

Group 40—Lights, Instruments, and Accessory
Circuits

SECTION 250—POWER TRAIN OPERATION AND TESTS

Group 05—Eaton Hydrostatic Drive

Group 06—Sundstrand Hydrostatic Drive

Group 10—Transmission

Group 15—Final Drive

SECTION 260—STEERING/BRAKES OPERATION AND TESTS

Group 05—Steering

Group 10—Brakes

SECTION 270—HYDRAULIC SYSTEM OPERATION AND TEST

Group 05—Hydraulic System

Group 10—Hydraulic Pump

Group 15—7440 Main Control Valve

Group 16—7445 Main Control Valve

Group 20—Hydraulic Cylinders

Group 25—Hydraulic Motors

Group 30—Height Control

SECTION 290—OPERATORS STATION OPERATION AND TESTS

Group 05—Operator's Station Operational Checks

Group 10—Operator's Station Diagnostics

Group 15A—Air Conditioning Tests - R12

Group 15B—Air Conditioning Testing - R134a

Group 15C—Operator's Station Tests

Group 20—Operator's Station Adjustments

Group 25—Operator's Station Theory of
Operation

SECTION 300—STRIPPING UNIT OPERATION AND TESTS

Group 05—Stripping Unit System

SECTION 310—AIR SYSTEM OPERATION AND TESTS

Group 05—Air System

SECTION 320—CLEANER OPERATION AND TESTS

Group 05—Cleaner

SECTION 399—SPECIAL TOOLS

Group 05—Fabricated Tools

Index

Contents

110

120

210

220

230

240

250

260

270

290



Thank you very much
for your reading.
Please click here
to get more information.