




7450/7455 Cotton Stripper

For complete service information, also see:

- 6059 Engine
- 6068 Engine
- Starting Motors and Alternators
- Electronic Fuel Injection Systems CTM68



DOWNLOAD



John Deere Des Moines Works
TM1586 (22MAY97)

LITHO IN U.S.A.
ENGLISH

**7450/7455
Cotton Stripper**

TM1586 (22MAY97)



Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Contents

SECTION 10—GENERAL

- Group 05 —Safety
- Group 10 —General Specifications
- Group 15 —Fuels and Lubricants
- Group 20 —Welding Repair

SECTION 20—ENGINE REPAIR

- Group 05 —Remove and Install Engine (7450)
- Group 06 —Remove and Install Engine (7455)
- Group 10 —Cooling System

SECTION 30—FUEL AND AIR REPAIR

- Group 05 —Diesel Fuel System
- Group 10 —Control Linkage

SECTION 40—ELECTRICAL REPAIR

- Group 05 —Charging Circuit Repair
- Group 10 —Starting Circuit Repair
- Group 15 —Monitor and Gauges Repair
- Group 20 —ROW-TRAK™ Repair
- Group 25 —Accessory Circuit Repair
- Group 30 —Connector Repair

SECTION 50—POWER TRAIN REPAIR

- Group 05 —Hydrostatic Drive
 - Components—Remove and Install
- Group 06 —Hydrostatic Drive
 - Components—Repair
- Group 10 —Transmission
- Group 15 —Final Drive
- Group 20 —Control Linkage

SECTION 60—STEERING AND BRAKES REPAIR

- Group 05 —Remove and Install Steering
 - Components
- Group 06 —Steering Column Repair
- Group 07 —Steering Metering Pump Repair
- Group 08 —Steering Cylinder Repair
- Group 10 —Brake Repair

SECTION 70—HYDRAULIC REPAIR

- Group 05 —Hydraulic Pumps
- Group 10 —Solenoid Control Valves
- Group 15A —Basket Lift Cylinder

- Group 15B —Cross Auger Lift Cylinders
- Group 15C —Height Control Cylinder
- Group 15D —Axle Stabilizer Cylinder
- Group 15E —Steering Cylinder
- Group 15F —Vane Compactor Cylinder
- Group 20 —Compactor Hydraulic Motor
- Group 21 —Unit Drive Hydraulic Motor
- Group 25 —Height Control
- Group 30 —Basket Interlock Valve
- Group 35 —Stabilizer Valve

SECTION 80—GUIDE AXLE AND WHEEL HUB REPAIR

- Group 05 —Axle and Wheel Hub

SECTION 90—OPERATOR STATION REPAIR

- Group 05 —R-134A Air Conditioning System
- Group 10 —Heating System
- Group 15 —Seat Repair
- Group 20 —Cab Repair

SECTION 100—STRIPPING UNITS REPAIR

- Group 05 —Unit Removal and Installation
- Group 10 —Unit Repair
- Group 15 —Cross Augers and Slip Clutch
- Group 20 —Unit Input Shafts and Slip Clutches

SECTION 110—AIR SYSTEM REPAIR

- Group 05 —Air System

SECTION 120—CLEANER REPAIR

- Group 05 —Cleaner Repair

SECTION 210—OPERATIONAL CHECKOUT PROCEDURE

- Group 05 —Machine Operational Checkout

SECTION 220—ENGINE OPERATION AND TESTS

- Group 05 —System Operational Checks
- Group 10 —Diagnostic Information
- Group 15 —Engine System Operation and Tests
- Group 20 —Systems Adjustments
- Group 25 —Theory of Operation

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1586-19-22MAY97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

SECTION 230—FUEL/AIR OPERATION AND TESTS

- Group 05 —System Operational Checks
- Group 10 —Diagnostic Information
- Group 15 —System Tests
- Group 20 —System Adjustments
- Group 25 —Theory of Operation

SECTION 240—ELECTRICAL OPERATION AND TESTS—7450

- Group 05 —System Information
- Group 10 —System Diagnosis
- Group 15 —Sub-System Diagnostics
- Group 15A —Power Circuit
- Group 15B —Start Circuit
- Group 15C —Charging Circuit
- Group 15D —Lighting System Circuit
- Group 15E —Horn Circuit
- Group 15F —Windshield Wiper Circuit
- Group 15G —Dome and Console Light Circuit
- Group 15H —Lighter Circuit
- Group 15I —Radio Circuit
- Group 15J —Auxiliary Plug Circuit
- Group 15K —Blower and Air Conditioning Circuit
- Group 15L —Monitor System Circuit
- Group 15M —Gauges Circuit
- Group 15N —Tachometer Circuit
- Group 15O —Shaft Speed Monitor Circuit
- Group 15P —Fan & Cleaner Actuator Circuits
- Group 15Q —ROW-TRAK™ Circuits
- Group 15R —Electro-Hydraulic Controls Circuit
- Group 15S —Header Control Circuit
- Group 20 —Electrical System Tests
- Group 25 —Battery

SECTION 245—ELECTRICAL OPERATION AND TESTS—7455

- Group 05 —System Information
- Group 10 —System Diagnosis
- Group 15 —Sub-System Diagnostics
- Group 15A —Power Circuit
- Group 15B —Start Circuit
- Group 15C —Charging Circuit
- Group 15D —Lighting System Circuit
- Group 15E —Horn Circuit
- Group 15F —Windshield Wiper Circuit
- Group 15G —Dome and Console Light Circuit
- Group 15H —Lighter Circuit
- Group 15I —Radio Circuit
- Group 15J —Auxiliary Plug Circuit
- Group 15K —Blower and Air Conditioning Circuit
- Group 15L —Monitor System Circuit
- Group 15M —Gauges Circuit
- Group 15N —Tachometer Circuit

- Group 15O —Shaft Speed Monitor Circuit
- Group 15P —Fan & Cleaner Actuator Circuits
- Group 15Q —ROW-TRAK™ Circuits
- Group 15R —Electro-Hydraulic Controls Circuit
- Group 15S —Header Control Circuit
- Group 20 —Electrical System Tests
- Group 25 —Battery

SECTION 250—POWER TRAIN OPERATION AND TESTS

- Group 05 —System Operational Checks
- Group 10 —System Diagnostic Checks
- Group 15 —System Tests
- Group 20 —System Adjustments
- Group 25 —Theory of Operation

SECTION 260—STEERING/BRAKES OPERATION AND TESTS

- Group 05 —System Operational Checks
- Group 10 —System Diagnostics
- Group 15 —System Tests
- Group 20 —System Adjustment
- Group 25 —Theory of Operation

SECTION 270—HYDRAULIC SYSTEM OPERATION AND TEST

- Group 05 —Operational Checks
- Group 10 —Hydraulic System Diagnosis
- Group 10A —Hydraulic Pump Diagnostics
- Group 10B —Solenoid Control Valve Diagnostics
- Group 10C —Hydraulic Cylinder Diagnostics
- Group 10D —Height Sensing System Diagnostics
- Group 15 —Hydraulic System Tests
- Group 20 —Hydraulic System Adjustments
- Group 25A —Hydraulic System Theory of Operation
- Group 25B —Hydraulic Pump Operation
- Group 25C —Solenoid Control Valve Operation
- Group 25D —Hydraulic Cylinder Operation
- Group 25E —Hydraulic Motor Operation
- Group 25F —Height Control Operation

SECTION 290—OPERATORS STATION OPERATION AND TESTS

- Group 05 —Operator's Station Operational Checks
- Group 10 —Operator's Station Diagnostics
- Group 15A —Air Conditioning Tests
- Group 15B —Operator's Station Tests
- Group 20 —Operator's Station Adjustments
- Group 25 —Operator's Station Theory of Operation

Continued on next page



Thank you very much
for your reading.
Please click here
to get more information.